

IGNITION SWITCH

Parts Inspection

INSPECT SWITCHES

(Ignition Switch/Continuity)

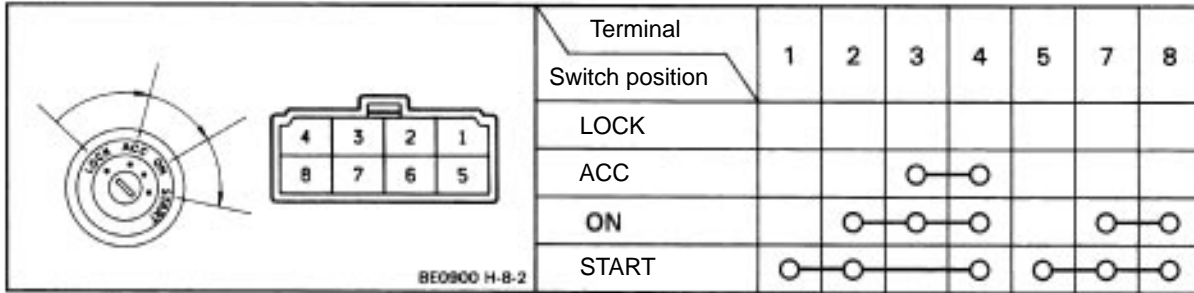


Diagram showing the ignition switch with terminal positions 1 through 8. The switch has positions for LOCK, ACC, ON, and START. The continuity table below shows the expected electrical connections for each position.

Terminal	1	2	3	4	5	7	8
Switch position							
LOCK							
ACC			○—○				
ON		○—○	○—○	○—○		○—○	○—○
START	○—○	○—○	○—○	○—○	○—○	○—○	○—○

BE0900 H-8-2

If continuity is not as specified, replace the switch.

(Key Unlock Warning Switch/Continuity)

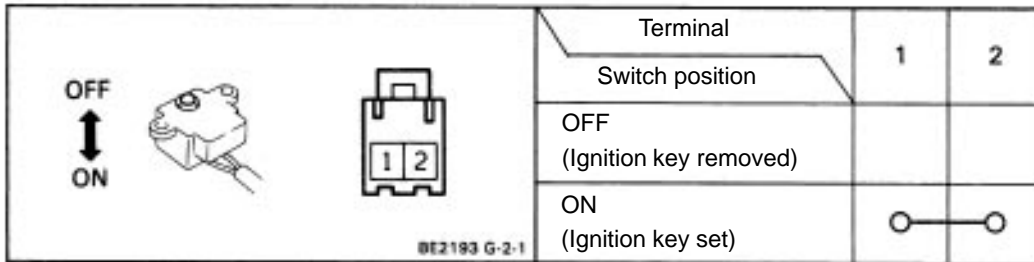


Diagram showing the key unlock warning switch with terminal positions 1 and 2. The switch has positions for OFF (Ignition key removed) and ON (Ignition key set). The continuity table below shows the expected electrical connections for each position.

Terminal	1	2
Switch position		
OFF (Ignition key removed)		
ON (Ignition key set)	○—○	

BE2193 G-2-1

If continuity is not as specified, replace the switch.