

POWER SOURCE

Parts Location

Junction Block No. 1




Fuses

1. STOP	15A
2. ENGINE	7.5A
3. IGN	10A
4. GAUGE	7.5A
5. RADIO	7.5A
6. WIPER	20A
7. TAIL	15A
8. TURN	10A
9. ECU-B	10A
10. CIG	15A
11. -	
12. SUN ROOF	30A
13. -	
14. ECU-IG	15A
15. -	

Relays and Circuit Breaker

- A. Clutch Start Relay (M/T)
- B. Defogger Relay
- C. Circuit Breaker 30A
(w/ Power Window, Power Door Lock)

Junction Block No. 2

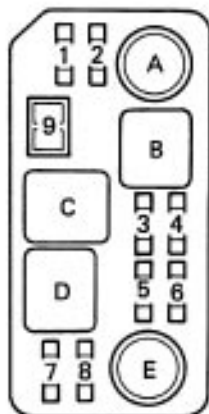

Fuses


1. HEAD (LH)	10A
2. HEAD (RH)	10A
3. EFI	30A
4. HAZ-HORN	15A
5. DOME	10A
6. RTR	30A (Coupe Model)
7. CHARGE	7.5A
8. FAN-I/UP	7.5A (w/ 4A-GE, 4A-FE Engine)
9. FAN	30A

Relays

- A. FAN No.1
- B. ENGINE MAIN
- C. EFI
- D. HEAD (Headlight Control Relay)
- E. HORN

Parts Location (Cont'd)


Junction Block No. 5 (w/ A/C Type: USA, Coupe: CANADA)

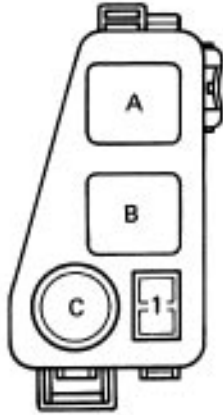

Fuse
1. CDS FAN 30A

Relays
A. A/C Magnet Clutch
B. A/C FAN No. 2
C. A/C FAN No. 3


Junction Block No. 5 (w/ A/C Type: CANADA, w/o Coupe)

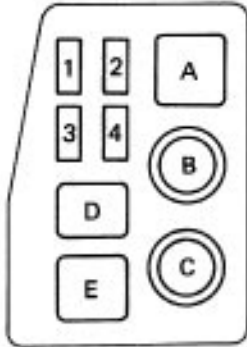

Fuses
1. HEAD (LH-LWR) 10A
2. HEAD (RH-LWR) 10A
3. HEAD (LH-UPR) 10A
4. HEAD (RH-UPR) 10A
D. CDS 30A

Relays
A. Dimmer Relay
B. A/C Magnet Clutch
C. A/C FAN No. 3
E. A/C FAN No. 2

Wiring Diagram

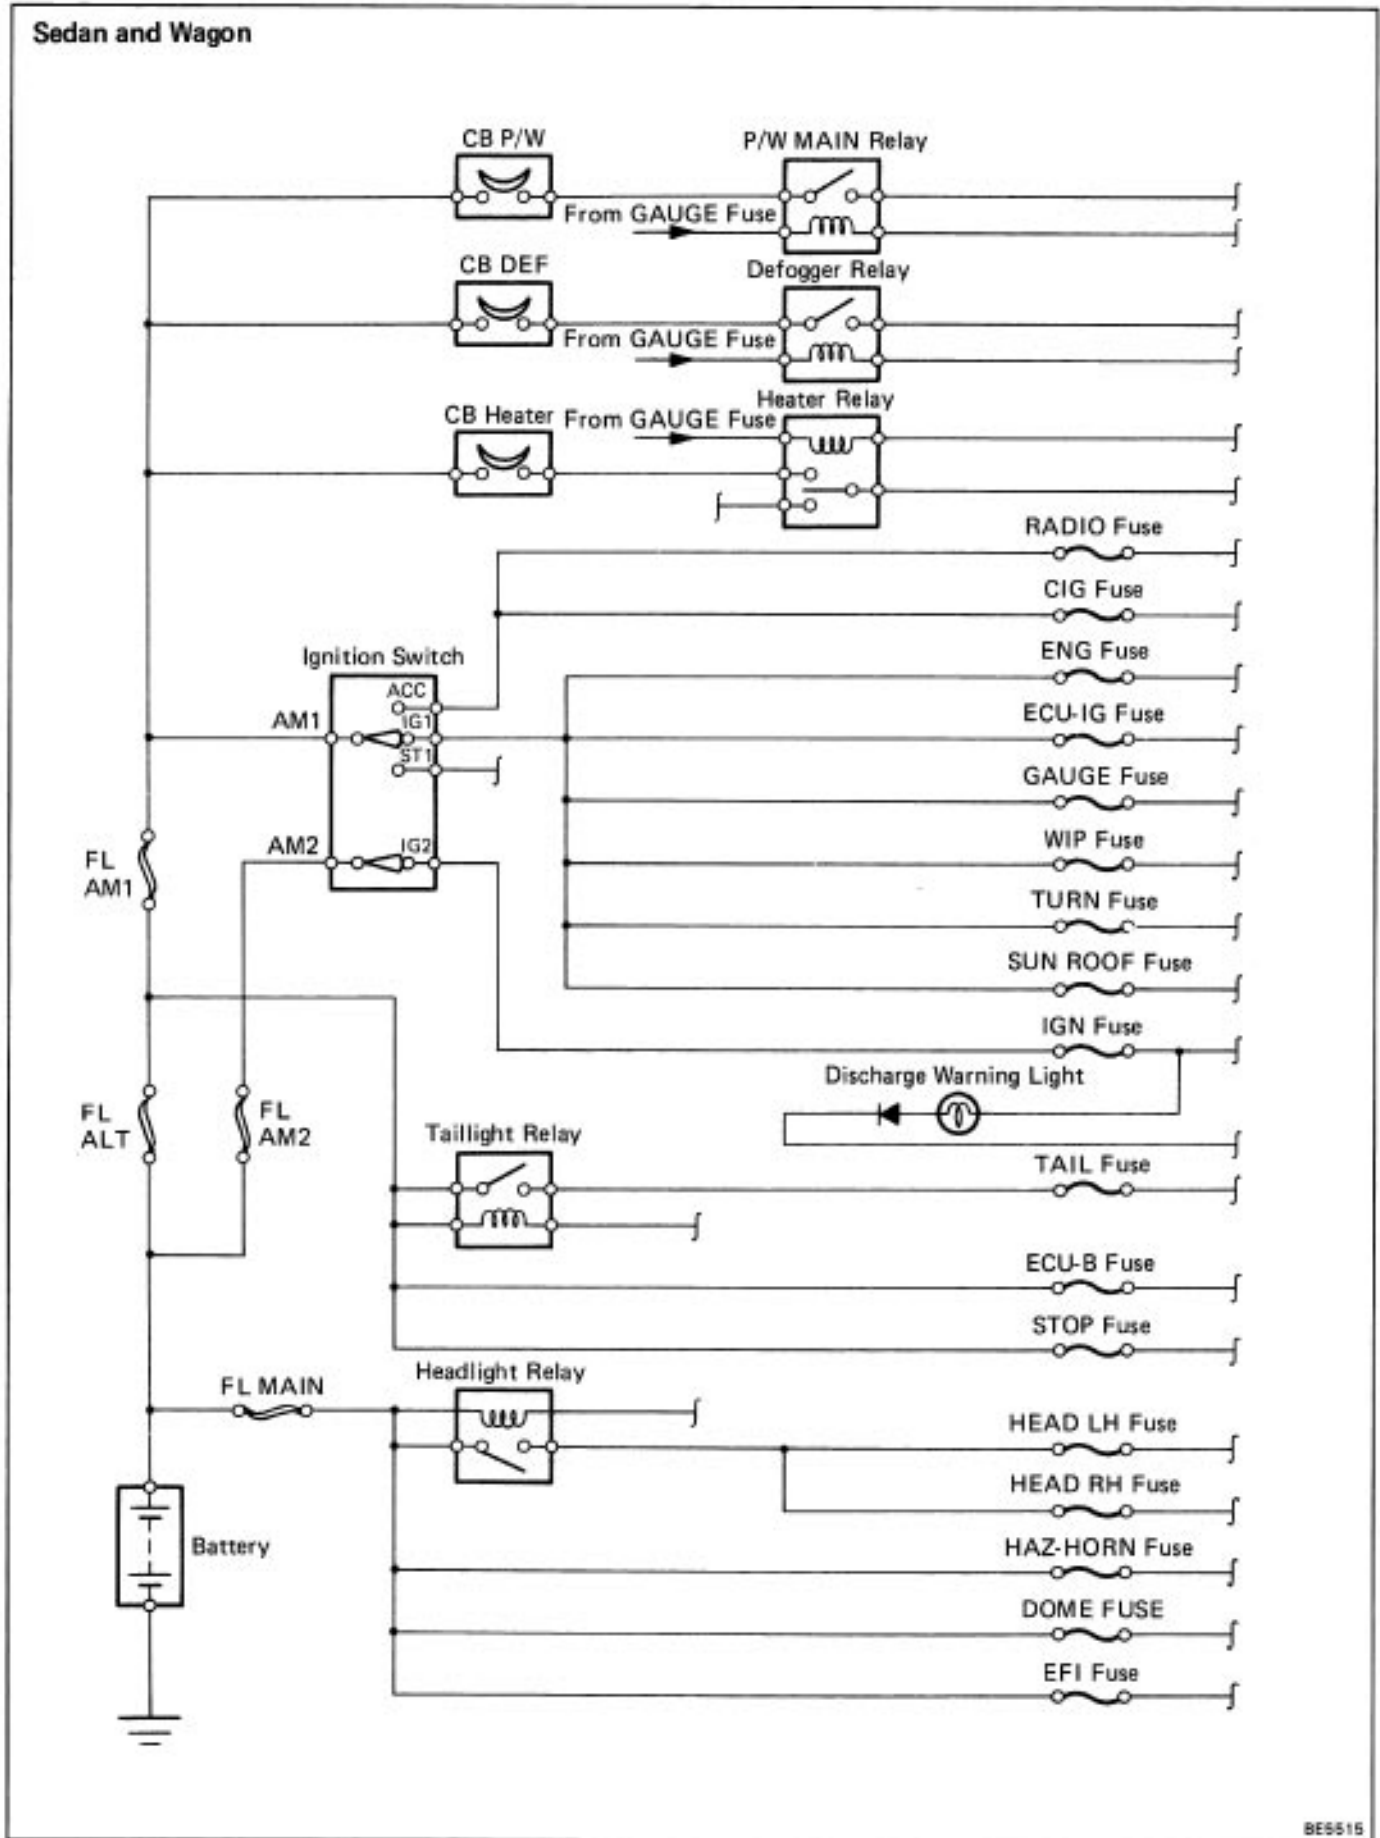

Wiring Diagram

