
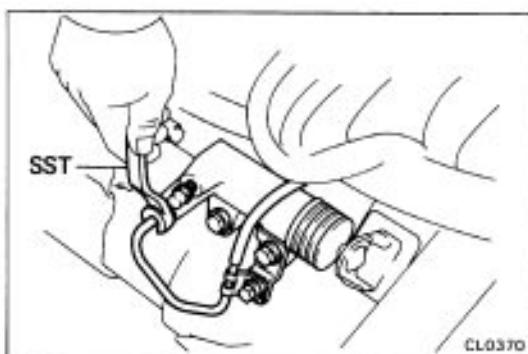


CLUTCH RELEASE CYLINDER COMPONENTS

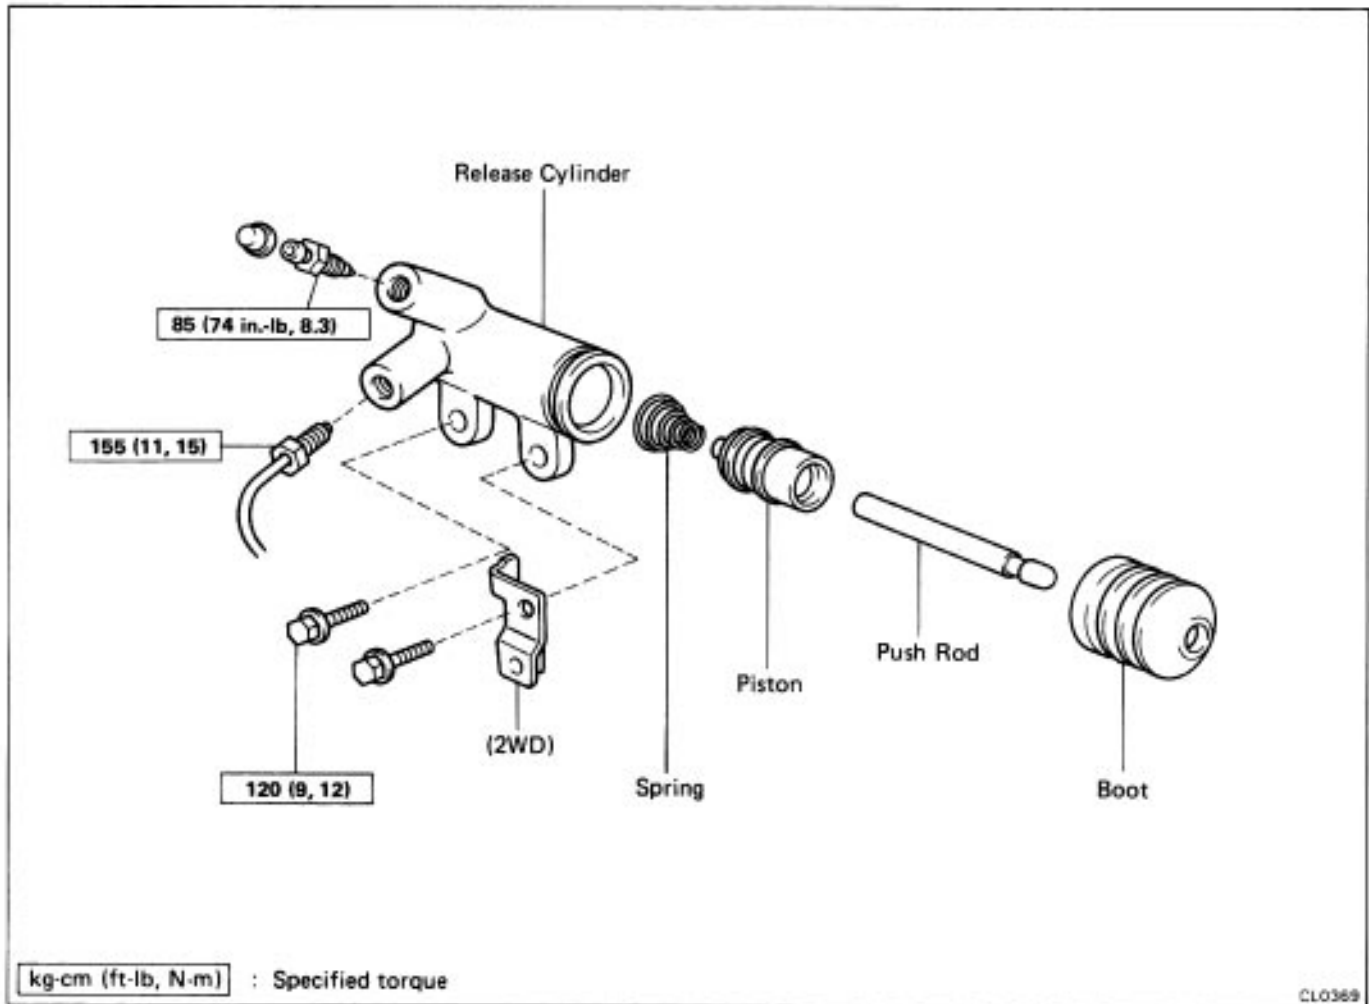

REMOVAL AND INSTALLATION OF CLUTCH RELEASE CYLINDER (MAIN POINT OF REMOVAL AND INSTALLATION)

1. DISCONNECT AND CONNECT CLUTCH LINE TUBE

Using SST, disconnect and connect the tube.

SST 09751-36011

2. INSPECT RELEASE CYLINDER BORE FOR SCORING OR CORROSION

If a problem is found, clean or replace the cylinder.


3. INSPECT PISTON AND CUPS FOR WEAR, SCORING, CRACKS OR SWELLING

If either one requires replacement, use the parts from the cylinder kit.

4. INSPECT PUSH ROD FOR WEAR OR DAMAGE

If necessary, replace the push rod.

5. COAT PISTON WITH LITHIUM SOAP BASE GLYCOL GREASE AS SHOWN

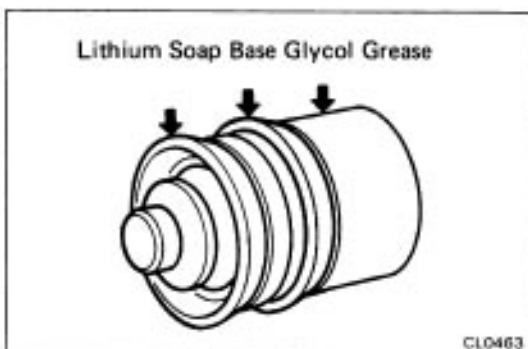

6. BLEED CLUTCH SYSTEM