

DIFFERENTIAL

REMOVAL OF DIFFERENTIAL

1. REMOVE TRANSAXLE

(See page [MT-4](#))

2. REMOVE DIFFERENTIAL ASSEMBLY

(See steps 1 to 23 on pages [MT-8](#) to [MT-10](#))

COMPONENTS

