

REMOVAL AND INSTALLATION OF TRANSAXLE


Remove and install the parts as shown.

HINT: Oil grade : API GL-4 or GL-5

Viscosity : SAE 75W-90

Capacity : 2.6 liters (2.7 US qts, 2.3 Imp. qts)

(C50 AND C52 TRANSAXLE)

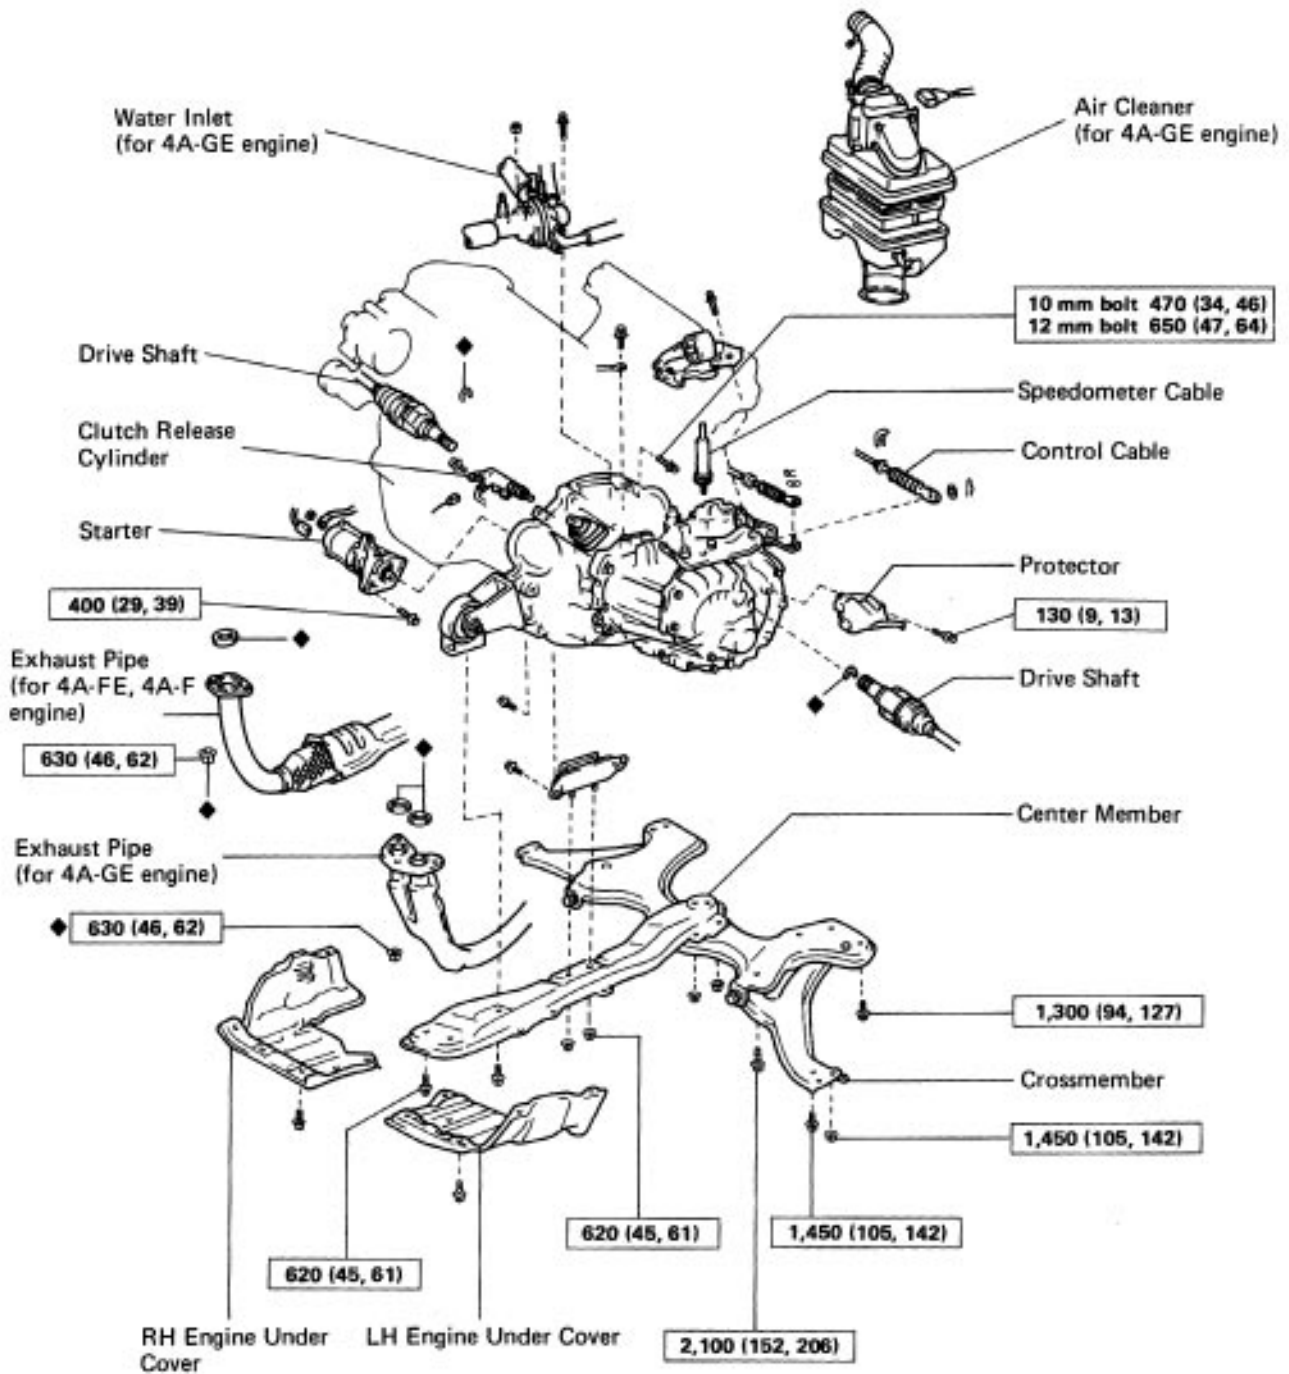

kg-cm (ft-lb, N·m) : Specified torque

◆ Non-reusable part