


E ELECTRICAL WIRING ROUTING

Position of Parts in Body

[RHD : S/D]

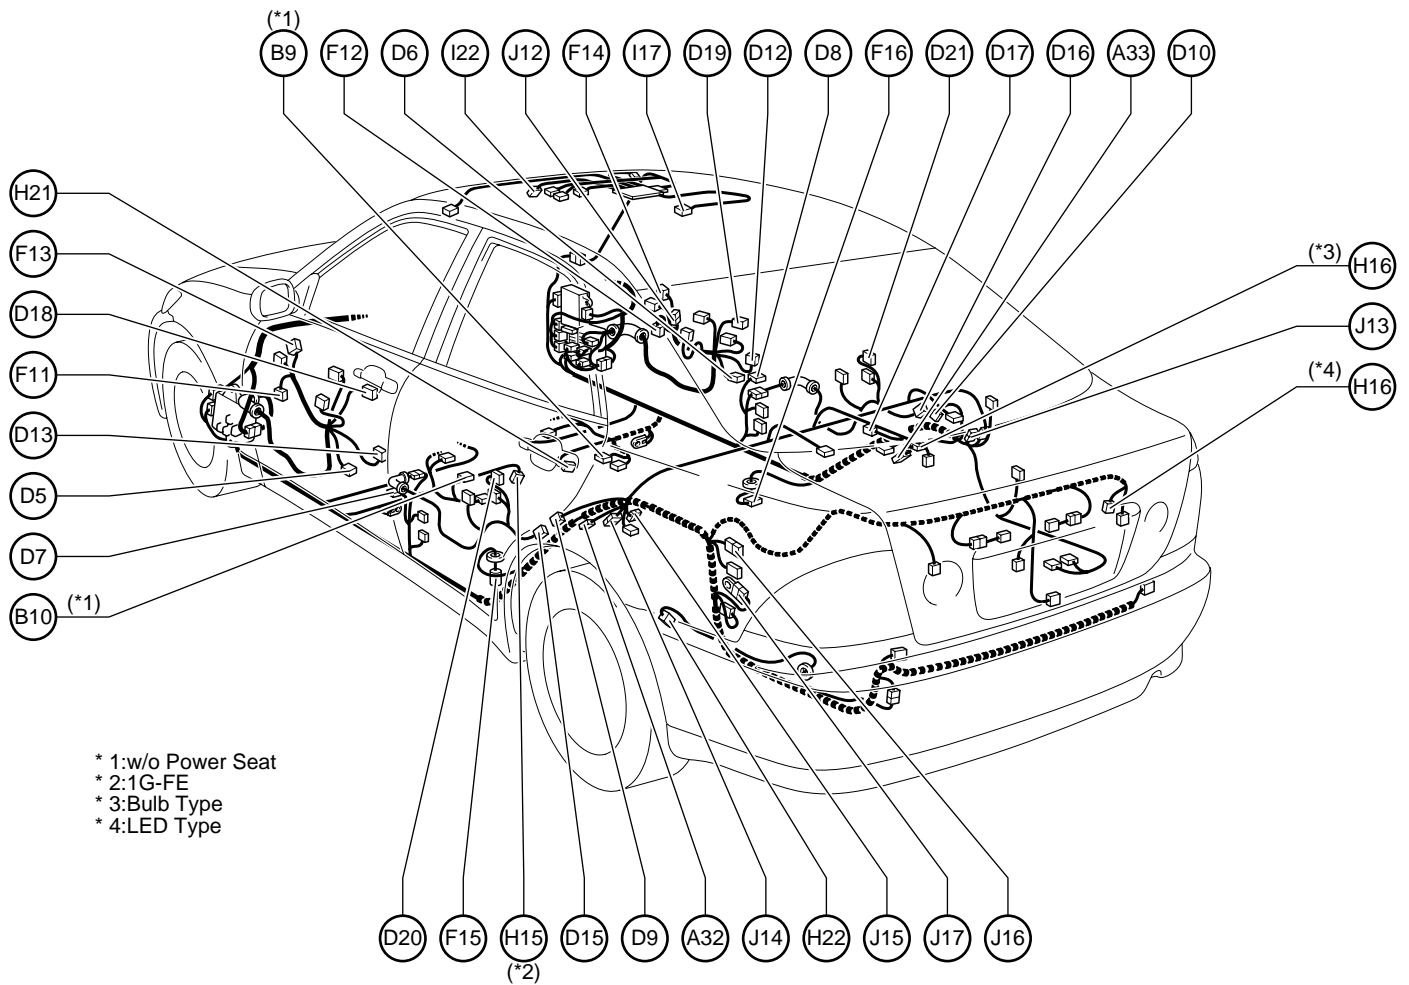

- * 1:w/o Power Seat
- * 2:1G-FE
- * 3:Bulb Type
- * 4:LED Type

- | | |
|---|---|
| A 32 ABS Speed Sensor Rear LH | D 21 Door Lock Detection SW Rear RH |
| A 33 ABS Speed Sensor Rear RH | Door Lock Motor Rear RH |
| B 9 Buckle SW RH | Double Lock Motor Rear RH |
| B 10 Buckle SW LH and | Double Lock Position SW Rear RH |
| Seat Belt Warning Occupant Detection Sensor | |
| D 5 Door Courtesy Light Front LH | F 11 Front Door Speaker LH |
| D 6 Door Courtesy Light Front RH | F 12 Front Door Speaker RH |
| D 7 Door Courtesy SW Front LH | F 13 Front Door Tweeter Speaker LH |
| D 8 Door Courtesy SW Front RH | F 14 Front Door Tweeter Speaker RH |
| D 9 Door Courtesy SW Rear LH | F 15 Fuel Pump |
| D 10 Door Courtesy SW Rear RH | Fuel Sender |
| D 12 Door Key Lock and Unlock SW Front RH | F 16 Fuel Sender (Sub) |
| Door Lock Detection SW Front RH | H 15 Heated Oxygen Sensor (Bank 1 Sensor 2) |
| Door Lock Motor Front RH | H 16 High Mounted Stop Light |
| D 13 Door Lock Detection SW Front LH | H 21 Heated Oxygen Sensor (Bank 2 Sensor 2) |
| Door Lock Motor Front LH | H 22 Height Control Sensor Rear LH |
| D 15 Door Lock Detection SW Rear LH | I 17 Interior Light |
| Door Lock Motor Rear LH | Radar Sensor |
| D 16 Door Lock Detection SW Rear RH | I 22 Inner Mirror |
| Door Lock Motor Rear RH | |
| D 17 Diode (Luggage Compartment) | J 12 Junction Connector |
| D 18 Door Lock Detection SW Front LH | J 13 Junction Connector |
| Door Lock Motor Front LH | J 14 Junction Connector |
| Double Lock Motor Front LH | J 15 Junction Connector |
| Double Lock Position SW Front LH | J 16 Junction Connector |
| D 19 Door Lock Detection SW Front RH | J 17 Junction Connector |
| Door Lock Motor Front RH | |
| Double Lock Motor Front RH | |
| Double Lock Position SW Front RH | |
| D 20 Door Lock Detection SW Rear LH | |
| Door Lock Motor Rear LH | |
| Double Lock Motor Rear LH | |
| Double Lock Position SW Rear LH | |