

## REMOVAL

### 1. DISCHARGE REFRIGERANT FROM REFRIGERATION SYSTEM

#### HINT:

At the time of installation, please refer to the following item.

Evacuate air from refrigeration system.

Charge system with refrigerant and inspect for leakage of refrigerant.


**Specified amount : 600 ± 50 g (21.16 ± 1.76 oz.)**

### 2. REMOVE AIR CLEANER DUCT AND AIR CLEANER ASSEMBLY

### 3. REMOVE ECU OUTLET DUCT

### 4. REMOVE 2 RADIATOR UPPER SUPPORTS

Remove the 2 bolts and upper supports.

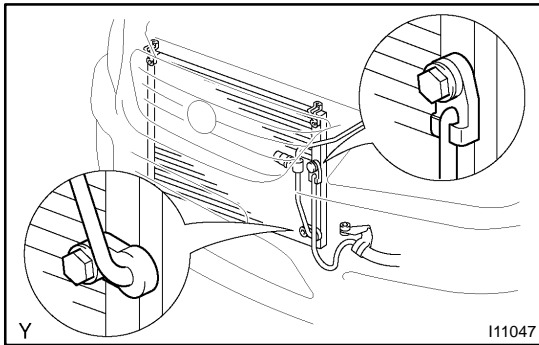

### 5. DISCONNECT DISCHARGE HOSE AND LIQUID TUBE

Remove the 2 bolts and disconnect the hose and tube.

**Torque: 10 N·m (100 kgf-cm, 7 ft-lbf)**


#### NOTICE:

**Cap the open fittings immediately to keep moisture or dirt out of the system.**

#### HINT:

At the time of installation, please refer to the following item.

Lubricate 2 new O-rings with compressor oil and install them to the hose and tube.

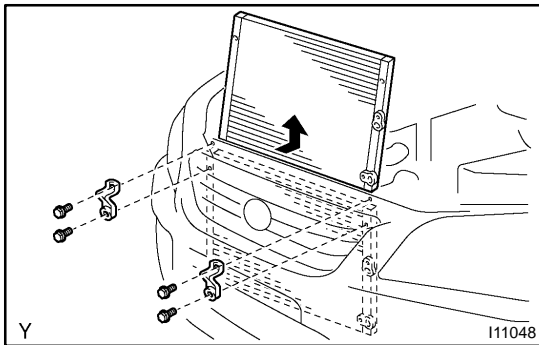

### 6. REMOVE CONDENSER

(a) Remove the 4 bolts and 2 brackets.

(b) Push the radiator toward engine.

(c) Push the condenser toward radiator and pull it upward.

#### HINT:

At the time of installation, please refer to the following item.

If condenser is replaced, add compressor oil to the condenser.

**Add 40 cc (1.4 fl. oz)**

**Compressor oil: ND - OIL 8 or equivalent**