



REMOVAL

1. REMOVE ENGINE UNDER COVER
2. REMOVE DRIVE BELT

Using SST, loosen the drive belt tension by turning the drive belt tensioner arm clockwise from the bottom side, and remove the drive belt.

SST 09216-00041