



HEATER MAIN RELAY INSPECTION

AC25Z-02


1. REMOVE FRONT DOOR SCUFF PLATE LH
(See page [BO-139](#))
2. REMOVE COWL SIDE TRIM BOARD LH
(See page [BO-139](#))

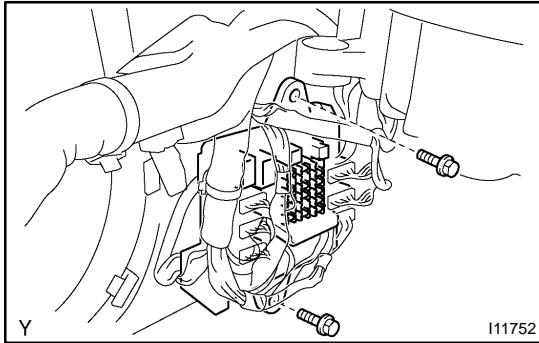

3. REMOVE HEATER MAIN RELAY
 - (a) Disconnect the connectors.
 - (b) Remove the 2 passenger side junction block set nuts.

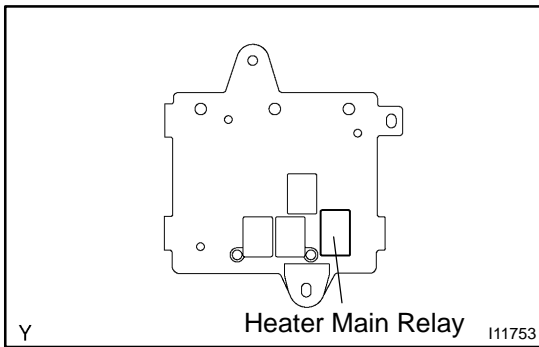

- (c) Remove the heater main relay from passenger side junction block.

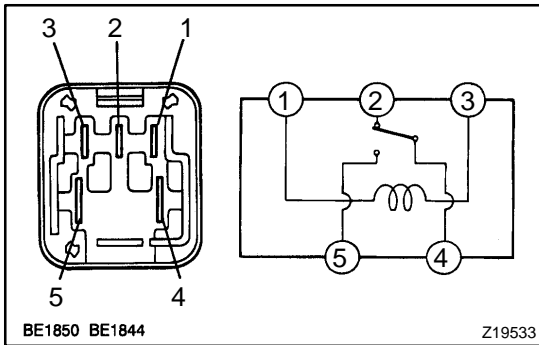

4. INSPECT HEATER MAIN RELAY CONTINUITY

| Condition | Tester connection | Specified condition |
|-------------------------------------|-------------------|---------------------|
| Constant | 2 - 4 1 - 3 | Continuity |
| Apply B+ between terminals 1 and 3. | 4 - 5 | Continuity |

If continuity is not as specified, replace the relay.

5. INSTALL HEATER MAIN RELAY
 - (a) Install the heater main relay to passenger side junction block.
 - (b) Install the passenger side junction block set nuts.
 - (c) Connect the connectors.
6. INSTALL COWL SIDE TRIM BOARD LH
(See page [BO-149](#))
7. INSTALL FRONT DOOR SCUFF PLATE LH
(See page [BO-149](#))