


MAGNETIC CLUTCH RELAY INSPECTION

AC20U-05

1. REMOVE MAGNETIC CLUTCH RELAY FROM RELAY BLOCK NO.3

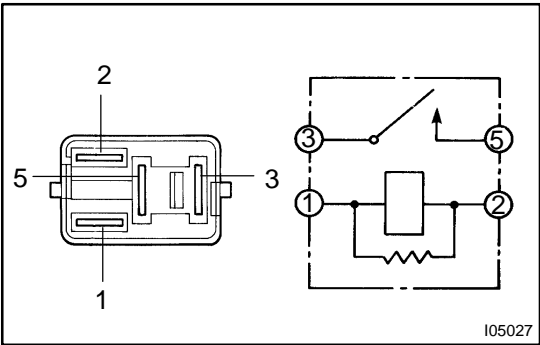

2. INSPECT MAGNETIC CLUTCH RELAY (Marking: A.C COMP) CONTINUITY

Condition	Tester connection	Specified condition
Constant	1 - 2	Continuity
Apply B+ between terminals 1 and 2.	3 - 5	Continuity

If continuity is not as specified, replace the relay.