


## ROOM TEMPERATURE SENSOR INSPECTION


### 1. REMOVE LOWER FINISH PANEL

- Remove the 3 screws.
- Release the 3 claws and pull out the lower finish panel.

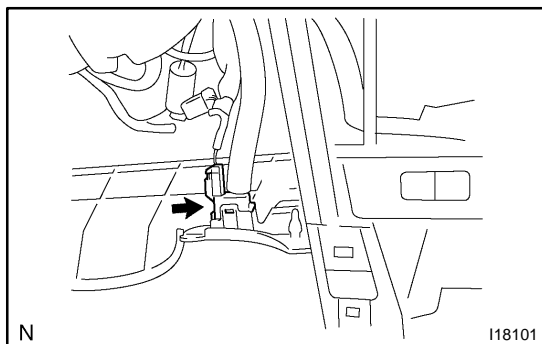

### 2. REMOVE ROOM TEMPERATURE SENSOR

- Disconnect the connector and aspirator hose.
- Release the 2 claws and pull out the sensor.

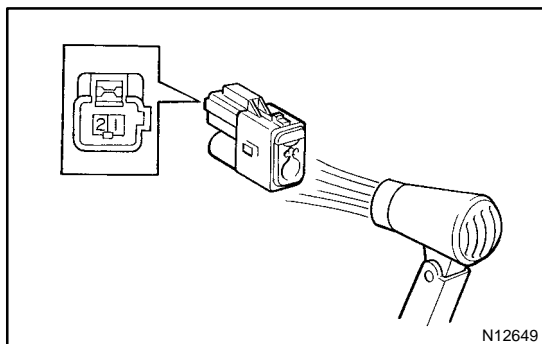


### 3. INSPECT ROOM TEMPERATURE SENSOR RESISTANCE

Measure resistance between terminals at each temperature as shown in the chart.

Temperature	Specified condition
25 °C (77 °F)	1.6 - 1.8 kΩ
50 °C (122 °F)	0.6 - 0.8 kΩ

If resistance is not as specified, replace the sensor.

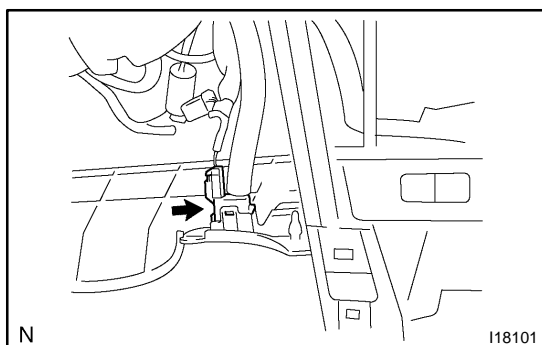

### 4. INSTALL ROOM TEMPERATURE SENSOR

- Install the sensor and fit the 2 claws.
- Connect the aspirator hose and connector.

### 5. INSTALL LOWER FINISH PANEL

- Install the lower finish panel and fit the 3 claws.
- Install the 3 screws.