


## EXTENSION HOUSING OIL SEAL ON-VEHICLE REPAIR

ATOHE-02


1. REMOVE NO. 1 AND NO. 2 ENGINE UNDER COVERS
2. REMOVE LH FRONT FLOOR CENTER COVER
3. REMOVE NO. 1 REAR FLOOR BOARD
4. REMOVE EXHAUST PIPE ASSEMBLY  
(See page [EM-100](#) )
5. REMOVE PROPELLER SHAFT (See page [PR-4](#) )

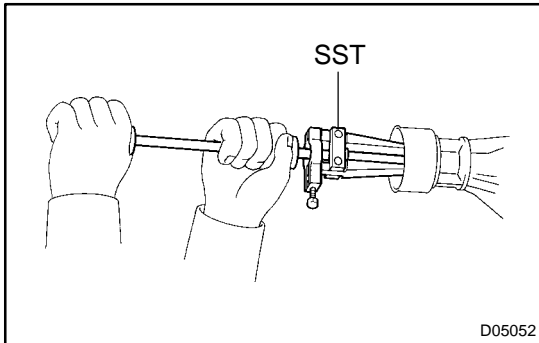

### 6. REMOVE REAR OIL SEAL

Using SST, remove the oil seal.

SST 09308-00010

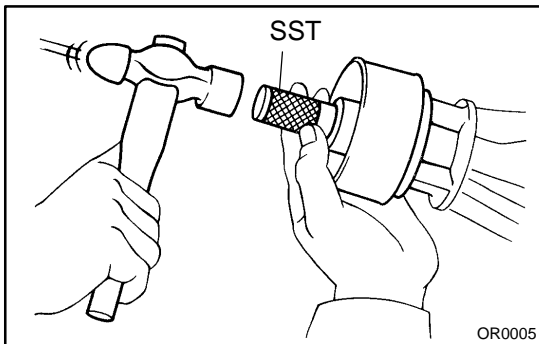

### 7. INSTALL NEW OIL SEAL

- (a) Using SST and a hammer, carefully drive a new oil seal in as far as it will go.  
SST 09325-20010

#### NOTICE:

**Clean the extension housing before removing the oil seal.**

- (b) Coat the lip of a new oil seal with MP grease.
8. INSTALL PROPELLER SHAFT (See page [PR-10](#) )
9. INSTALL EXHAUST PIPE ASSEMBLY  
(See page [EM-100](#) )
10. FILL ATF AND CHECK FLUID LEVEL  
(See page [DI-338](#) )
11. REMOVE NO. 1 REAR FLOOR BOARD
12. REMOVE LH FRONT FLOOR CENTER COVER
13. INSTALL NO. 1 AND NO. 2 ENGINE UNDER COVERS