



INSTALLATION

1. CHECK TORQUE CONVERTER CLUTCH INSTALLATION

Using calipers and a straight edge, measure from the distance from the installed surface of the transmission housing to the installed surface of the torque converter clutch.

Correct distance: More than 0.1 mm (0.004 in.)

If the distance is less than the standard, check for an improper installation.

2. INSTALL TRANSMISSION

Installation is in the reverse order of removal
(See page [AT-31](#)).

HINT:

After installation, check and inspect items as follows.

- Adjust the shift lever position (See page [DI-338](#)).
- Fill ATF and check fluid level (See page [DI-338](#)).
- Do the road test (See page [DI-338](#)).
- Fill with engine coolant (See page [CO-2](#)).