


VEHICLE SPEED SENSOR ON-VEHICLE REPAIR

AT0XV-01

1. REMOVE NO. 1 AND NO. 2 ENGINE UNDER COVERS
2. REMOVE LH FRONT FLOOR CENTER COVER
3. REMOVE NO. 1 REAR FLOOR BOARD

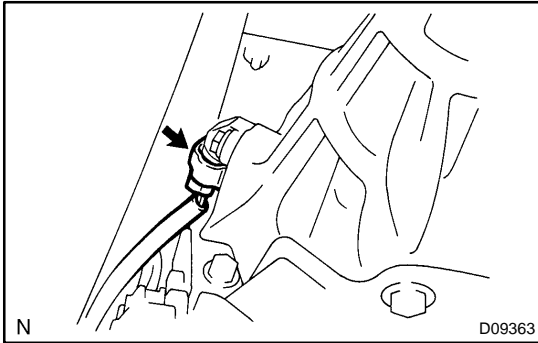

4. DISCONNECT VEHICLE SPEED SENSOR CONNECTOR
5. REMOVE VEHICLE SPEED SENSOR
 - (a) Remove the bolt and vehicle speed sensor.
 - (b) Remove the O-ring from the vehicle speed sensor.
6. INSTALL VEHICLE SPEED SENSOR
 - (a) Coat a new O-ring with ATF and install it to the vehicle speed sensor.
 - (b) Install the vehicle speed sensor to the extension housing and torque the bolt.
Torque: 5.4 N·m (55 kgf·cm, 48 in.-lbf)
7. INSTALL NO. 1 REAR FLOOR BOARD
8. INSTALL LH FRONT FLOOR CENTER COVER
9. INSTALL NO. 1 AND NO. 2 ENGINE UNDER COVERS