


## O/D DIRECT CLUTCH SPEED SENSOR

AT0XW-01

### ON-VEHICLE REPAIR

1. REMOVE NO. 1 AND NO. 2 ENGINE UNDER COVERS
2. REMOVE LH FRONT FLOOR CENTER COVER
3. REMOVE NO. 1 REAR FLOOR BOARD

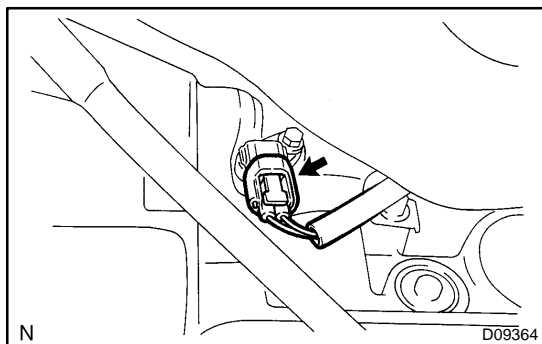

4. DISCONNECT O/D DIRECT CLUTCH SPEED SENSOR CONNECTOR
5. REMOVE O/D DIRECT CLUTCH SPEED SENSOR
  - (a) Remove the bolt and O/D direct clutch speed sensor.
  - (b) Remove the O-ring from the O/D direct clutch speed sensor.
6. INSTALL O/D DIRECT CLUTCH SPEED SENSOR
  - (a) Coat a new O-ring with ATF and install it to the O/D direct clutch speed sensor.
  - (b) Install the O/D direct clutch speed sensor to the transmission case and torque the bolt.  
**Torque: 5.4 N·m (55 kgf·cm, 48 in.-lbf)**
7. INSTALL NO. 1 REAR FLOOR BOARD
8. INSTALL LH FRONT FLOOR CENTER COVER
9. INSTALL NO. 1 AND NO. 2 ENGINE UNDER COVERS