


REMOVAL

HINT:


Installation is in the reverse order of removal.

1. REMOVE INSTRUMENT CLUSTER FINISH PANEL CENTER
2. REMOVE INSTRUMENT CLUSTER FINISH PANEL CENTER LOWER
3. REMOVE AIR CONDITIONER ASSEMBLY
4. REMOVE CONSOLE PANEL UPPER
5. REMOVE PARKING BRAKE HOLE COVER
6. REMOVE CONSOLE BOX
7. REMOVE GLOVE COMPARTMENT DOOR ASSEMBLY
8. REMOVE HORN BUTTON
9. REMOVE STEERING WHEEL
10. REMOVE STEERING COLUMN LOWER COVER
11. REMOVE STEERING COLUMN UPPER COVER
12. REMOVE TURN SIGNAL SWITCH ASSEMBLY
13. REMOVE INSTRUMENT PANEL FINISH PANEL LOWER
14. REMOVE INSTRUMENT CLUSTER FINISH PANEL
15. REMOVE COMBINATION METER
16. REMOVE FRONT DOOR INNER SCUFF PLATE RH
17. REMOVE FRONT DOOR INNER SCUFF PLATE LH
18. REMOVE COWL SIDE TRIM BOARD RH
19. REMOVE COWL SIDE TRIM BOARD LH
20. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP RH
21. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP LH
22. REMOVE FRONT PILLAR GARNISH RH
23. REMOVE FRONT PILLAR GARNISH LH
24. DISCONNECT PASSENGER AIRBAG CONNECTOR
25. REMOVE INSTRUMENT PANEL ASSEMBLY

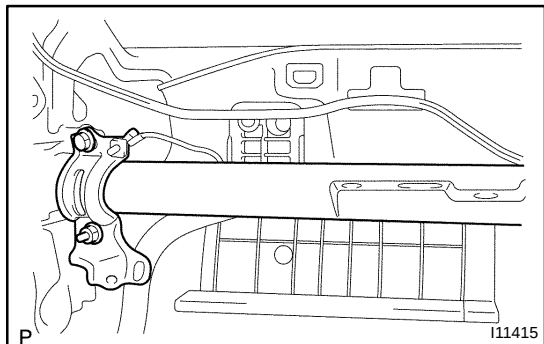

26. REMOVE INSTRUMENT PANEL REINFORCEMENT BRACKET

Remove the bolt and nut and pull instrument panel reinforcement.

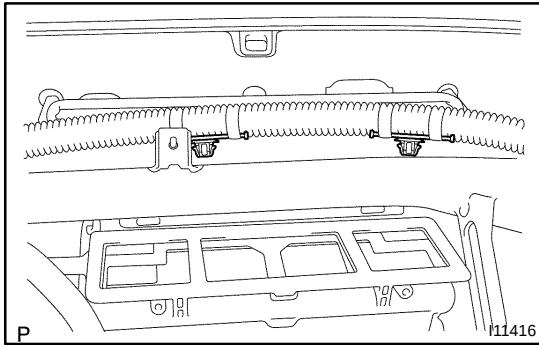

27. **REMOVE A PART OF INSTRUMENT PANEL WIRE**
Remove the 2 clips and a part of instrument panel wire.
28. **REMOVE DEFROSTER LOWER NOZZLE**
29. **REMOVE BENCH TYPE REAR SEAT CUSHION ASSEMBLY**
30. **REMOVE BENCH TYPE REAR SEAT BACK ASSEMBLY**
31. **REMOVE REAR DOOR INNER SCUFF PLATE RH**
32. **REMOVE REAR DOOR INNER SCUFF PLATE LH**
33. **REMOVE REAR DOOR OPENING TRIM WEATHER STRIP RH**
34. **REMOVE REAR DOOR OPENING TRIM WEATHER STRIP LH**
35. **REMOVE CENTER PILLAR GARNISH LOWER RH**
36. **REMOVE CENTER PILLAR GARNISH LOWER LH**
37. **REMOVE SEAT BELT ANCHOR COVER CAP**
38. **REMOVE FRONT SEAT OUTER BELT ASSEMBLY RH**
39. **REMOVE FRONT SEAT OUTER BELT ASSEMBLY LH**
40. **REMOVE CENTER PILLAR GARNISH RH**
41. **REMOVE CENTER PILLAR GARNISH LH**
42. **REMOVE ROOF SIDE INNER GARNISH RH**
43. **REMOVE ROOF SIDE INNER GARNISH LH**
44. **REMOVE ASSIST GRIP COVER**
45. **REMOVE ASSIST GRIP**
46. **REMOVE VISOR ASSEMBLY RH**
47. **REMOVE VISOR ASSEMBLY LH**
48. **REMOVE INNER REAR VIEW MIRROR STAY HOLDER COVER**
49. **REMOVE INNER REAR VIEW MIRROR**
50. **REMOVE MAP LIGHT ASSEMBLY**
51. **REMOVE ROOM LIGHT ASSEMBLY**
52. **w/ Sliding Roof:**
REMOVE SLIDING ROOF OPENING TRIM MOULDING
53. **REMOVE VISOR HOLDER**
54. **REMOVE ROOF HEADLINING ASSEMBLY**
55. **REMOVE ANTENNA ASSEMBLY**
 - (a) Remove the 2 nuts and disconnect the connector.
 - (b) Remove the antenna assembly.
56. **REMOVE ANTENNA COED**
Remove the clamp and the antenna cord.
57. **REMOVE ANTENNA POLE**
Turn the antenna pole counterclockwise to remove.

