


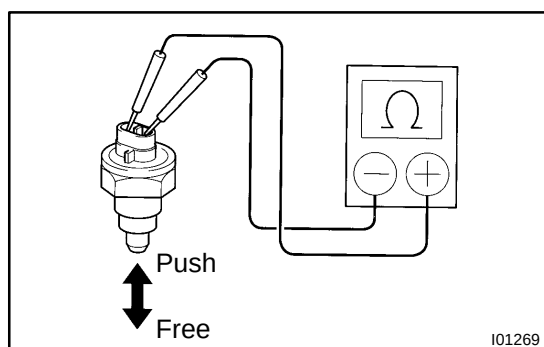

INSPECTION

1. INSPECT BACK-UP LIGHT SWITCH CONTINUITY (M/T)

Switch position	Specified condition
Push	Continuity
Free	No continuity

If continuity is not as specified, replace the switch.

2. INSPECT PARK/NEUTRAL POSITION SWITCH CONTINUITY (A/T)

(See page [DI-371](#))