



CIRCUIT

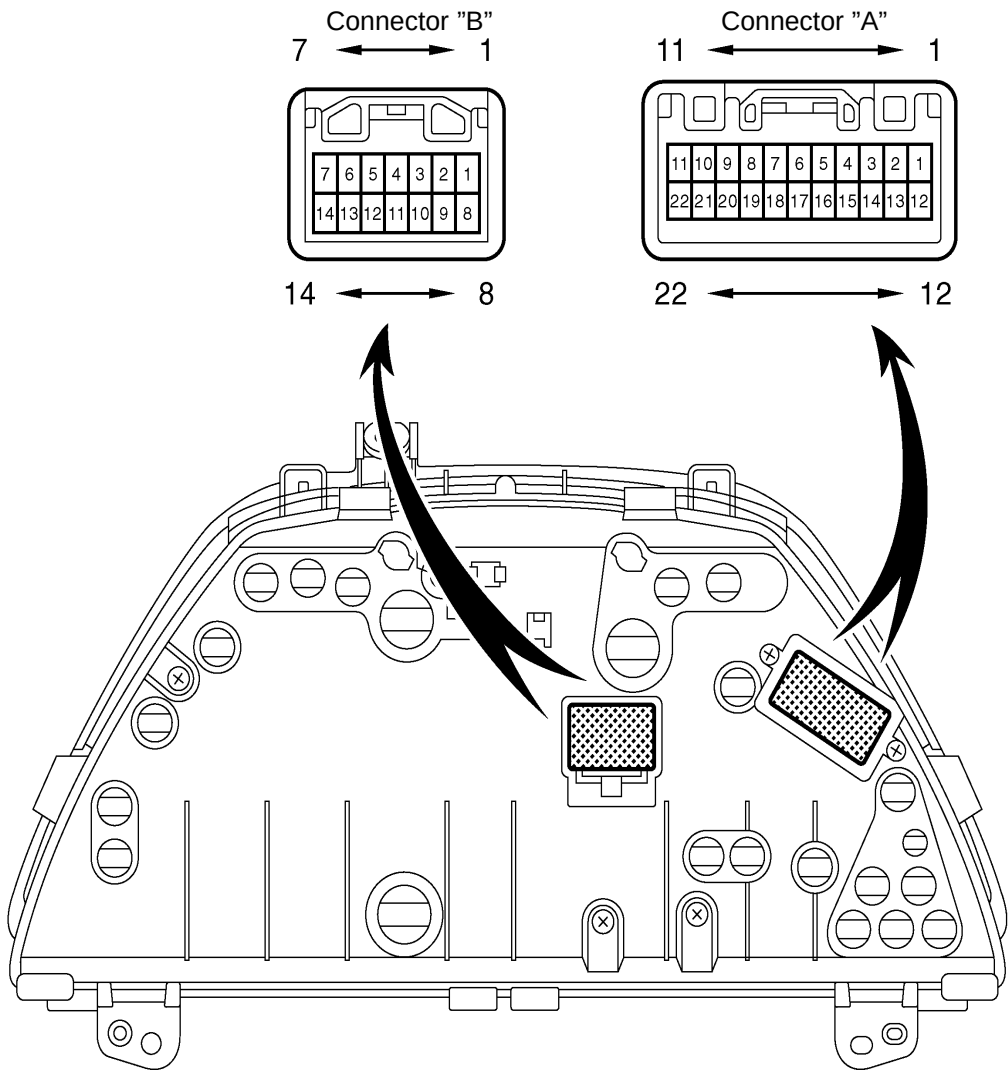

N

I18580

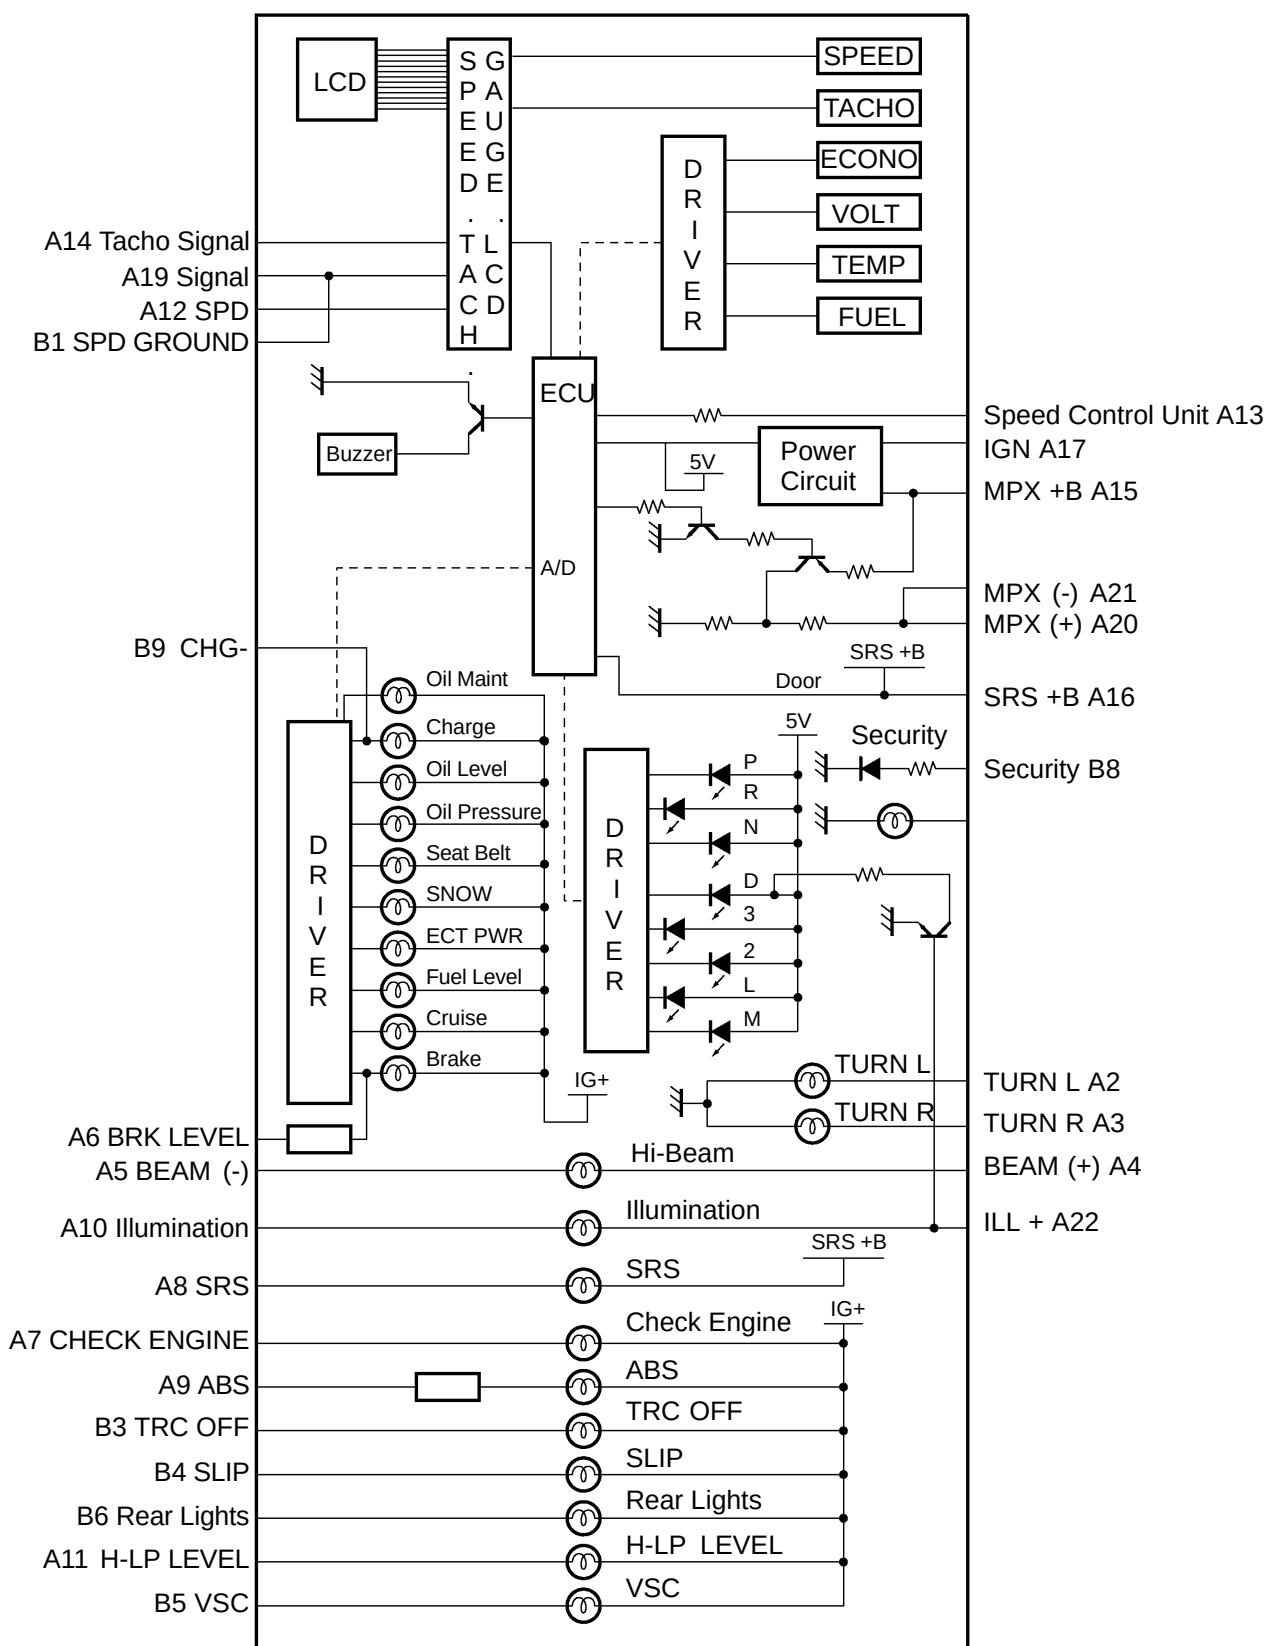

C

I27848

No.		Wiring connector side
A	2	Turn signal light switch (Left)
	3	Turn signal light switch (Right)
	4	HEAD Fuse
	5	Headlight dimmer switch
	6	Brake fluid level warning switch
	7	ECM
	8	Airbag sensor assembly
	9	ABS ECU
	10	Rheostat light control volume
	11	Headlight beam level control ECU
	12	Speed sensor (M/T) or ABS ECU (A/T)
	13	Speed control unit
	14	ECM
	15	MPX+B Fuse
	16	SRS+B Fuse
	17	GAUGE Fuse
	18	Power ground
	19	Signal ground
	20	Multiplex communication circuit (MPX+)
	21	Multiplex communication circuit (MPX-)
	22	TAIL Fuse
B	1	Speed signal ground (M/T vehicle only)
	3	ABS and TRC ECU
	4	ABS and TRC ECU
	5	ABS and TRC ECU (w/ VSC)
	6	Light failure sensor
	8	Theft deterrent ECU
	9	Daytime running light ECU