

## REMOVAL

### 1. REMOVE HEADLIGHT

#### HINT:

Follow the same procedure for RH as for LH.


- (a) Remove a part of LH front fender liner.
- (b) Remove a part of front bumper cover.
- (c) Remove the bolt, 2 nuts and 2 clips.
- (d) Lift up the front bumper and pull the headlight assembly towards the front of the vehicle, and disconnect the engagement of the headlight assembly.
- (e) Install LH headlight assembly.
- (f) Install a part of front bumper cover.
- (g) Install a part of front fender liner.
- (h) Inspect and adjust optical axis of headlight (See page [BE-38](#) ).

### 2. Sedan:

#### REMOVE REAR COMBINATION LIGHT

#### HINT:



- Installation is in the reverse order of removal. Only if there is a specified procedure for installation it is shown.
  - Follow the same procedure for RH as for LH.
- (a) Remove luggage compartment trim side cover No. 2.
  - (b) Remove luggage compartment trim rear cover.
  - (c) Remove a part of LH luggage compartment trim side cover.
  - (d) Remove the 2 rear light covers and 2 bolts.
  - (e) Pull the pin toward the rear of the vehicle, and disconnect the engagement of 2 pins.
  - (f) From the inside of the luggage room, separate the connector and disconnect the LH rear combination light assembly.

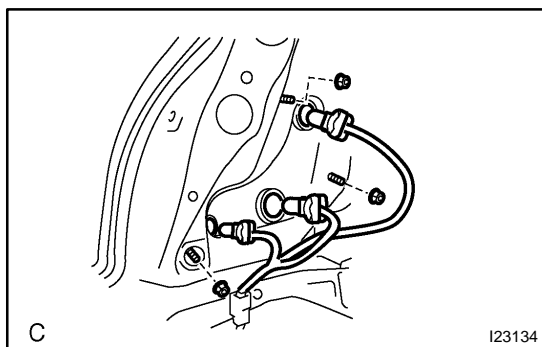

### 3. Wagon: REMOVE REAR COMBINATION LIGHT

#### HINT:

- Installation is in the reverse order of removal. Only if there is a specified procedure for installation it is shown.
  - Follow the same procedure for RH as for LH.
- (a) Remove floor board and deck side board LH.
  - (b) Remove back door scuff plate.
  - (c) Remove a part of deck side trim board LH.
  - (d) Disconnect the bulb sockets and 3 nuts.
  - (e) Remove the combination light assembly.

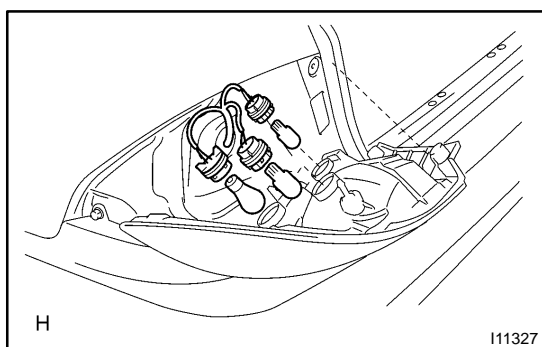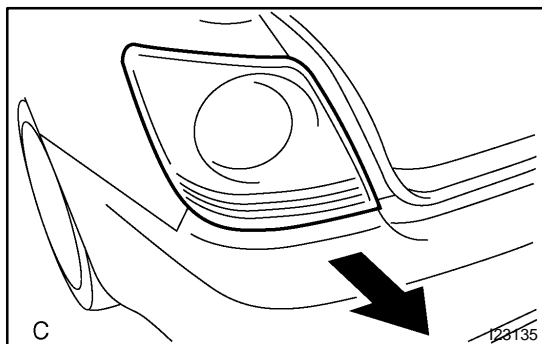


### 4. Sedan: REMOVE REAR COMBINATION BULB

#### HINT:

- Installation is in the reverse order of removal. Only if there is a specified procedure for installation it is shown.
  - Follow the same procedure for RH as for LH.
- (a) Remove a part of LH combination light assembly.

#### HINT:


- (b) Remove the bulb sockets and remove the bulbs.

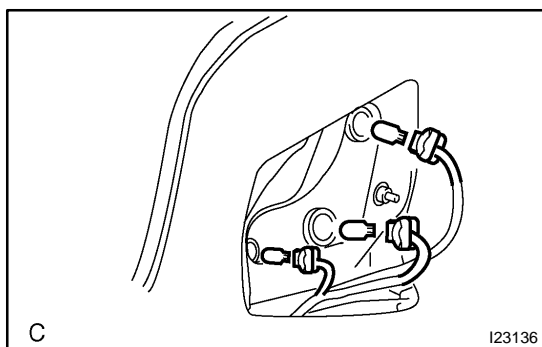

### 5. Wagon: REMOVE REAR COMBINATION BULB

#### HINT:

- Installation is in the reverse order of removal. Only if there is a specified procedure for installation it is shown.
  - Follow the same procedure for RH as for LH.
- (a) Remove a service hole cover.
  - (b) Remove the bulb sockets and remove the bulbs.

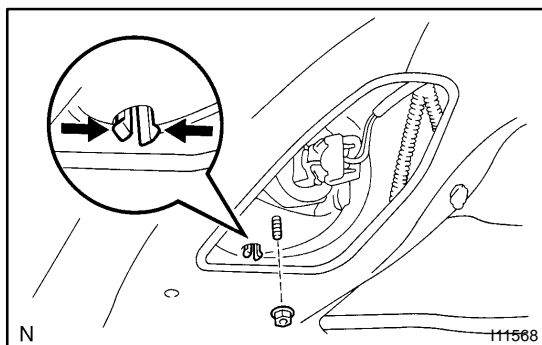


### 6. Sedan: REMOVE REAR LAMP ASSEMBLY

#### HINT:

- Installation is in the reverse order of removal. Only if there is a specified procedure for installation it is shown.
  - Follow the same procedure for RH as for LH.
- (a) Remove a part of luggage compartment door trim.
  - (b) Remove the nut.
  - (c) Compress the claw to disconnect the engagement as shown in the illustration.


- (d) Separate the connector and remove the rear light assembly.

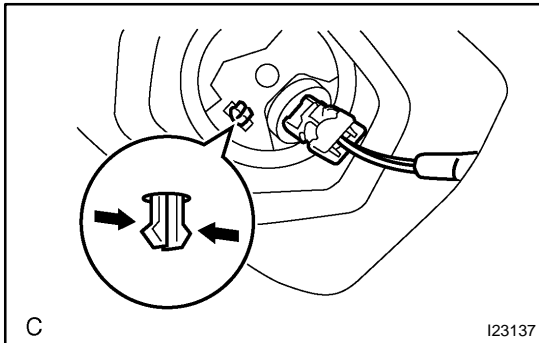

## 7. Wagon: REMOVE REAR LAMP ASSEMBLY

### HINT:

- Installation is in the reverse order of removal. Only if there is a specified procedure for installation it is shown.
  - Follow the same procedure for RH as for LH.
- (a) Remove the back door trim service hole cover.
- (b) Compress the claw to disconnect the engagement as shown in the illustration.
- (c) Separate the connector and remove the rear light assembly.

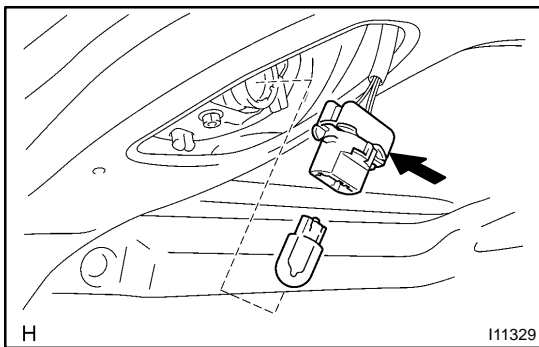


## 8. Sedan: REMOVE REAR LAMP BULB

### HINT:

Installation is in the reverse order of removal. Only if there is a specified procedure for installation it is shown.

- (a) Remove a part of luggage compartment door trim.
- (b) Remove the bulb socket and bulb.

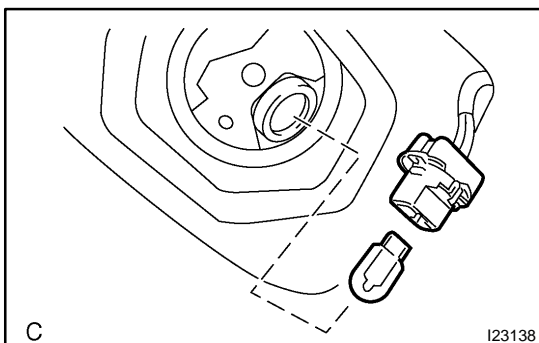

## 9. Wagon: REMOVE REAR LAMP BULB

### HINT:

Installation is in the reverse order of removal. Only if there is a specified procedure for installation it is shown.

- (a) Remove the back door trim service hole cover.
- (b) Remove the bulb socket and bulb.