



REMOVAL

1. Sedan:

REMOVE LICENSE PLATE LIGHT

HINT:

- Installation is in the reverse order of removal. Only if there is a specified procedure for installation it is shown.
- Follow the same procedure for RH as for LH.
- (a) Remove the Internal Trunk Release Handle.
- (b) Remove a part of luggage compartment door trim.
- (c) Remove the 4 nuts.
- (d) Remove luggage compartment door outer garnish.
- (e) Disconnect the connector.
- (f) Pull the claw towards the inside of the vehicle as shown in the illustration, disconnect the engagement of 2 claws, and remove the license plate light assembly.

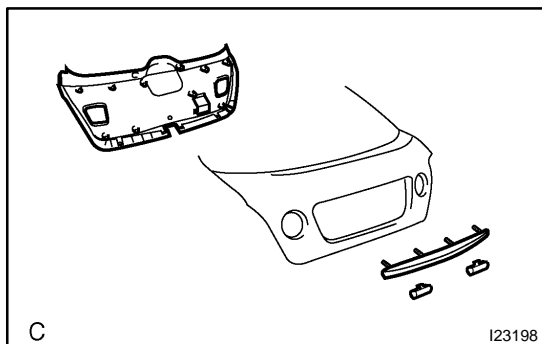
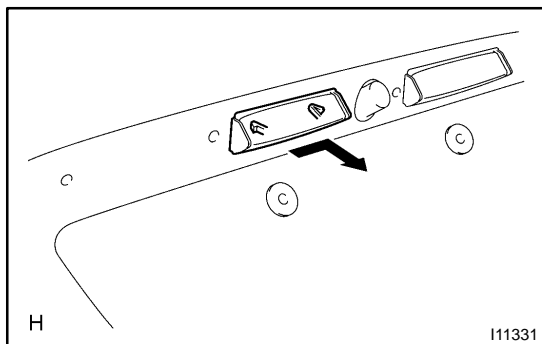


2. Wagon:

REMOVE LICENSE PLATE LIGHT

HINT:

- Installation is in the reverse order of removal. Only if there is a specified procedure for installation it is shown.
- Follow the same procedure for RH as for LH.
- (a) Remove the back door trim.
- (b) Remove the 4 nuts.
- (c) Remove back door outer garnish.
- (d) Disconnect the connector.
- (e) Pull the claw towards the inside of the vehicle as shown in the illustration, disconnect the engagement of 2 claws, and remove the license plate light assembly.

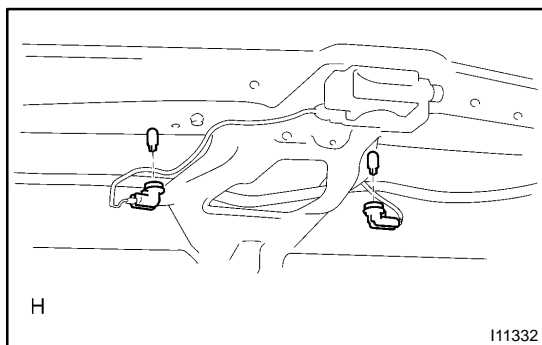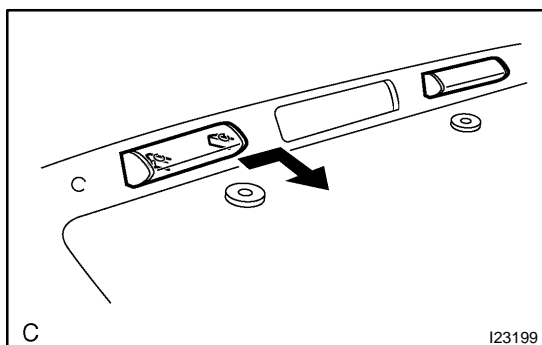


3. Sedan:

REMOVE LICENSE PLATE BULB

HINT:

- Installation is in the reverse order of removal. Only if there is a specified procedure for installation it is shown.
- (a) Remove a part of luggage compartment door trim.
 - (b) Disconnect the bulb sockets and remove the bulbs.

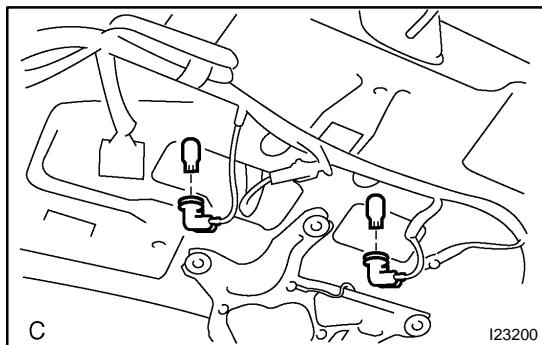

4. Wagon:
REMOVE LICENSE PLATE BULB

HINT:

Installation is in the reverse order of removal. Only if there is a specified procedure for installation it is shown.

- (a) Remove the back door trim.
- (b) Disconnect the bulb sockets and remove the bulbs.