

INSPECTION

1. Left/right adjustment switch (Left side): INSPECT MIRROR SWITCH CONTINUITY


Switch position	Specified condition
UP	1 - 10 3 - 4
RIGHT	1 - 3 9 - 4
DOWN	1 - 3 10 - 4
LEFT	1 - 9 3 - 4

If continuity is not as specified, replace the switch.

2. Left/right adjustment switch (Right side): INSPECT MIRROR SWITCH CONTINUITY

Switch position	Specified condition
UP	1 - 6 3 - 4
RIGHT	1 - 3 2 - 4
DOWN	1 - 3 6 - 4
LEFT	1 - 2 3 - 4

If continuity is not as specified, replace the switch.

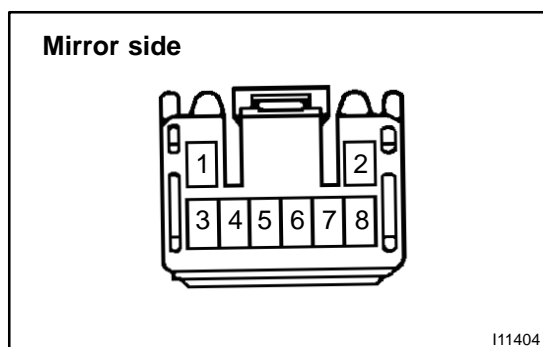

3. INSPECT MIRROR MOTOR OPERATION

- Connect the positive (+) lead from the battery to terminal 8 and the negative (-) lead to terminal 7, and check that the mirror turns to the upward.
- Reverse the polarity, and check that the mirror turns to the downward.
- Connect the positive (+) lead from the battery to terminal 6 and the negative (-) lead to terminal 7, and check that the mirror turns to the inside.
- Reverse the polarity, and check that the mirror turns outside.

If operation is not as specified, replace the mirror assembly.