


POWER DOOR LOCK CONTROL SYSTEM

LOCATION

BE2A3-02

Power Window Master Switch
 ● Door Lock Manual Switch

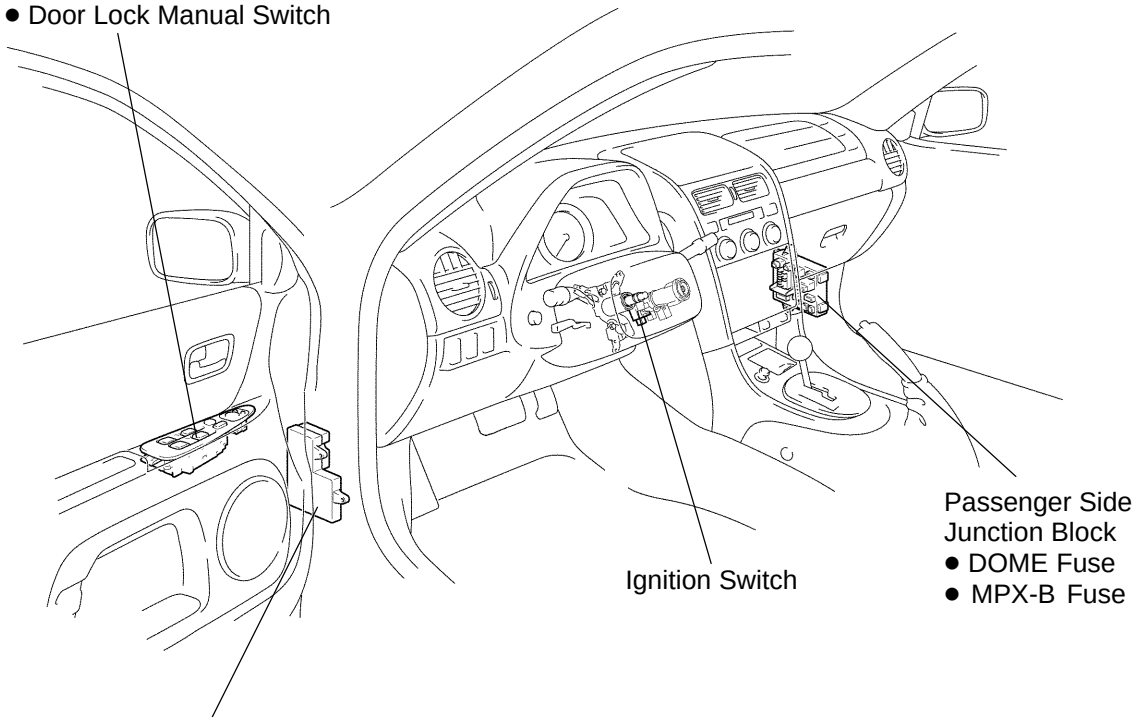


Passenger Side Junction Block
 ● DOME Fuse
 ● MPX-B Fuse

Driver Side Junction Block
 ● Body ECU
 ● ECU-IG Fuse
 ● DOOR Fuse

Door Lock Assembly
 ● Door Lock Motor
 ● Door Unlock Detection Switch

Sedan:

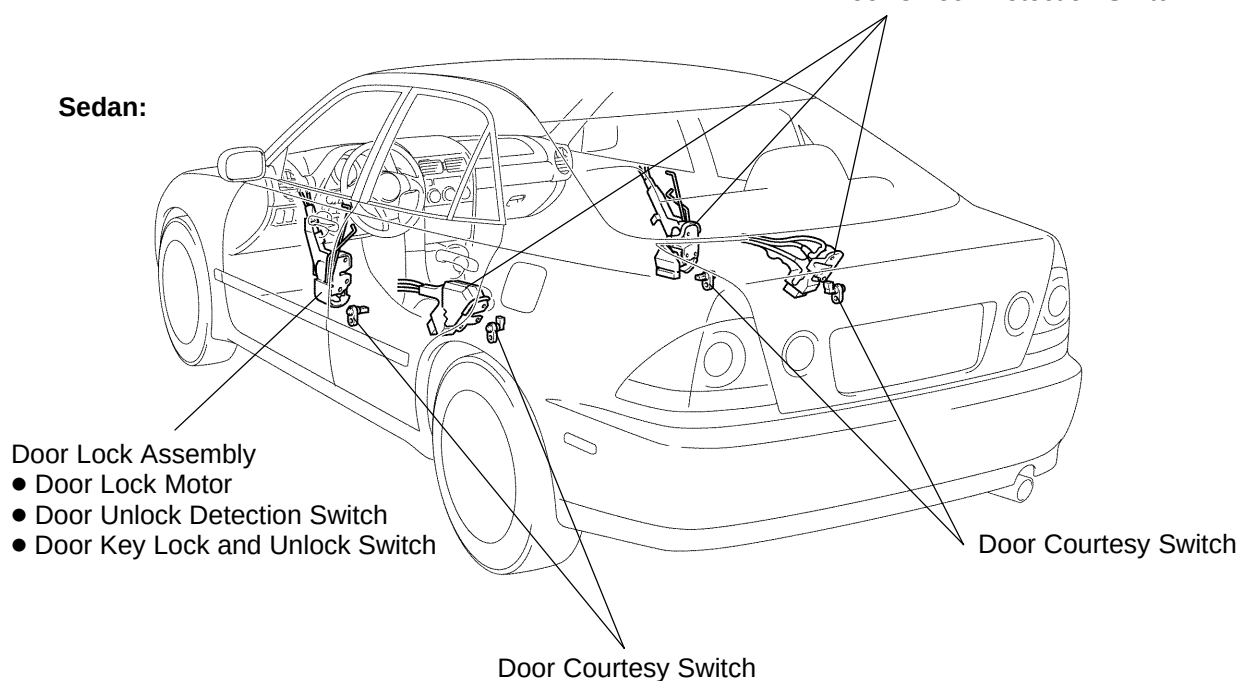


Door Lock Assembly
 ● Door Lock Motor
 ● Door Unlock Detection Switch
 ● Door Key Lock and Unlock Switch

Door Courtesy Switch

Door Courtesy Switch

I27820

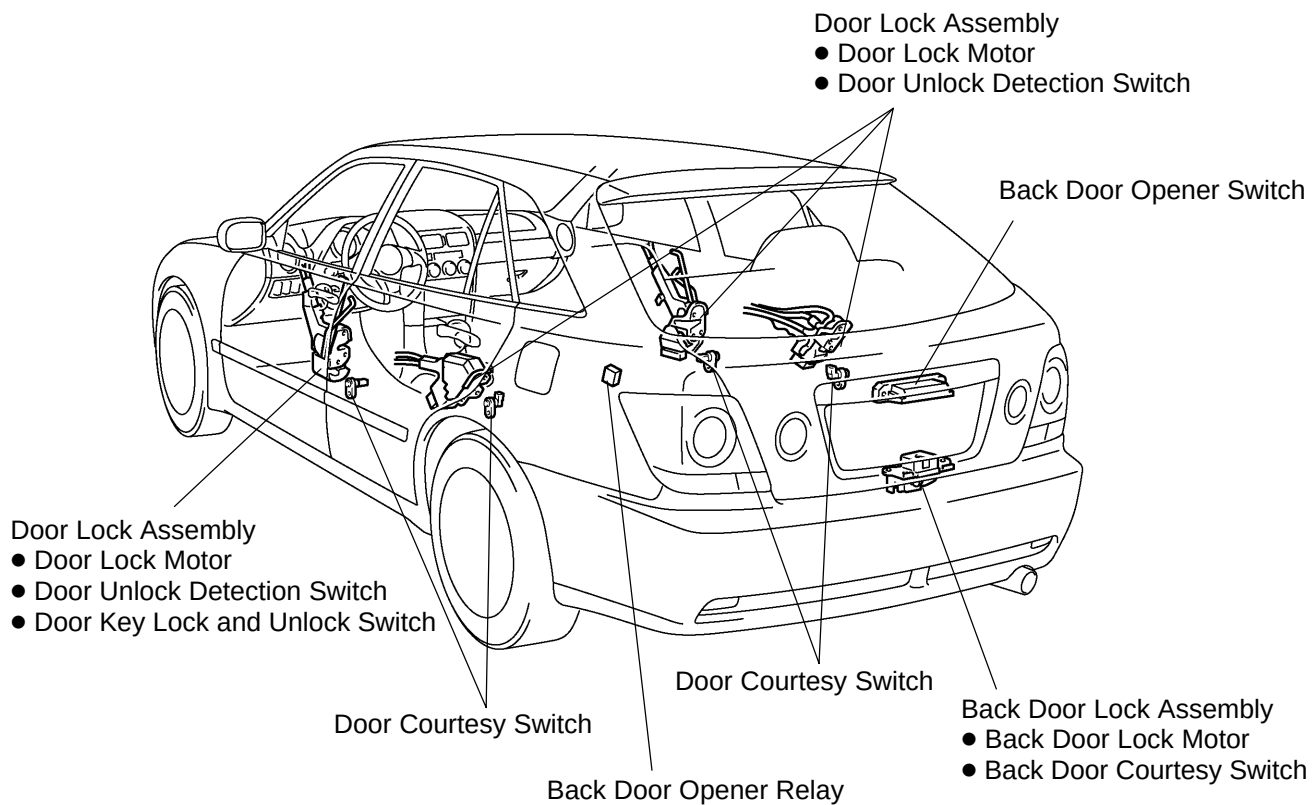Wagon:

C

I27821