


REMOVAL

HINT:

A bolt without a torque specification is shown in the standard bolt chart. (see page [SS-2](#))


1. **REMOVE REAR SEAT CUSHION** (See page [BO-204](#))
2. **REMOVE SIDE SEATBACK ASSEMBLY**
(See page [BO-204](#))
3. **REMOVE REAR SEAT FLOOR BOARD NO. 4**
 - (a) Remove the seat back board carpets.
 - (b) Remove the 2 bolts and rear floor board.
4. **REMOVE DECK FLOOR BOX FRONT**
 - (a) Remove the 2 bolts and the 2 rope hook assemblies.
 - (b) Remove the 2 bolts and 2 tether anchor brackets.
 - (c) Remove the restraint seat tether anchor cover.
 - (d) Remove the deck floor box front.
5. **REMOVE DECK BOARD NO. 2**
6. **REMOVE REAR FLOOR BOARD NO. 2**
7. **REMOVE REAR FLOOR BOARD NO. 3**
8. **REMOVE TONNEAU COVER ASSEMBLY**

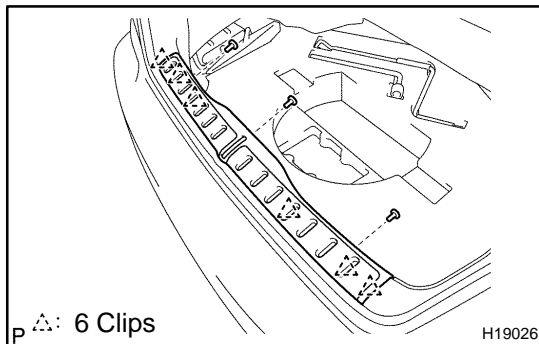

9. **REMOVE REAR FLOOR FINISH PLATE**
 - (a) Remove the 2 bolts and the 2 rope hook assemblies.
 - (b) Remove the 3 clips.
 - (c) Using a screwdriver, remove the rear floor finish plate.

HINT:

Tape the screwdriver tip before use.

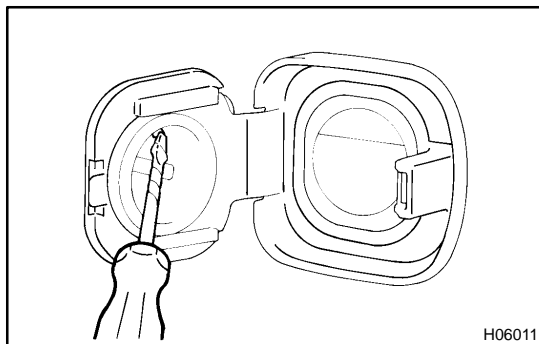


10. **RH side:**
REMOVE ACCESSORY SOCKET

- (a) Using a screwdriver, disengage the claw on the accessory socket cover from the hole in the accessory socket, then pull out the accessory socket approx. 15 mm (0.59 in.).

HINT:

Tape the screwdriver tip before use.

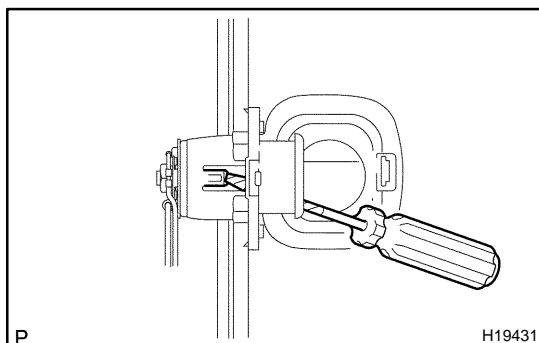


- (b) Using a screwdriver, disengage the claw on the accessory socket cover from the body and remove the accessory socket and cover as a unit.

HINT:

Tape the screwdriver tip before use.


- (c) Disconnect the connector.
- (d) Disassemble the accessory socket from the socket cover.

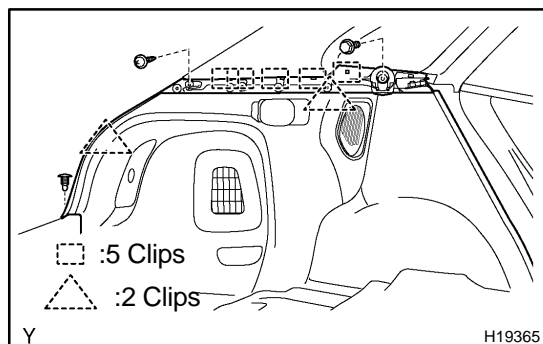**11. REMOVE DECK TRIM SIDE PANEL ASSEMBLY**

- (a) Remove the 2 bolts and 2 floor hooks.
- (b) Remove the screw, bolt and clip.
- (c) Using a screwdriver, remove the deck trim side panel assembly, then disconnect the connector.

HINT:

Tape the screwdriver tip before use.

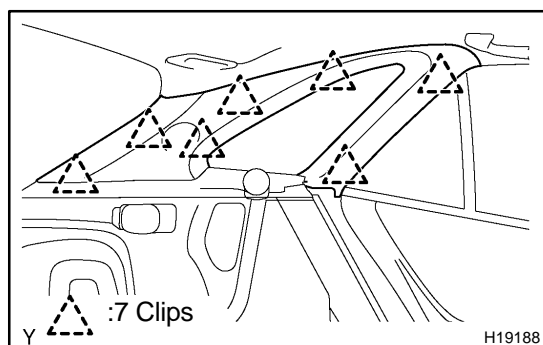**12. REMOVE ROOF SIDE INNER GARNISH**

Using a screwdriver, remove the roof side inner garnish.

HINT:


Tape the screwdriver tip before use.


13. REMOVE QUARTER WINDOW GLASS

- (a) Using a knife, cut off the moulding as shown in the illustration.

NOTICE:**Do not damage the body with a knife.**

- (b) Disconnect the connector.

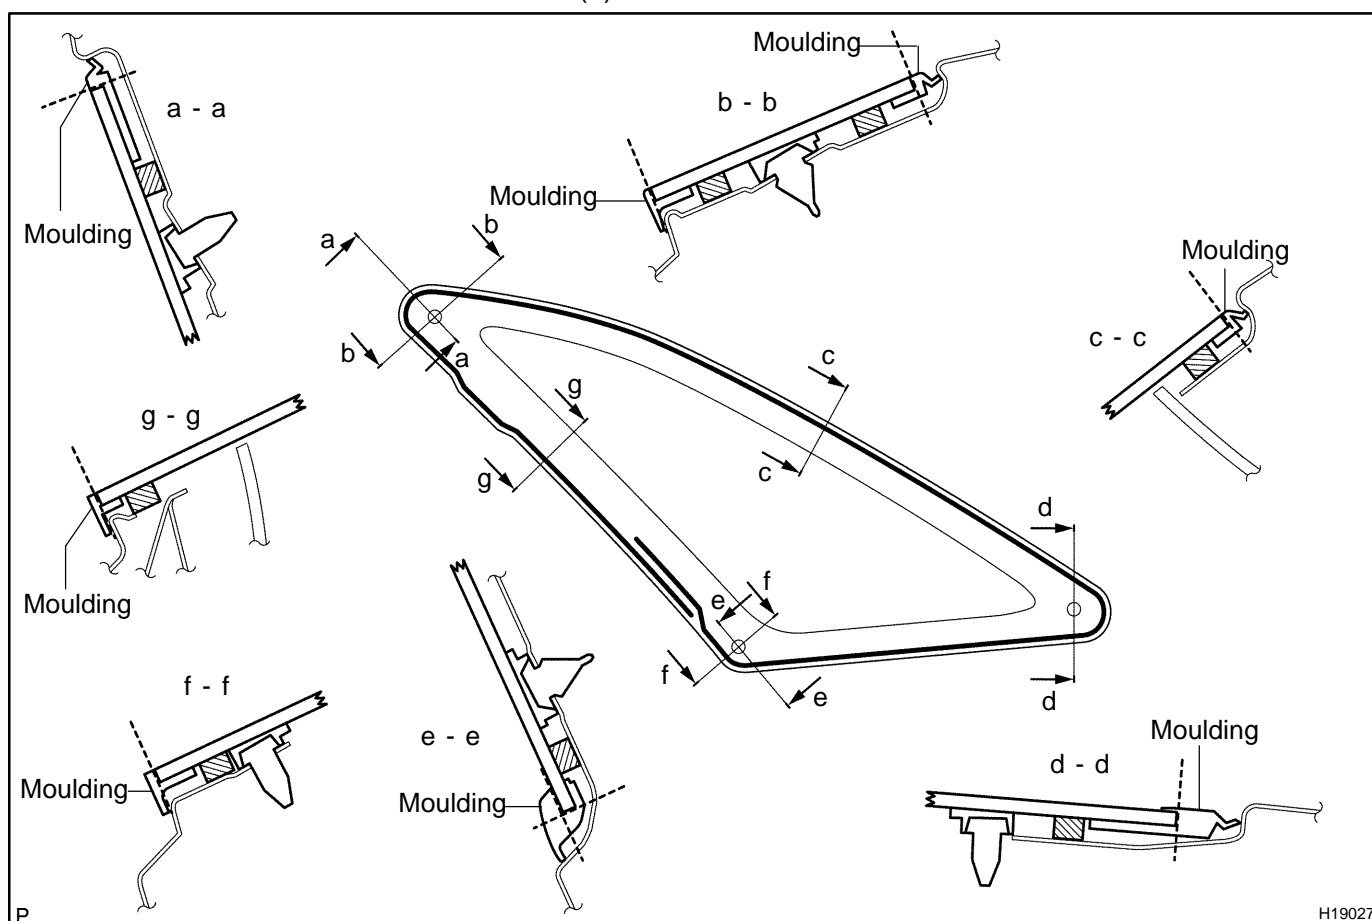

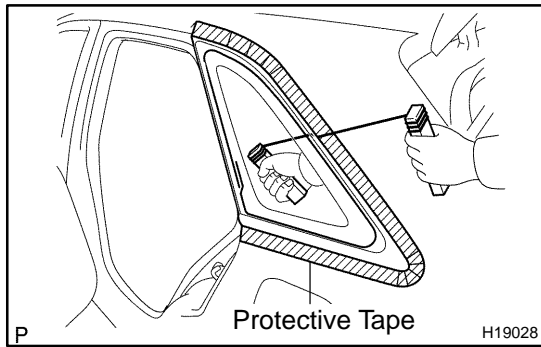


- (c) Push a piano wire through from the interior.
- (d) Tie both wire ends to wooden blocks or similar object.

HINT:

Apply protective tape to the outer surface to keep the surface from being scratched.

NOTICE:


When separating the glass, take care not to damage the paint and exterior.

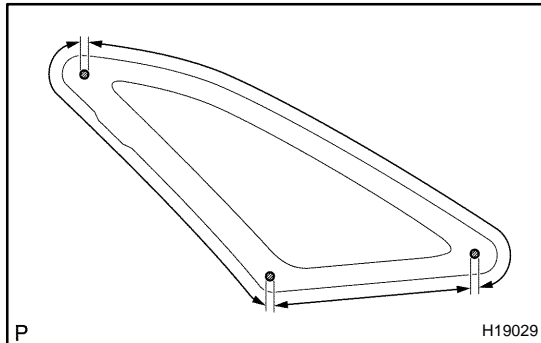

- (e) Cut the adhesive by pulling the piano wire around it.

HINT:

Cut the adhesive areas as shown in the illustration, leaving the adhesive where the clips are.

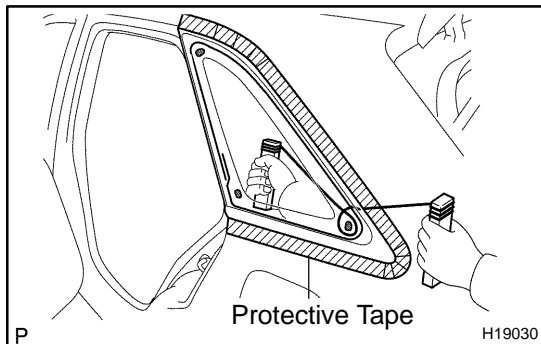

- (f) Push the piano wire through as shown in the illustration, and cut off the adhered part to the clips.

- (g) Remove the glass.

NOTICE:

Leave as much of the adhesive on the body as possible when cutting off the glass.