


## ADJUSTMENT

### HINT:

Since the centering bolt is used as a hood hinge and hood lock set bolt, the hood and hood lock cannot be adjusted.

Substitute the bolt with a washer for the centering bolt.

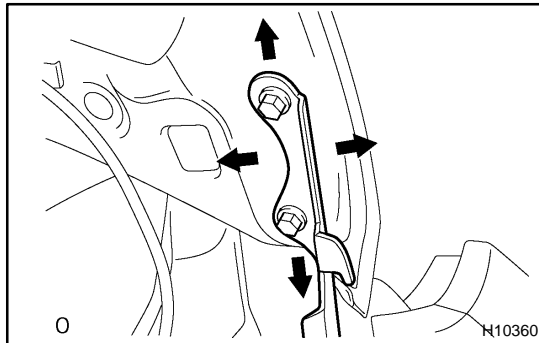

### 1. ADJUST HOOD IN FORWARD/REARWARD

Adjust the hood by loosening the hood side hinge bolts.


**Torque: 13 N·m (133 kgf·cm, 10 ft·lbf)**

### 2. ADJUST HOOD IN VERTICAL DIRECTIONS

(a) Remove the bolts and increase or decrease the number of washers between the hinge and the hood.


(b) Install the bolts again.

**Torque: 13 N·m (133 kgf·cm, 10 ft·lbf)**

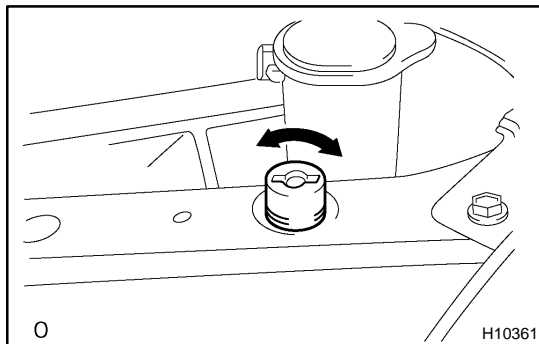

### 3. ADJUST FRONT EDGE OF HOOD IN VERTICAL DIRECTION

Adjust the hood by turning the cushions.

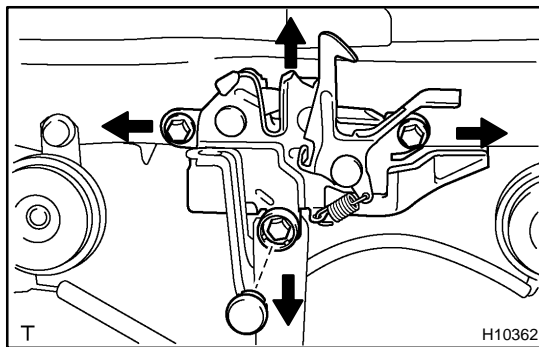

### 4. ADJUST HOOD LOCK

(a) Remove the screw, 2 clips and radiator grille.

(b) Using a screwdriver, remove the hood lock bolt cap.

### HINT:

Tape the screwdriver tip before use.

(c) Adjust the hood lock by loosening the bolts.

**Torque: 8.0 N·m (82 kgf·cm, 71 in·lbf)**