


## REMOVAL

### HINT:

A bolt without a torque specification is shown in the standard bolt chart. (see page [SS-2](#))

1. **Sedan type:**  
**REMOVE ROOF HEADLINING** (See page [BO-156](#))
2. **Wagon type:**  
**REMOVE ROOF HEADLINING** (See page [BO-164](#))

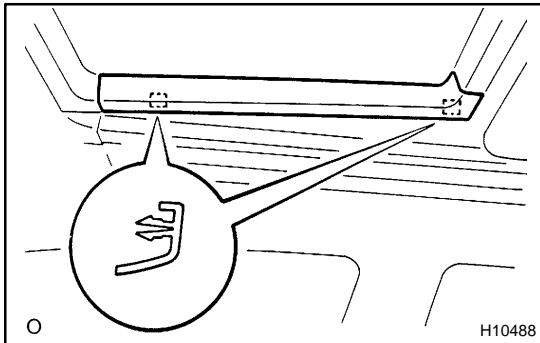


### 3. REMOVE SLIDING ROOF SIDE GARNISH

- (a) Using a screwdriver, remove the garnish.

### HINT:

Tape the screwdriver tip before use.

- (b) Employ the same manner described above to the other side.

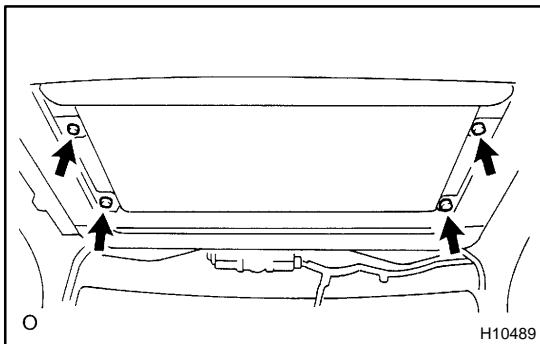

### 4. REMOVE SLIDING ROOF GLASS ASSEMBLY

- (a) Using a torx wrench, remove the 4 nuts.

**Torque: 5.5 N·m (56 kgf·cm, 49 in.-lbf)**


- (b) Pull the glass upward to remove it.

### 5. REMOVE SLIDING ROOF FRONT AND REAR GARNISHES

Using a screwdriver, remove the front and rear garnishes.

### HINT:

Tape the screwdriver tip before use.

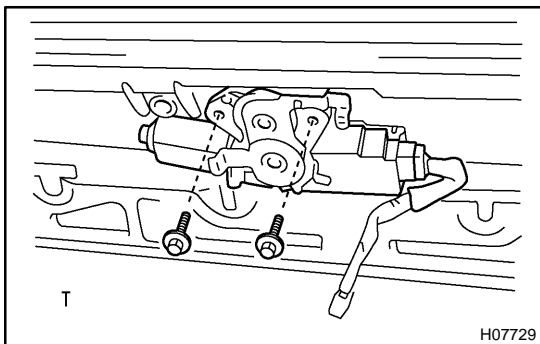


### 6. REMOVE DRIVE GEAR

### NOTICE:

**Remove the drive gear with the sliding roof fully closed.**


- (a) Disconnect the connector.
- (b) Remove the 2 bolts and drive gear.

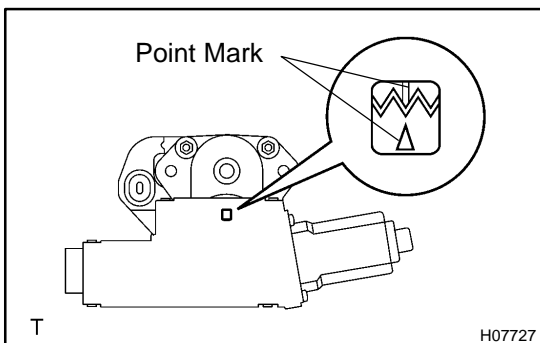

- (c) Turn the drive gear to align the point marks as shown in the illustration.

### NOTICE:

**At the time of installation, if the sliding roof position and drive gear fully closed position are not matched, the sliding roof does not operate normally.**

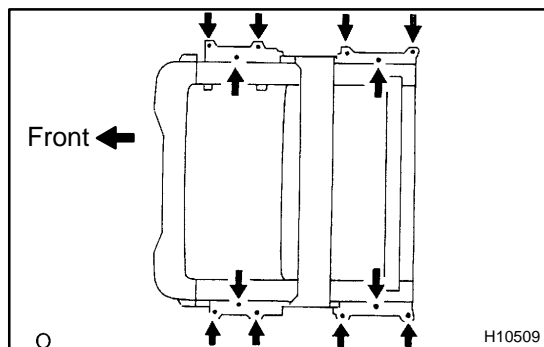

## 7. REMOVE SLIDING ROOF BRACKET

- (a) Remove the 3 bolts and sliding roof bracket.  
**Torque: 5.5 N·m (56 kgf·cm, 49 in.-lbf)**
- (b) Employ the same manner described above to the other sides.

## 8. REMOVE SLIDING ROOF HOUSING

- (a) Disconnect the 4 drain hoses from the housing.
- (b) Disengage the wire harness clamps.
- (c) Remove the 6 nuts, then remove the housing as shown in the illustration.

**Torque: 5.5 N·m (56 kgf·cm, 49 in.-lbf)**

