

DISASSEMBLY

1. REMOVE SIDE DEFROSTER DUCT


Remove the screw, then disconnect the side defroster duct as shown in the illustration.

2. REMOVE NO. 2 SIDE DEFROSTER NOZZLE DUCT

Remove the screw and side defroster nozzle duct.


3. REMOVE DEFROSTER NOZZLE ASSEMBLY

Remove the 3 screws and defroster nozzle assembly.

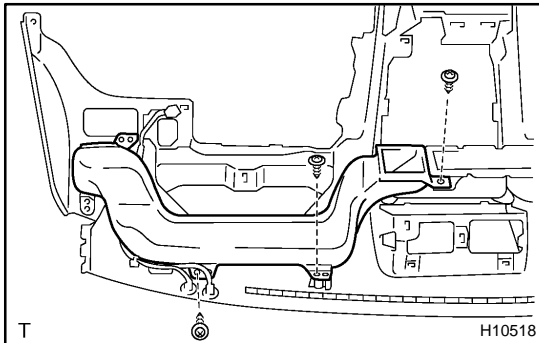


4. REMOVE NO. 1 HEATER TO REGISTER DUCT

Remove the 3 screws and heater to register duct.

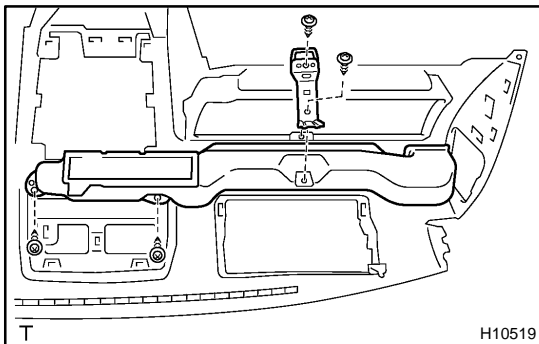


5. REMOVE NO. 2 HEATER TO REGISTER DUCT

- Remove the 2 screws and center bracket.
- Remove the 2 screws and heater to register duct.

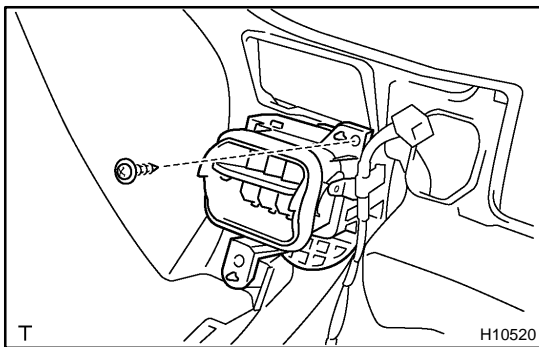

6. REMOVE NO. 1 REGISTER AND NO. 2 REGISTER

Remove the screw and register as shown in the illustration.

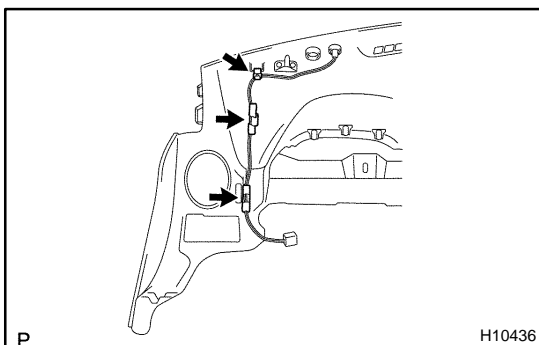


7. REMOVE NO. 2 INSTRUMENT PANEL WIRE

- Disconnect the connectors.
- Disengage the wire harness clamps and remove the instrument panel wire.

8. REMOVE SOLAR SENSOR

9. REMOVE LIGHT CONTROL SWITCH SENSOR AND HOLE COVER

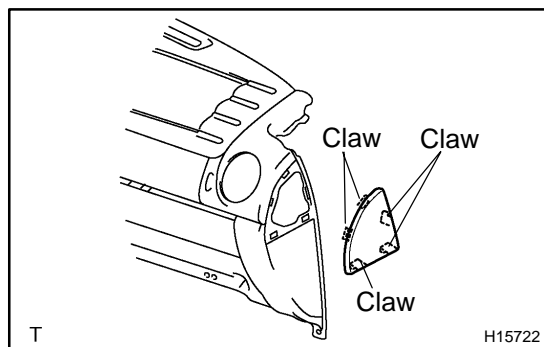**10. REMOVE INSTRUMENT SIDE PANEL**

Using a screwdriver, disengage the 5 claws and remove the instrument side panel.

HINT:

Tape the screwdriver tip before use.

11. REMOVE NO. 1 PINS

Remove the 4 screws and pins.

12. REMOVE INSTRUMENT PANEL END PAD

- (a) Using a heat light, heat the end pad between 20 to 30°C (68 to 86°F).

NOTICE:

Do not heat the end pad excessively.

- (b) Remove the end pad.

HINT:

When replacing the end pad, use a new pad.