


## REMOVAL

### HINT:

A bolt without a torque specification is shown in the standard bolt chart. (see page [SS-2](#) )

1. **REMOVE REAR SEAT CUSHION** (See page [BO-204](#) )
2. **REMOVE SIDE SEATBACK ASSEMBLY**(See page [BO-204](#) )

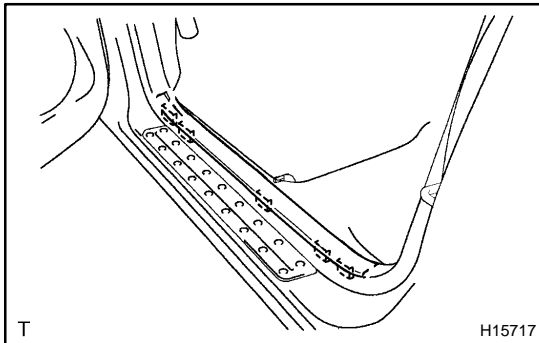


### 3. REMOVE FRONT DOOR INSIDE SCUFF PLATE

- (a) Using a screwdriver, remove the front door inside scuff plate as shown in the illustration.

### HINT:

Tape the screwdriver tip before use.

- (b) Employ the same manner described above to the other side.

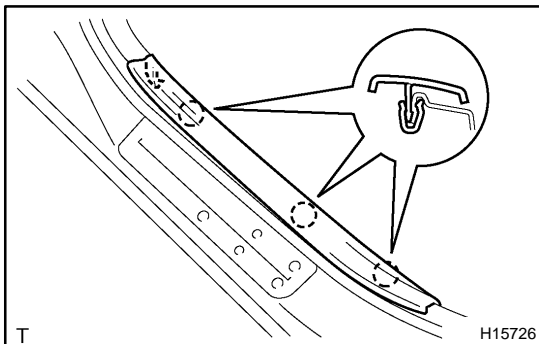


### 4. REMOVE REAR DOOR INSIDE SCUFF PLATE

- (a) Using a screwdriver, remove the rear door inside scuff plate as shown in the illustration.

### HINT:

Tape the screwdriver tip before use.

- (b) Employ the same manner described above to the other side.

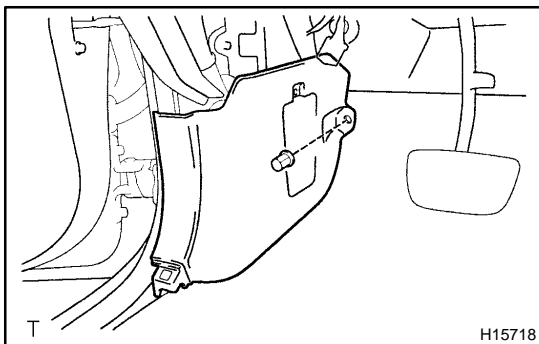


### 5. REMOVE COWL SIDE TRIM BOARD

- (a) Remove the clip and cowl side trim board.
- (b) Employ the same manner described above to the other side.

### 6. REMOVE FRONT DOOR OPENING TRIMS

### 7. REMOVE REAR DOOR OPENING TRIMS

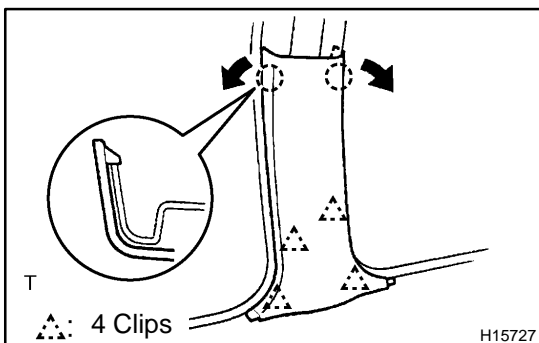


### 8. REMOVE CENTER PILLAR LOWER GARNISH

- (a) Using a screwdriver, remove the center pillar lower garnish.

### HINT:

Tape the screwdriver tip before use.

- (b) Employ the same manner described above to the other side.

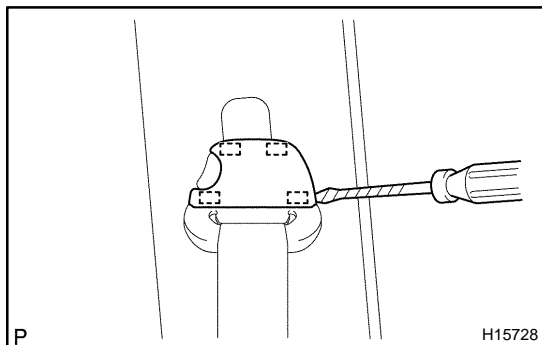

### 9. REMOVE FRONT SEAT OUTER BELT SHOULDER ANCHOR

- (a) Using a screwdriver, remove the anchor cap.


HINT:

Tape the screwdriver tip before use.

- (b) Remove the bolt and front seat outer belt shoulder anchor.

**Torque: 42 N·m (428 kgf-cm, 31 ft-lbf)**

- (c) Employ the same manner described above to the other side.

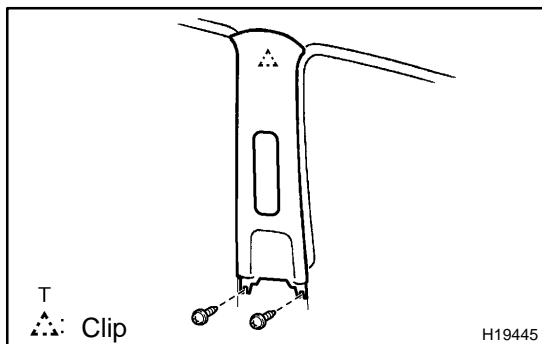

### 10. REMOVE CENTER PILLAR GARNISH

- (a) Remove the 2 screws.

- (b) Using a screwdriver, remove the center pillar garnish.

HINT:

Tape the screwdriver tip before use.

- (c) Employ the same manner described above to the other side.

### 11. REMOVE REAR SEAT CUSHION (See page [BO-204](#) )

### 12. REMOVE REAR SIDE SEAT BACK (See page [BO-204](#) )

### 13. REMOVE REAR SEAT FLOOR BOARD NO.4

- (a) Remove the seat back board carpets.

- (b) Remove the 2 bolts and rear floor board No.4.

### 14. REMOVE DECK FLOOR BOX FRONT

- (a) Remove the 2 bolts and 2 rope hook assemblies.

- (b) Remove the 2 bolts and 2 tether anchor brackets.

**Torque: 21 N·m (214 kgf-cm, 15ft-lbf)**

- (c) Remove the restraint seat tether anchor cover.


- (d) Remove the deck floor box front.

### 15. REMOVE DECK BOARD NO.2

### 16. REMOVE REAR FLOOR BOARD NO.2

### 17. REMOVE REAR FLOOR BOARD NO.3

### 18. REMOVE TONNEAU COVER ASSEMBLY

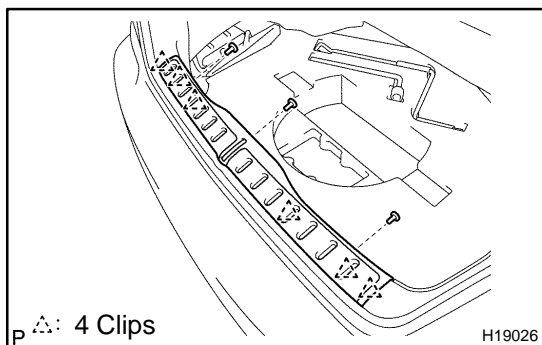

### 19. REMOVE REAR FLOOR FINISH PLATE


- (a) Remove the 2 bolts and 2 rope hook assemblies.

- (b) Remove the 3 clips.

- (c) Using a screwdriver, remove the rear floor finish plate.

HINT:

Tape the screwdriver tip before use.

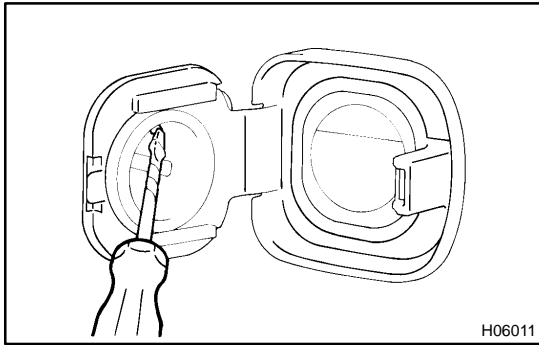


## 20. RH Side: REMOVE ACCESSORY SOCKET

- (a) Using a screwdriver, disengage the claw on the accessory socket cover from the hole in the accessory socket, then pull out the accessory socket approx. 10 mm (0.39 in.).

HINT:

Tape the screwdriver tip before use.

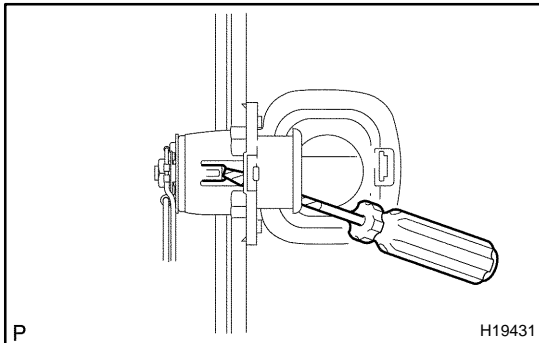


- (b) Using a screwdriver, disengage the claw on the accessory socket cover from the body and remove the accessory socket and cover as a unit.

HINT:

Tape the screwdriver tip before use.

- (c) Disconnect the connector.  
(d) Disassemble the accessory socket from the socket cover.

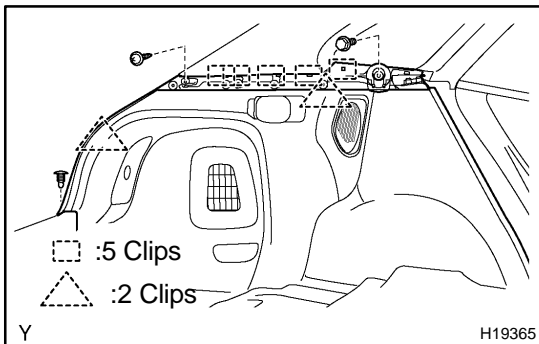


## 21. REMOVE DECK TRIM SIDE PANEL ASSEMBLY

- (a) Remove the 2 bolts and 2 floor hooks.  
(b) Remove the screw, bolt and clip.  
(c) Using a screwdriver, remove the deck trim side panel assembly then disconnect the connector.

HINT:

Tape the screwdriver tip before use.

- (d) Employ the same manner described above to the other side.

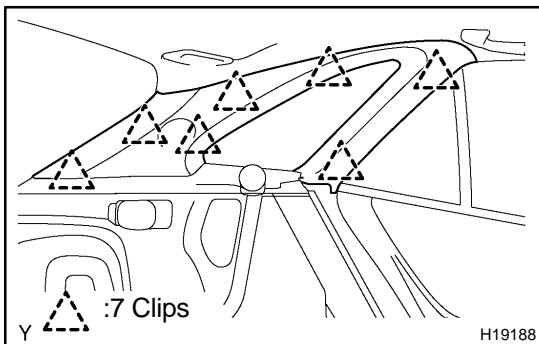


## 22. REMOVE ROOF SIDE INNER GARNISH

- (a) Using a screwdriver, remove the roof side inner garnish.

HINT:

Tape the screwdriver tip before use.

- (b) Employ the same manner described above to the other side.

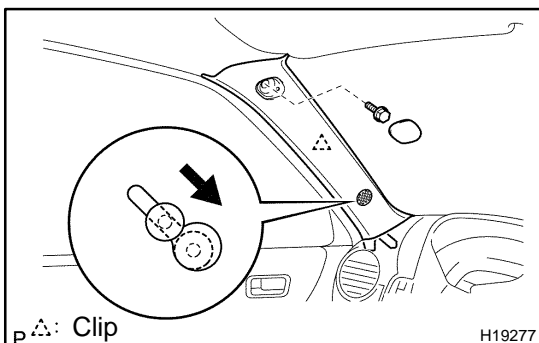


## 23. REMOVE FRONT PILLAR GARNISH

- (a) Using a screwdriver, remove the front pillar garnish cover.


HINT:

Tape the screwdriver tip before use.

- (b) Remove the bolt.  
(c) Using a screwdriver, remove the front pillar garnish.  
(d) Remove the bolt.

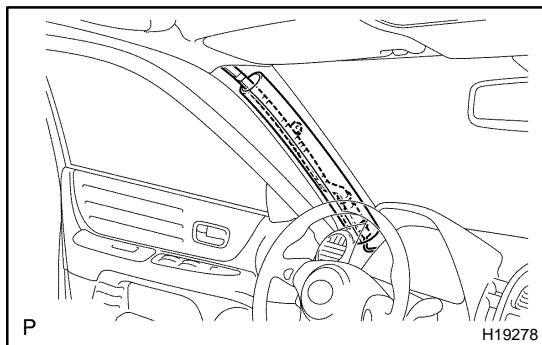


- (e) Pack the airbag with protection cover.
- (f) Employ the same manner described above to the other side.

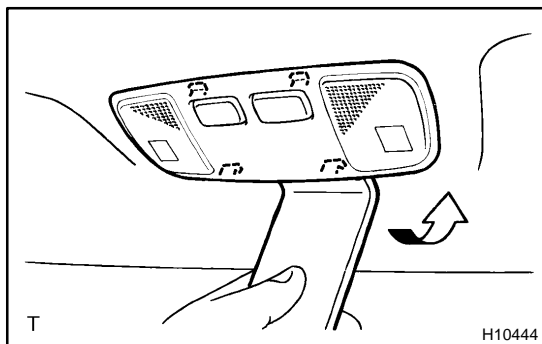


**24. w/o Sliding roof:  
REMOVE MAP LIGHT ASSEMBLY**

- (a) Using a moulding remover, remove the lens.
- (b) Remove the 2 screws and map light assembly.
- (c) Disconnect the connector.

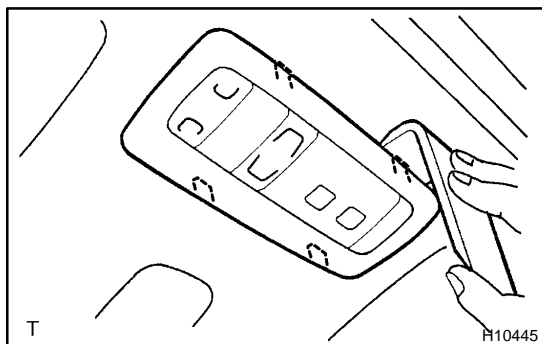

**25. w/ Sliding roof:  
REMOVE MAP LIGHT ASSEMBLY**

- (a) Using a moulding remover, remove the cover.
- (b) Remove the 2 screws and map light assembly.
- (c) Disconnect the connector.

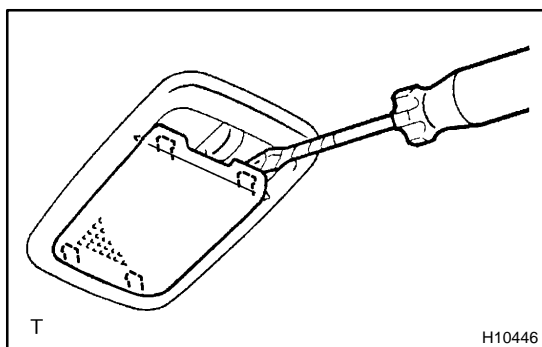

**26. REMOVE ROOM LIGHT ASSEMBLY**


- (a) Using a screwdriver, remove the lens.

HINT:

Tape the screwdriver tip before use.

- (b) Remove the 2 screws and room light assembly.
- (c) Disconnect the connector.

**27. w/ Sliding Roof:  
REMOVE SLIDING ROOF OPENING TRIM**

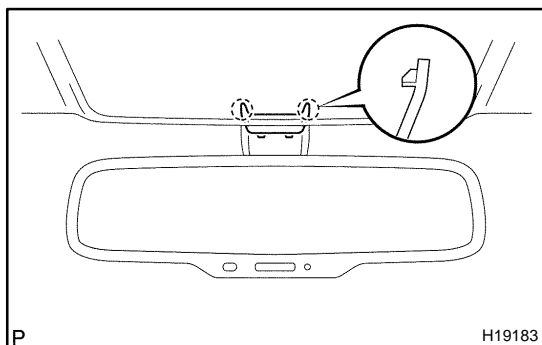


**28. REMOVE INNER REAR VIEW MIRROR**

- (a) Using a screwdriver, remove the inner rear view mirror stay holder cover.

HINT:

Tape the screwdriver tip before use.

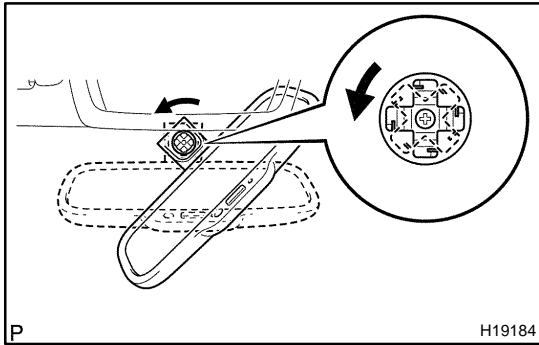

- (b) Electro Chromic Inner Mirror:  
Disconnect the connector.
- (c) Remove the mirror assembly by turning the stay part of the mirror counterclockwise.

### 29. REMOVE ASSIST GRIPS

- (a) Using a screwdriver, remove the caps.

HINT:

Tape the screwdriver tip before use.

- (b) Remove the 6 bolts and 3 assist grips.

### 30. REMOVE 2 SUN VISOR


- (a) Remove the 4 screws and pull the sun visors downward.
- (b) Disconnect the connectors.

### 31. REMOVE 2 SUN VISOR HOLDER

Remove the 2 screws and 2 holders.

### 32. REMOVE SHOULDER BELT ANCHOR COVER UPPER

Remove the 2 screws and shoulder belt anchor cover upper.

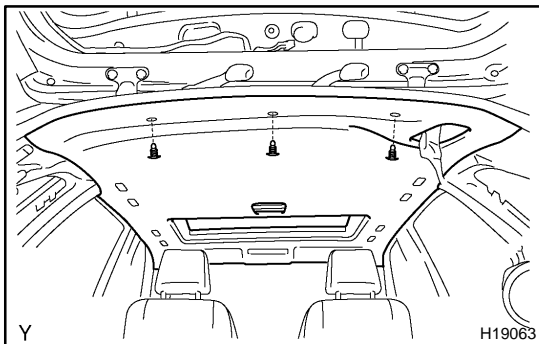

### 33. REMOVE ROOF HEADLINING

- (a) Remove the 3 clips.
- (b) Pull the roof headlining downward to remove it.