



REMOVAL

HINT:

A bolt without a torque specification is shown in the standard bolt chart. (see page [SS-2](#))

1. REMOVE SEAT TRACK COVERS

Using a screwdriver, remove the 4 seat track covers.

HINT:

Tape the screwdriver tip before use.

2. REMOVE FRONT SEAT

- (a) Remove the 4 bolts.
- (b) Disconnect the connectors.
- (c) Remove the front seat.

NOTICE:

Be careful not to damage the body.