



DISASSEMBLY


1. REMOVE HEADREST
2. REMOVE POWER SEAT SWITCH KNOB

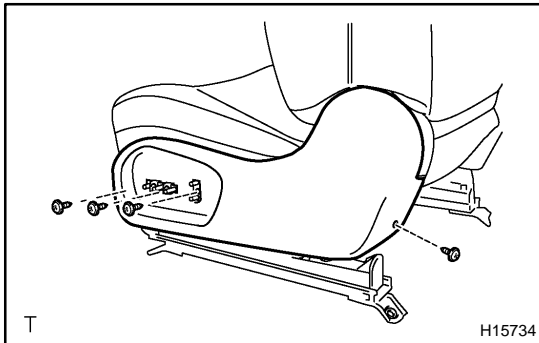


3. **REMOVE FRONT SEAT CUSHION OUTER SHIELD**
Remove the 4 screws and front seat cushion outer shield.

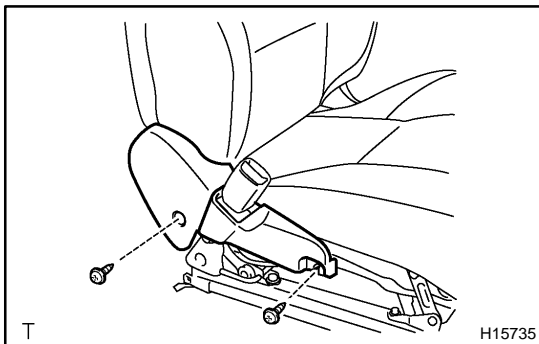


4. **REMOVE FRONT SEAT CUSHION INNER SHIELD**
Remove the 2 screws and front seat cushion inner shield.

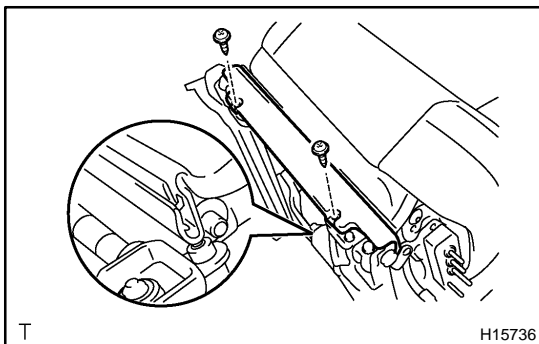

5. **REMOVE SEAT CUSHION FRONT SHIELD**
 - (a) Remove the 2 screws.
 - (b) Unlatch the seat cushion cover hook, then remove the seat cushion front shield.

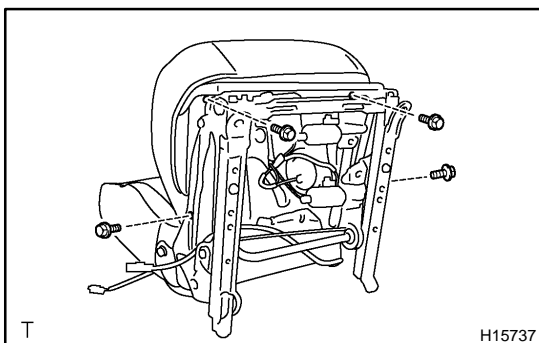


6. **REMOVE SEAT CUSHION ASSEMBLY**
 - (a) Disconnect the connectors and unlatch the wire harness clamps.
 - (b) Remove the 4 bolts and seat cushion assembly with wire harness.
 - (c) Unlatch the wire harness clamps to remove the wire harness from seat cushion assembly.

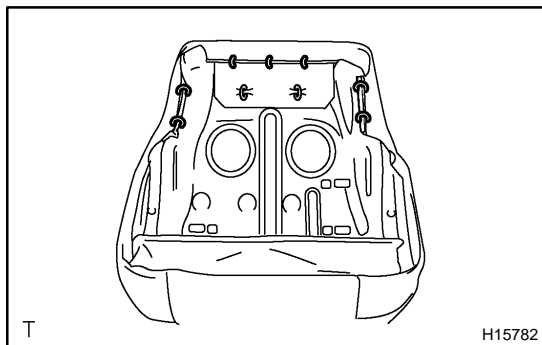

7. REMOVE SEAT CUSHION COVER

- Remove the hog rings.
- Unlatch the seat cushion cover hooks and remove the seat cushion frame from the seat cushion cover with pad.
- Remove the hog rings and seat cushion cover from the seat cushion pad.

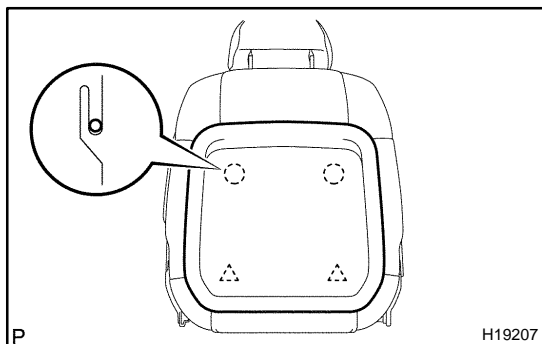

8. w/ Table:

REMOVE SEATBACK BOARD

Using a screwdriver, remove the seatback board.

HINT:


Tape the screwdriver tip before use.

9. REMOVE SEATBACK ASSEMBLY


- Remove the hog rings.
- Turn the seatback cover over, then remove the hog rings.
- Remove the 4 seatback assembly set bolts.

NOTICE:

Be careful not to pull the side airbag assembly wire harness.

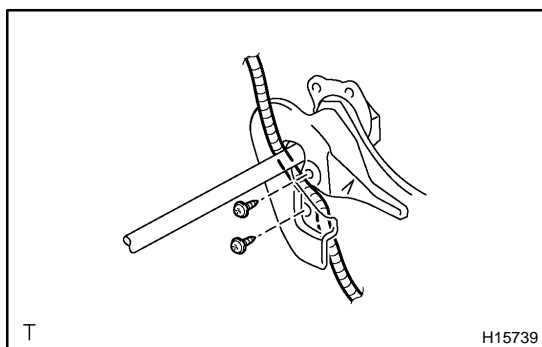

- Remove the 2 screws and reclining adjuster inside cover and employ the same manner described above to the other side.
- Disengage the side airbag assembly wire harness from the reclining adjuster inside cover, then remove the seatback assembly.

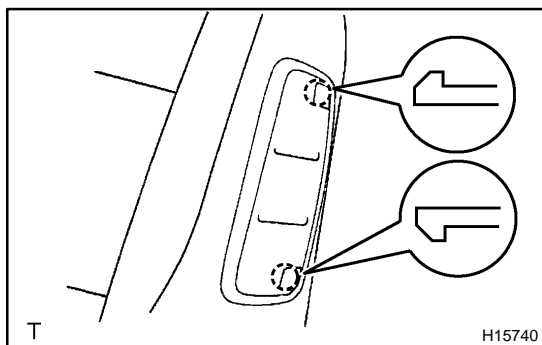


10. REMOVE SEATBACK COVER


- Using a screwdriver, remove the No. 1 and No. 2 airbag covers.

HINT:

Tape the screwdriver tip before use.

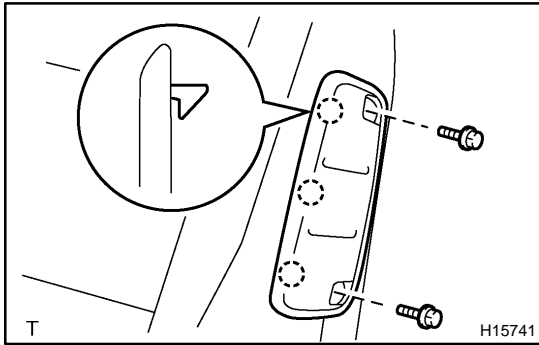


- (b) Remove the 2 bolts.
- (c) Slide the airbag door upward to remove it.

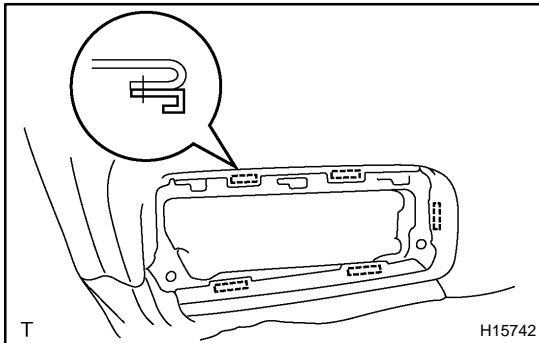

- (d) Disengage the seatback cover hooks around the side airbag assembly.
- (e) w/ Table:
Using a screwdriver, remove the reclining adjuster release handle and employ the same manner described above to the other side.

HINT:


Tape the screwdriver tip before use.

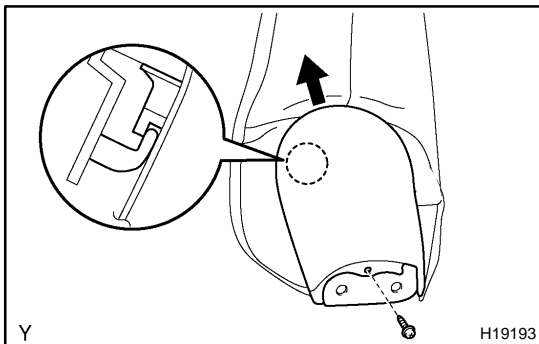


- (f) w/ Table:
Remove the screw and front seatback shield and employ the same manner described above to the other side.
- (g) w/ Table:
Remove the 2 bolts and front seatback lock and employ the same manner described above to the other side.
- (h) Remove the hog rings, headrest supports and seatback cover.
- (i) Remove the hog rings, headrest supports and seatback cover as shown in the illustration.

11. REMOVE FRONT SEAT INNER BELT


Remove the bolt, washer and front seat inner belt.

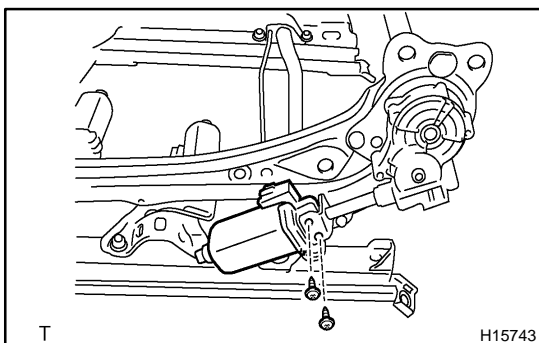**12. REMOVE RECLINING MOTOR**


Remove the 2 screws, then disconnect the reclining motor.

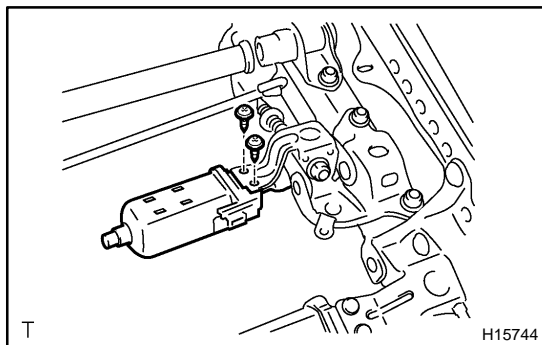**13. REMOVE LIFTER MOTOR**


Remove the 2 screws, then disconnect the lifter motor.

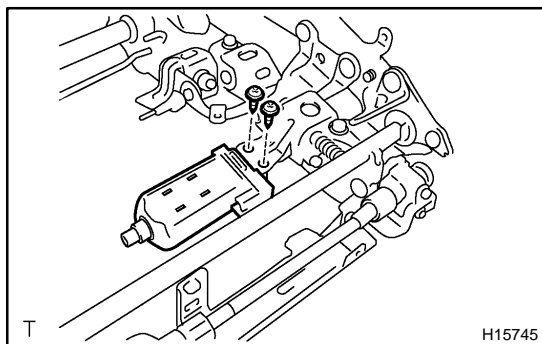**14. REMOVE FRONT VERTICAL MOTOR**

Remove the 2 screws, then disconnect the front vertical motor.

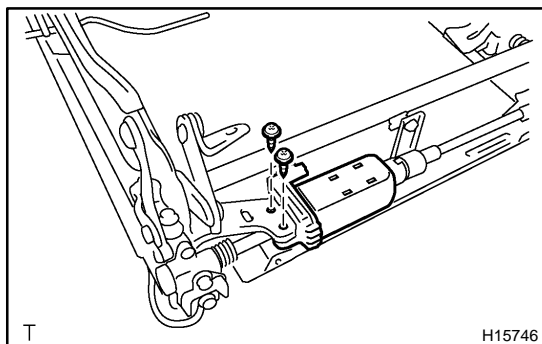**15. REMOVE SLIDING MOTOR**

Remove the 2 screws, then disconnect the sliding motor.

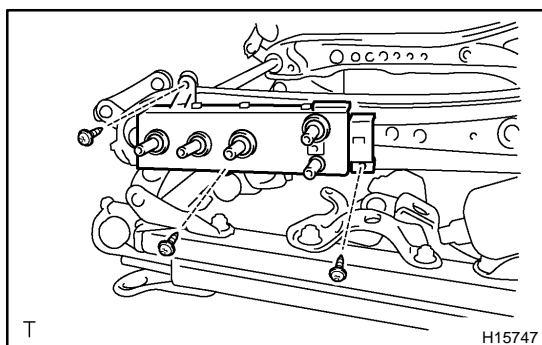**16. REMOVE POWER SEAT SWITCH**

Remove the 3 screws and power seat switch.