

INSTALLATION

1. INSTALL FRONT SEAT

- (a) Mount the front seat to the vehicle.

NOTICE:


Be careful not to damage the body.

- (b) Connect the connectors.

NOTICE:

When the wiring connector of the side airbag assembly is disconnected and the ignition switch is at ON or ACC position, DTC will be recorded. To clear DTC, see page [DI-607](#).

- (c) Slide the front seat to the rearmost position .

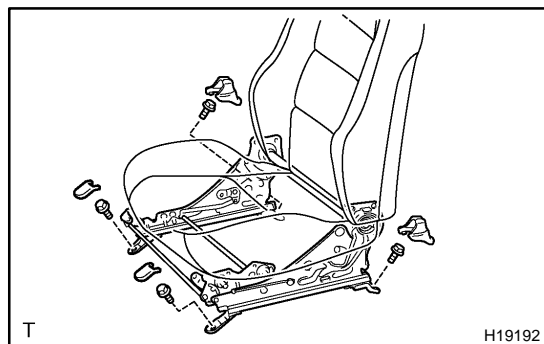

- (d) Temporarily tighten the bolts on the front side. Then, tighten them to the final torque starting from the inner side.

Torque: 38 N·m (387 kgf-cm, 28 ft-lbf)

- (e) Slide the front seat to the most front position.

- (f) Temporarily tighten the bolts on the rear side. Then, tighten them to the final torque starting from the inner side.

Torque: 38 N·m (387 kgf-cm, 28 ft-lbf)

2. INSTALL SEAT TRACK COVERS