

## REMOVAL

### HINT:


A bolt without a torque specification is shown in the standard bolt chart. (see page [SS-2](#))

### 1. REMOVE SEAT CUSHION ASSEMBLY

Pull up the front portion of the seat cushion assembly, then remove it.


### NOTICE:

**Hold up the clip base to prevent the cushion frame from being distorted.**

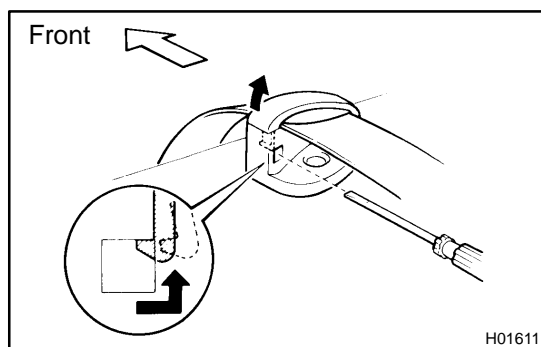

### 2. REMOVE SEATBACK ASSEMBLY

- Using a screwdriver, remove the rear seat belt from the belt guide as shown in the illustration.
- Employ the same manner described above to the other sides.

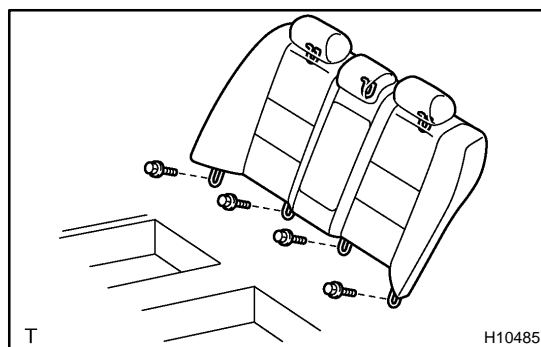

- Remove the 4 bolts, then raise the seatback assembly upward to remove the seatback assembly.

### 3. REMOVE REAR SEAT CENTER ARMREST BOX ASSEMBLY

Remove the 6 bolts and rear seat center armrest box assembly.