


DISASSEMBLY

1. REMOVE HEADRESTS


2. REMOVE REAR SEAT BELT SHOULDER GUIDES

Remove the 4 screws and rear seat belt shoulder guides.

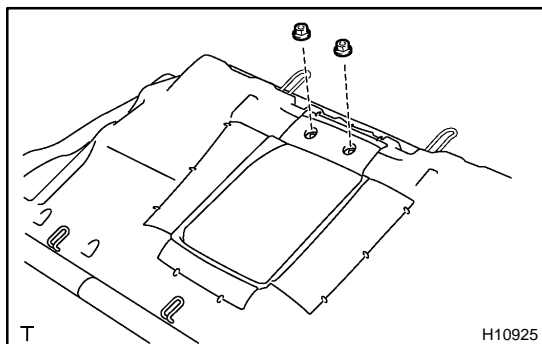


3. REMOVE REAR SEAT CENTER ARMREST

- (a) Remove the 2 nuts and rear seat center armrest with bracket.
- (b) Remove the 2 screws and armrest bracket.

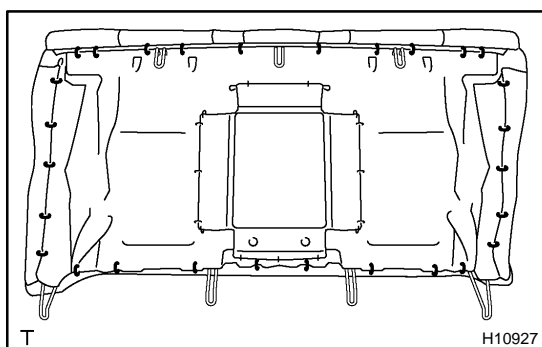


4. REMOVE SEATBACK COVER

- (a) Remove the 4 headrest supports.
- (b) Remove the hog rings on the back of seatback assembly.

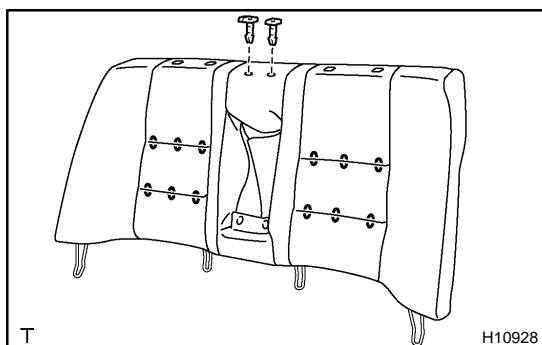


- (c) Remove the center headrest supports.
- (d) Remove the hog rings and seatback cover on the front of seatback assembly.

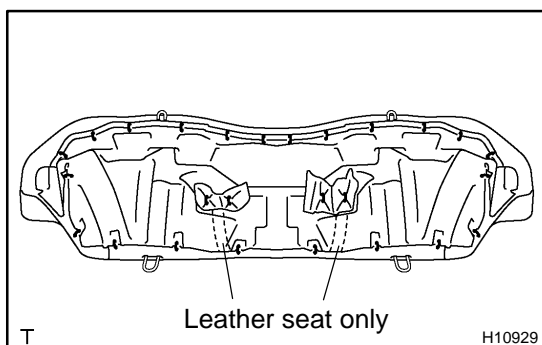

5. REMOVE SEAT CUSHION COVER

- (a) Remove the hog rings on the back of seat cushion assembly.

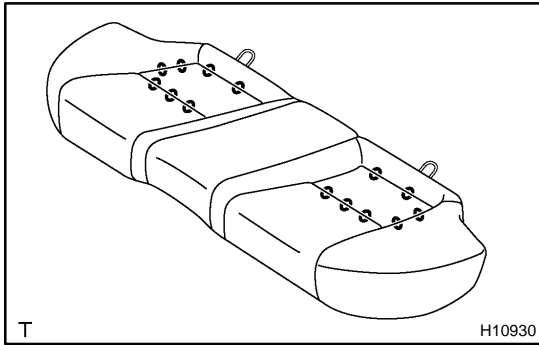

- (b) Remove the hog rings and seat cushion cover on the front of the seat cushion assembly.

6. REMOVE REAR SEAT CENTER ARMREST DOOR, DOOR LOCK, PATCH AND STOPPER

- (a) Remove the rear seat center armrest door from the rear seat center armrest box.
- (b) Remove the 2 screws and door lock.
- (c) Remove the 2 screws and patch.
- (d) Remove the 2 door stoppers.
- (e) Remove the 2 screws, 2 shims and rear seat center armrest door.

7. REMOVE REAR SEAT CENTER ARMREST BRACKETS FROM REAR SEAT CENTER ARMREST BOX

- (a) Using a drill of less than 4.0 mm (0.157 in.), drill out the rivet heads.

HINT:

Gently and vertically put the drill to the rivet, and cut the rivet flanges.

CAUTION:

Take care as the cut rivet is hot.

NOTICE:

Prizing the hole with a drill can lead to damage to the rivet hole or breaking the drill.

- (b) Remove the rear seat center armrest brackets.