

REMOVAL

HINT:


A bolt without a torque specification is shown in the standard bolt chart. (see page [SS-2](#))

1. REMOVE SEAT CUSHION ASSEMBLY

Pull up the front portion of the seat cushion assembly, then remove it.

NOTICE:

Hold up the clip base to prevent the cushion frame from being distorted.

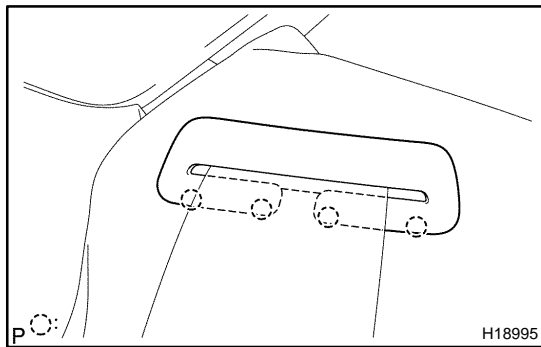

2. REMOVE SIDE SEAT BACK ASSEMBLY

(a) Remove the bolt and floor anchor.


Torque: 42 N·m (428 kgf-cm, 31ft-lbf)

(b) Using a screwdriver, remove the rear seat shoulder belt hole cover.

HINT:

Tape the screwdriver tip before use.

(c) Employ the same manner described above to the other sides.

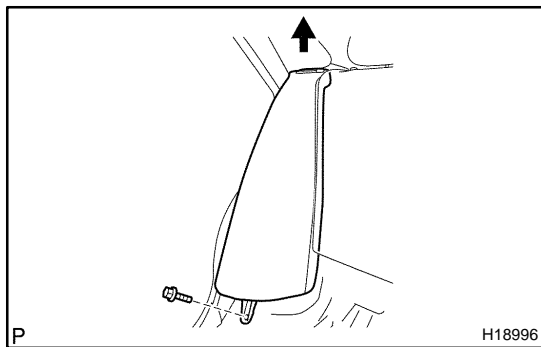

(d) Remove the bolt and side seat back assembly as shown in the illustration.

Torque: 18 N·m (184 kgf-cm, 13ft-lbf)

3. REMOVE REAR SEAT FLOOR BOARD NO.4 (See page [BO-164](#))

4. REMOVE DECK FLOOR BOX FRONT (See page [BO-164](#))

5. REMOVE DECK BOARD NO.2 (See page [BO-164](#))


6. REMOVE REAR FLOOR BOARD NO.2 (See page [BO-164](#))

7. REMOVE REAR FLOOR BOARD NO.3 (See page [BO-164](#))

8. REMOVE TONNEAU COVER ASSEMBLY (See page [BO-164](#))

9. REMOVE REAR FLOOR FINISH PLATE (See page [BO-164](#))

10. REMOVE DECK TRIM SIDE PANEL ASSEMBLY (See page [BO-164](#))

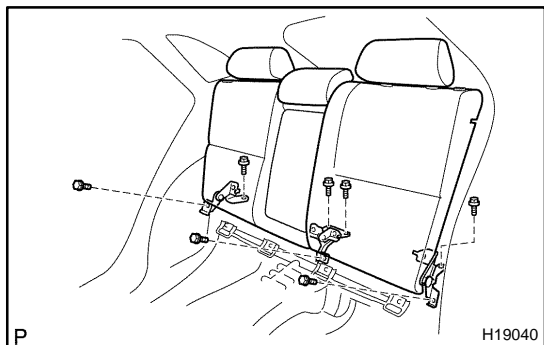**11. REMOVE SEAT BACK ASSEMBLY**

Remove the 7 bolts and seat back assembly.

Torque: 21 N·m (214 kgf-cm, 15 ft-lbf)