



DISASSEMBLY

1. REMOVE REAR SEAT HEADRESTS

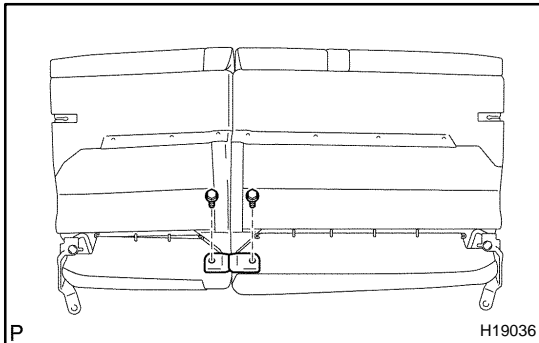

2. REMOVE REAR SEAT BACK CENTER HINGE SUB-ASSEMBLY

Remove the 2 bolts and rear seat center hinge sub-assembly.

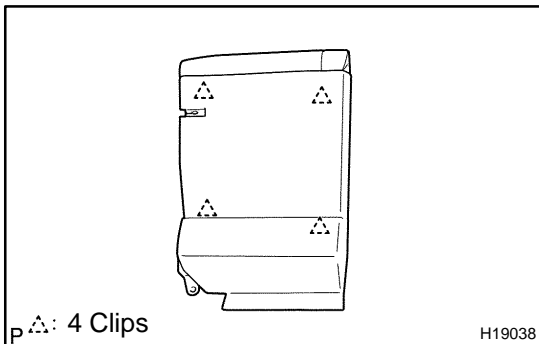

3. REMOVE REAR SEAT BACK BOARD CARPET LH

- Remove the 3 screws and rear seat back lock cover LH.
- Using a screwdriver, remove the seat back board carpet LH.

HINT:


Tape the screwdriver tip before use.

4. REMOVE REAR SEAT BACK COVER LH

- Remove the bolt and rear seat back hinge LH.
- Remove the headrest supports.
- Remove the rear back lock release button.
- Remove the rear seat back stop button grommet.
- Remove the hog rings and rear seat back cover with pad.
- Remove the hog rings and rear seat back cover LH from the seat back pad.

5. REMOVE REAR SEAT BACK LOCK ASSEMBLY LH

Remove the 2 bolts and rear seat back lock assembly.

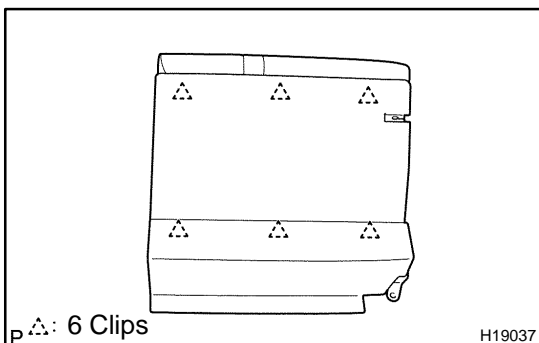


6. REMOVE REAR SEAT BACK BOARD CARPET RH

- Remove the 3 screws and rear seat back lock cover RH.
- Using a screwdriver, remove the rear seat back board carpet RH.

HINT:

Tape the screwdriver tip before use.

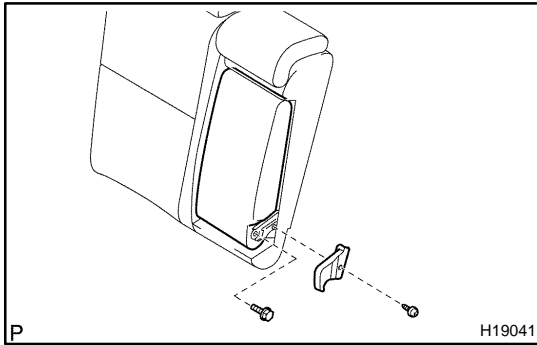**7. REMOVE CENTER ARMREST**

- (a) Remove the screw and center armrest hinge cover.
- (b) Remove the bolt and center armrest.

8. REMOVE REAR SEAT BACK COVER RH

- (a) Remove the bolt and rear seat back hinge RH.
- (b) Remove the headrest supports.
- (c) Remove the rear back lock release button.
- (d) Remove the rear seat back stop button grommet.
- (e) Remove the hog rings and rear seat back cover with pad from the seat back frame.
- (f) Remove the hog rings and rear seat back cover RH from the seat back pad.

9. REMOVE REAR SEAT BACK LOCK ASSEMBLY RH

Remove the 2 bolts and rear seat back lock assembly RH.

10. REMOVE REAR SEAT CUSHION COVER

Remove the hog rings and rear seat cushion cover from the seat cushion pad.