

DISASSEMBLY

HINT:


A bolt without a torque specification is shown in the standard bolt chart. (see page [SS-2](#))

1. REMOVE BACK DOOR TRIM BOARD UPPER

Using a screwdriver, remove the back door trim board upper.

HINT:

Tape the screwdriver tip before use.

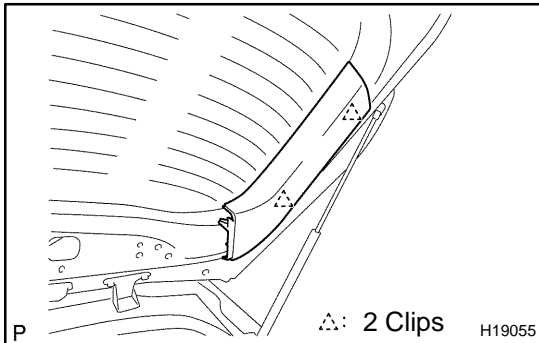


2. REMOVE BACK DOOR TRIM COVERS

- Insert a screwdriver between the back door panel and back door trim cover to pry the cover.

HINT:

Tape the screwdriver tip before use.

- Employ the same manner described above to the other side.

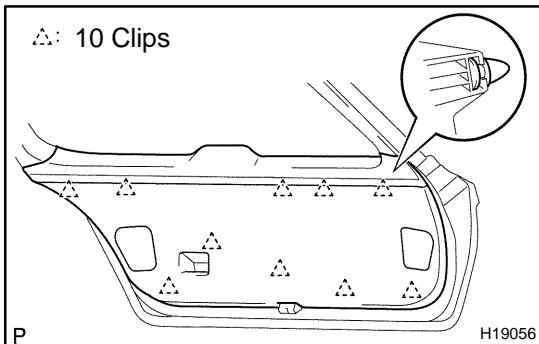


3. REMOVE BACK DOOR TRIM BOARD

- Remove the clip and back door handle.
- Using a screwdriver, remove the back door trim board.


HINT:

Tape the screwdriver tip before use.

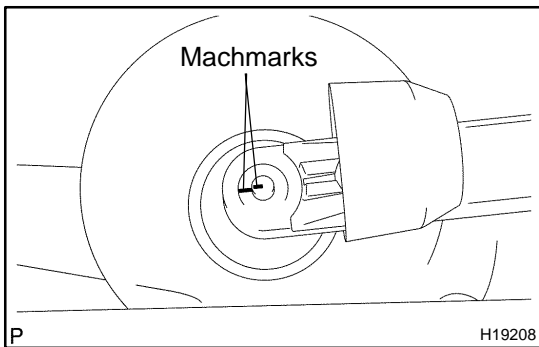

4. REMOVE REAR WIPER ARM

- Open the wiper arm cover.
- Place matchmarks on the wiper arm and wiper motor.
- Remove the nut and rear wiper arm.

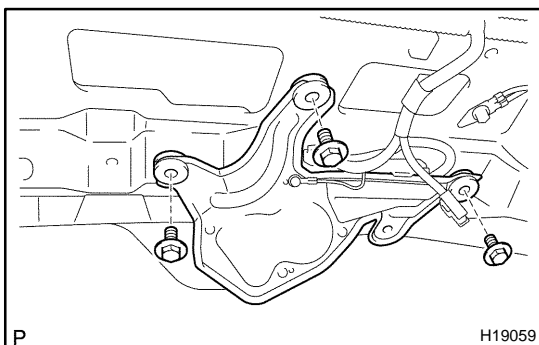


5. REMOVE REAR WIPER MOTOR

- Remove the nut and washer on the outer side of the back door panel.
- Disconnect the connector.
- Remove the 3 bolts and rear wiper motor.

6. REMOVE REAR COMBINATION LIGHT

- Disconnect the connector.
- Remove the nut and rear combination light.
- Employ the same manner described above to the other side.

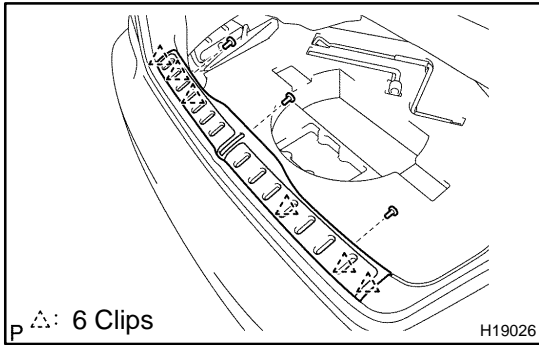


7. REMOVE REAR FLOOR FINISH PLATE

- Remove the 2 bolts and the 2 rope hook assemblies.
- Remove the 3 clips.
- Using a screwdriver, remove the rear floor finish plate.

HINT:

Tape the screwdriver tip before use.

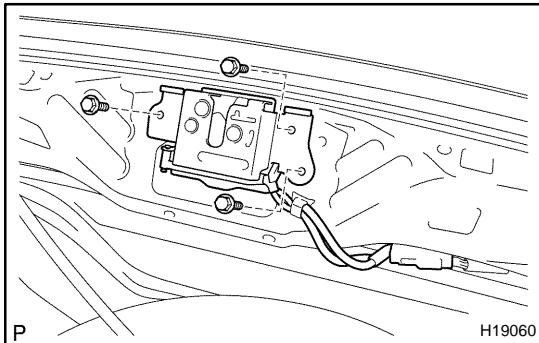


8. REMOVE BACK DOOR LOCK ASSEMBLY

Remove the 3 bolts and the back door lock assembly, then disconnect the connector.

9. REMOVE LICENSE PLATE LAMPS

Remove the license plate lamps, then disconnect the connectors.

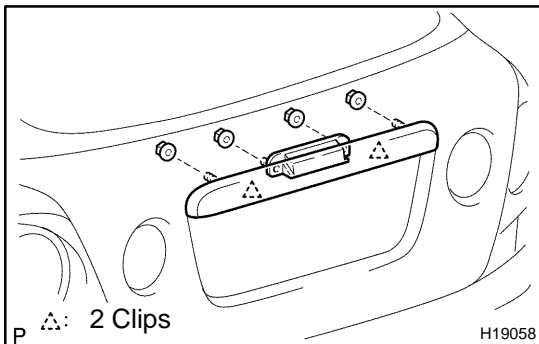

10. REMOVE BACK DOOR OUTSIDE GARNISH


- Remove the 4 nuts and back door outside garnish.
- Using a screwdriver, remove the back door outside garnish.

HINT:

Tape the screwdriver tip before use.

11. REMOVE BACK DOOR OUTSIDE HANDLE

Remove the 2 bolts and back door outside handle, then disconnect the connector.

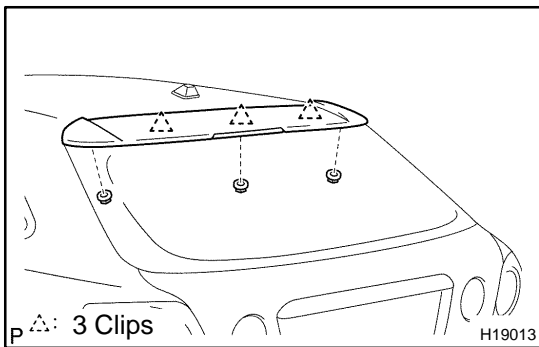

12. REMOVE REAR SPOILER COVER

- Remove the 3 nuts.
- Using a screwdriver, remove the rear spoiler cover, then disconnect the connector.

HINT:

Tape the screwdriver tip before use.

13. REMOVE STOP CENTER LAMP ASSEMBLY

Remove the 2 screws and the stop center lamp assembly.