


ADJUSTMENT

1. ADJUST DOOR IN LEFT/RIGHT AND VERTICAL DIRECTIONS

Adjust the door by loosening the door side hinge bolts.

Torque: 15 N·m (153 kgf·cm, 11 ft·lbf)

2. ADJUST DOOR IN FORWARD/ REARWARD AND VERTICAL DIRECTIONS

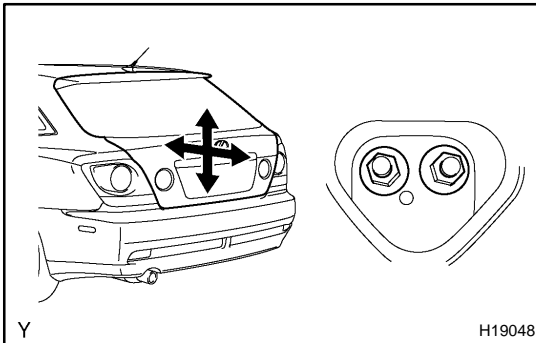


(a) Pull down rear part of roof headlining.

(See page [BO-164](#))

(b) Adjust the door by loosening the body side hinge nuts.

Torque: 11.5 N·m (117 kgf·cm, 8 ft·lbf)

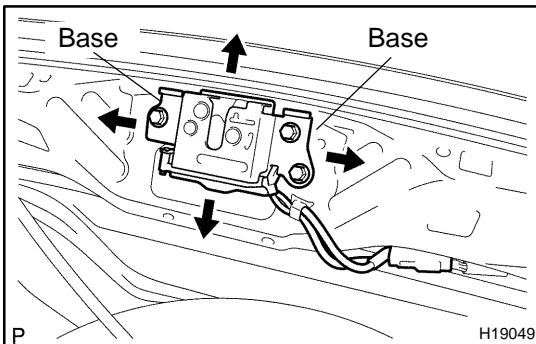

3. ADJUST BACK DOOR LOCK ASSEMBLY

(a) Check that the door fit and door linkage are adjusted correctly.

(b) Adjust the back door lock assembly by loosening the back door lock bolts.

Torque: 12.5 N·m (128 kgf·cm, 9 ft·lbf)

(c) Using a plastic hammer, tap the back door lock assembly to adjust.

NOTICE:

Tap the base for adjustment.

4. ADJUST SIDE MALE STOPPER

Adjust the side male stopper by loosening the stopper mounting bolt.

