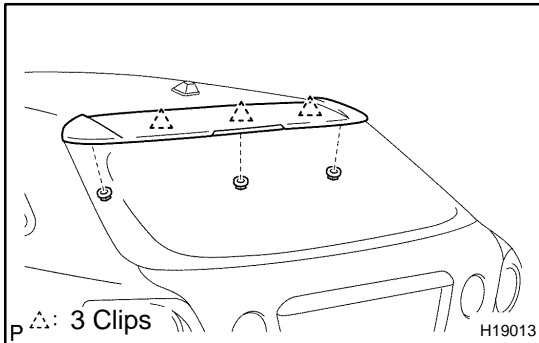


REASSEMBLY

1. INSTALL STOP CENTER LAMP ASSEMBLY

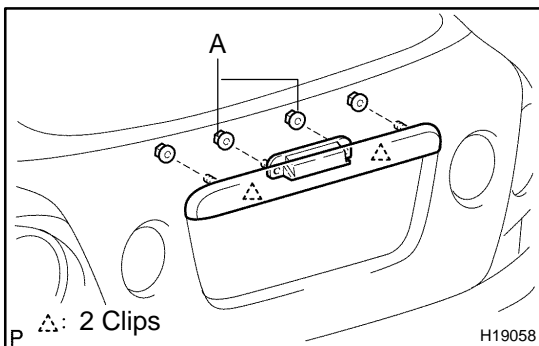


2. INSTALL REAR SPOILER COVER

Install the rear spoiler cover with the 3 nuts.

3. INSTALL BACK DOOR OUTSIDE HANDLE

- (a) Connect the connector.
- (b) Install the back door outside handle with the 2 bolts.



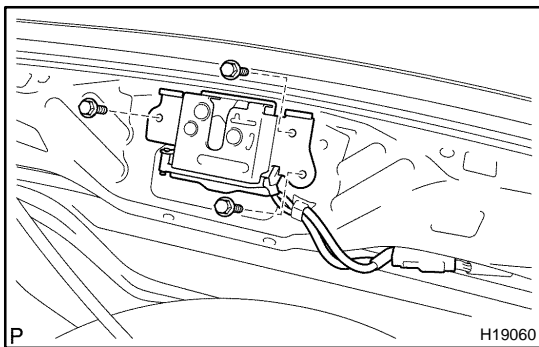
4. INSTALL BACK DOOR OUTSIDE GARNISH

Install the back door outside garnish with the 4 nuts.

Torque:

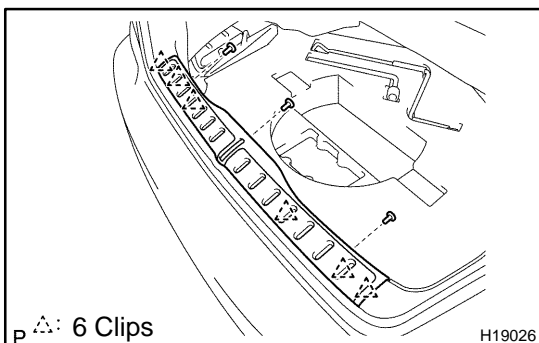
A: 4.0 N·m (40 kgf·cm, 35 in·lbf)

5. INSTALL LICENSE PLATE LAMPS



6. INSTALL BACK DOOR LOCK ASSEMBLY

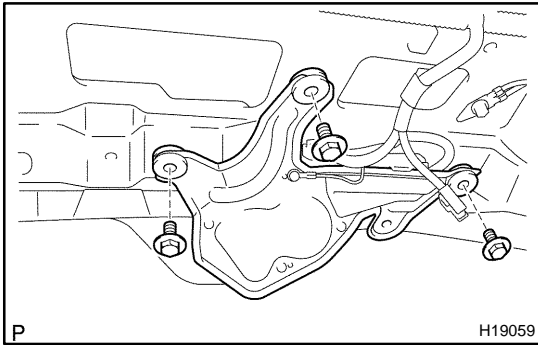
- (a) Install the back door lock assembly with the 3 bolts .
- Torque: 12.5 N·m (128 kgf·cm, 9 ft·lbf)**
- (b) Connect the connector.



7. INSTALL REAR FLOOR FINISH PLATE

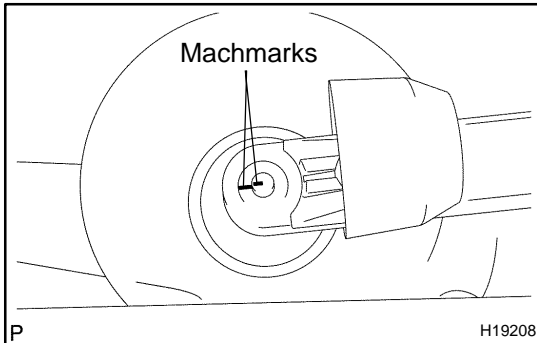
- (a) Install the rear floor finish plate with the 3 clips.
- (b) Install the 2 rope hook assemblies with the 2 bolts.

8. INSTALL REAR COMBINATION LIGHTS

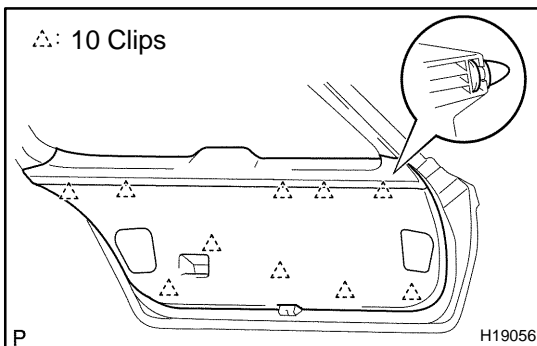
**9. INSTALL REAR WIPER MOTOR**

- (a) Install the rear wiper motor with the 3 bolts.
Torque: 5.5 N·m (56 kgf·cm, 49 in.-lbf)
- (b) Connect the connector.
- (c) Install the nut and washer on the outer side of the back door panel.

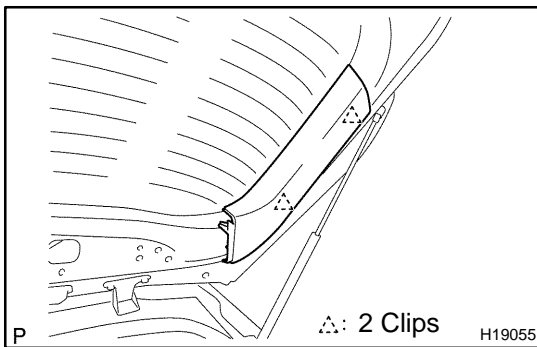
Torque: 12 N·m (122 kgf·cm, 9 ft-lbf)

**10. INSTALL REAR WIPER ARM**

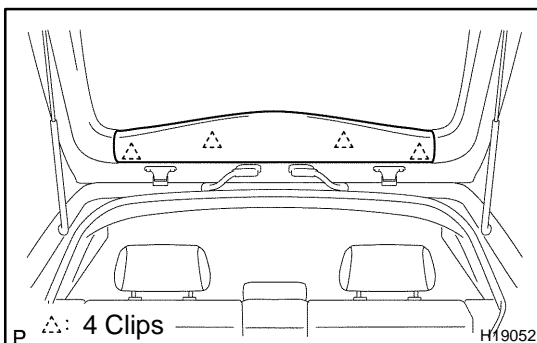
- (a) Install the wiper arm and tighten the nut by hand. Operate the wiper once and turn the wiper switch OFF.
- (b) Align the machmarks on the wiper arm and wiper motor.
- (c) Install the rear wiper arm with the nut.
Torque: 5.5 N·m (56 kgf·cm, 49 in.-lbf)
- (d) Close the wiper arm cover.

**11. INSTALL BACK DOOR TRIM BOARD**

- (a) Install the back door trim board to the back door panel.
- (b) Install the back door handle with the clip.

**12. INSTALL BACK DOOR TRIM COVERS**

Install the back door trim cover to the body.

**13. INSTALL BACK DOOR TRIM BOARD UPPER**

Install the back door trim board upper to the body.