

REMOVAL

1. REMOVE DOOR INSIDE HANDLE BEZEL


Using a screwdriver, remove the door inside handle bezel.

HINT:

Tape the screwdriver tip before use.

2. REMOVE LUGGAGE COMPARTMENT DOOR TRIM

- Remove the 2 screws and luggage compartment door assist grip.
- Remove the 14 clips and luggage compartment door trim.

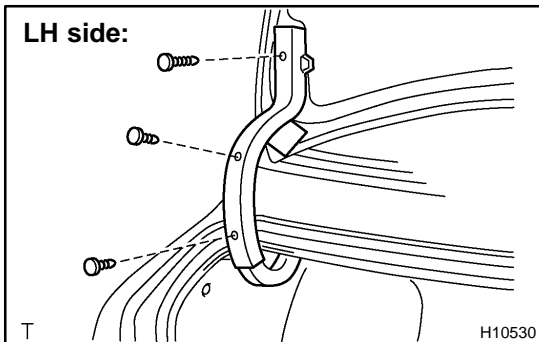

3. REMOVE LUGGAGE COMPARTMENT DOOR HINGE COVERS


- Remove the 3 clips.
- Open the cover and remove the hinge cover.
- Employ the same manner described above to the other side.

4. REMOVE LUGGAGE COMPARTMENT DOOR

- Disconnect the connector.
- Disengage the clamps.
- Remove the 4 bolts and door.

Torque: 8.0 N·m (82 kgf·cm, 72 in.-lbf)

5. REMOVE LUGGAGE COMPARTMENT TRIM NO.2 COVER

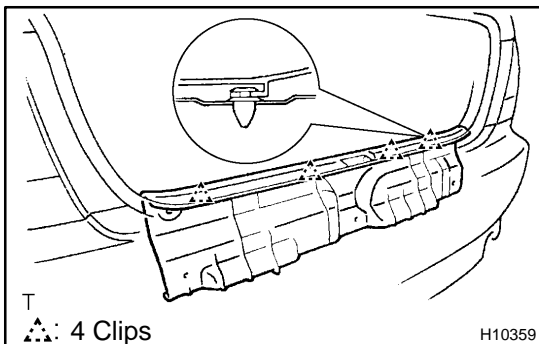


6. REMOVE LUGGAGE COMPARTMENT TRIM REAR COVER

- Using a clip remover, remove the 5 clips.
- Using a screwdriver, remove the luggage compartment trim rear cover.

HINT:

Tape the screwdriver tip before use.

7. REMOVE LUGGAGE COMPARTMENT FLOOR HOOKS

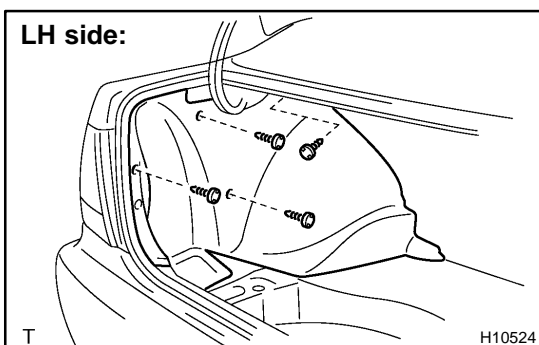


8. REMOVE LUGGAGE COMPARTMENT TRIM SIDE COVER LH AND RH

- Remove the 4 clips and luggage compartment trim side cover.
- Employ the same manner described above to the other side.


9. REMOVE LUGGAGE COMPARTMENT FLOOR MAT

Remove the 3 clips and luggage compartment floor mat.

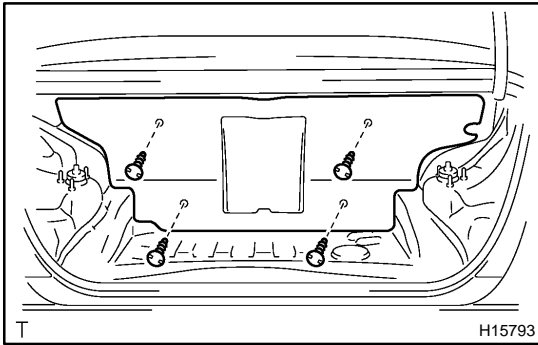


10. REMOVE LUGGAGE COMPARTMENT TRIM FRONT COVER

Remove the 4 clips and luggage compartment trim front cover.

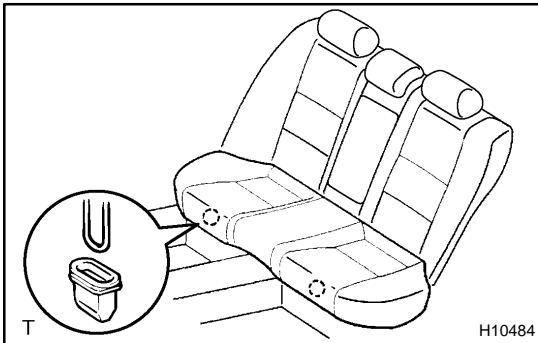


11. REMOVE REAR SEAT CUSHION

Pull up the front portion of the seat cushion, then remove it.

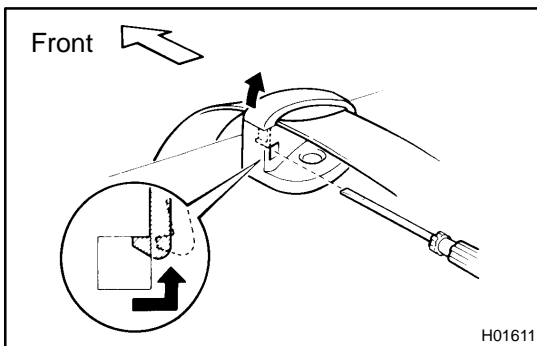

12. REMOVE REAR SEATBACK

- Using a screwdriver, remove the rear seat belt from the belt guide as shown in the illustration.
- Employ the same manner described above to the other side.

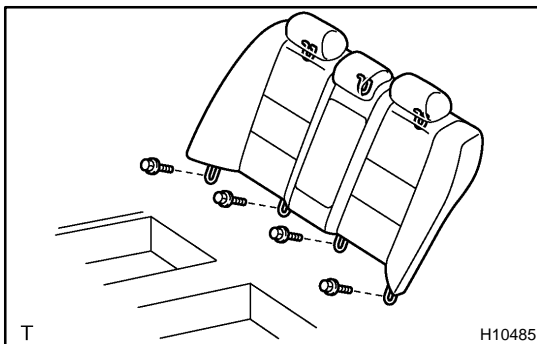


- Remove the 4 bolts.

Torque: 18 N·m (184 kgf-cm, 13ft-lbf)

- Pull up the seatback to remove it.


NOTICE:

Be careful not to damage the body.

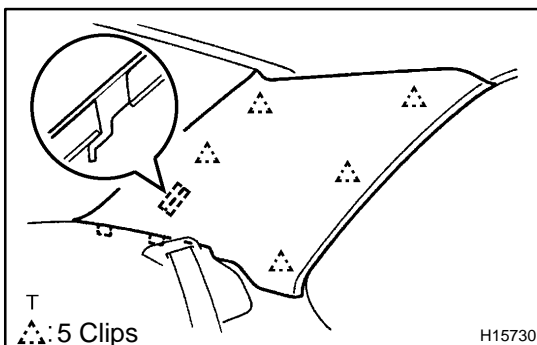


13. REMOVE ROOF SIDE INNER GARNISH

- Using a screwdriver, remove the roof side inner garnish.
- Employ the same manner described above to the other side.

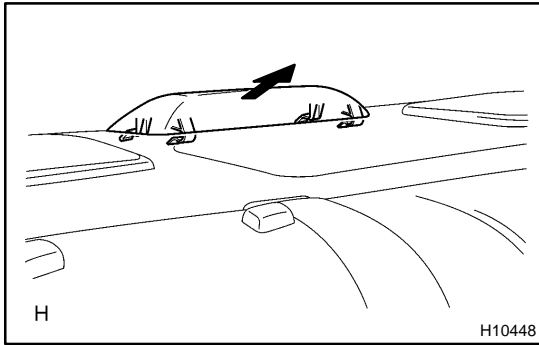**14. REMOVE HIGH-MOUNTED STOP LIGHT**


- (a) Remove the high-mounted stop light as shown in the illustration.
- (b) Disconnect the connector.

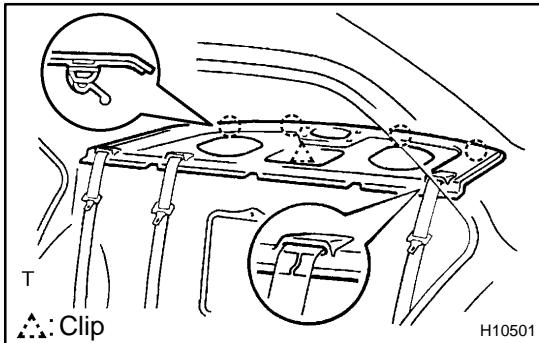**15. REMOVE PACKAGE TRAY TRIM PANEL**


- (a) Pull the package tray trim panel upward to disengage the clips.
- (b) Remove the rear seat outer belts through the cutout on the package tray trim panel.
- (c) Pull the package tray trim panel forward to remove it.

16. REMOVE ROOM PARTITION TRIM PAD


Remove the 2 clips and room partition trim pad.

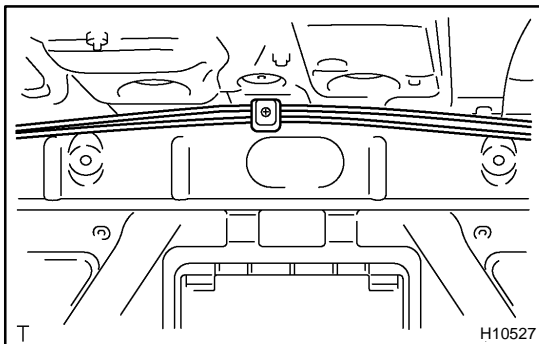**17. REMOVE TORSION BAR**


- (a) Remove the torsion bars from the center bracket.

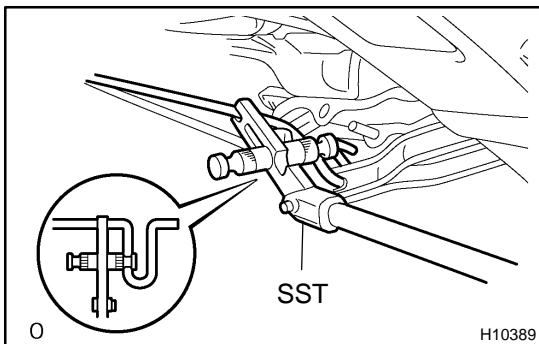

- (b) Install SST to the torsion bar on the hinge side.
SST 09804-24010

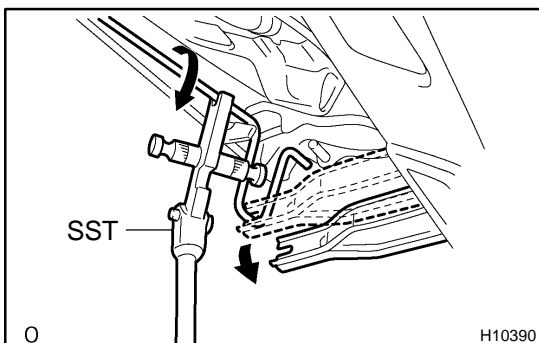

- (c) Push down SST to pull the luggage compartment door hinge from the torsion bar.
- (d) Slowly lift SST, and remove the torsion bar from the torsion bar bracket with SST.

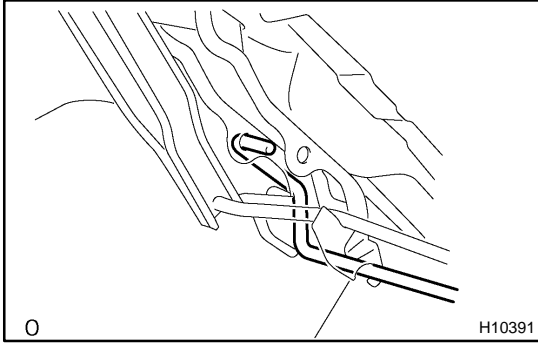

- (e) Disconnect the torsion bar from the bracket.
- (f) Employ the same manner described above to the other side.

HINT:


Check the color of marks on the torsion bar when replacing or installing the torsion bar.

w/o Rear spoiler:

Side	Color
RH	Yellow
LH	Pink

w/ Rear spoiler:

Side	Color
RH	Green
LH	Orange

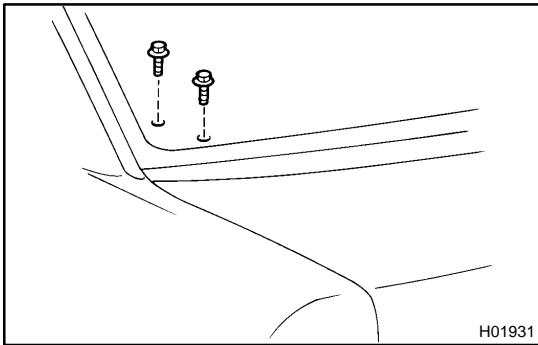

18. REMOVE LUGGAGE COMPARTMENT DOOR HINGE

- (a) Remove the 2 bolts.
 - (b) Remove the hinge.
- Torque: 5.5 N·m (56 kgf·cm, 49 in.-lbf)**
- (c) Employ the same manner described above to the other side.