


DISASSEMBLY

1. REMOVE REAR LIGHT

- Remove the nut.
- Disengage the clip.
- Disconnect the connector, then remove the rear light.
- Employ the same manner described above to the other side.

2. REMOVE LUGGAGE COMPARTMENT DOOR OUTER GARNISH


- Disconnect the cable and link from the key cylinder.

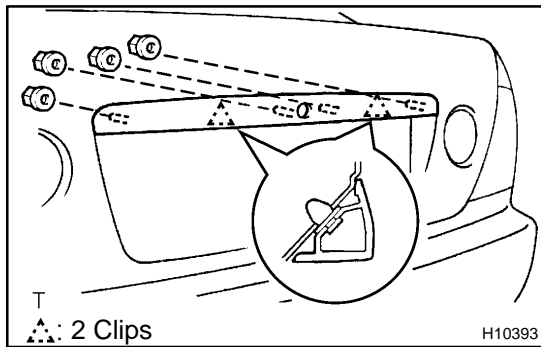

- Remove the 4 nuts and key cylinder.
- Using a screwdriver, remove the luggage compartment door outer garnish.

HINT:

Tape the screwdriver tip before use.

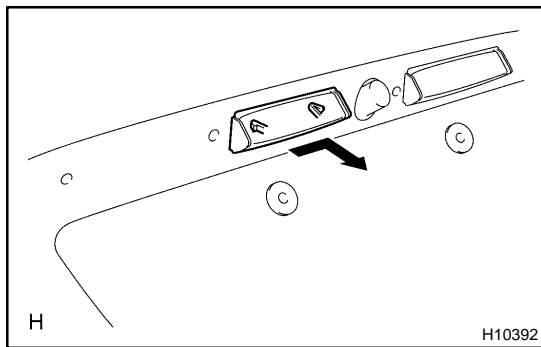

3. REMOVE LICENCE PLATE LIGHT

- Disconnect the connector.
- Remove the licence plate light as shown in the illustration.
- Employ the same manner described above to the other side.

4. REMOVE LUGGAGE DOOR LOCK OPENER ASSEMBLY

- Disconnect the link.
- Remove the screw and luggage door lock opener assembly.

5. REMOVE LUGGAGE COMPARTMENT DOOR LOCK

- Disconnect the connector.
 - Remove the 2 bolts and luggage compartment door lock.
- Torque: 5.5 N·m (56 kgf·cm, 49 in.-lbf)**

