


REMOVAL

HINT:

A bolt without a torque specification is shown in the standard bolt chart. (see page [SS-2](#))

1. REMOVE LUGGAGE COMPARTMENT TRIM NO.2 COVER

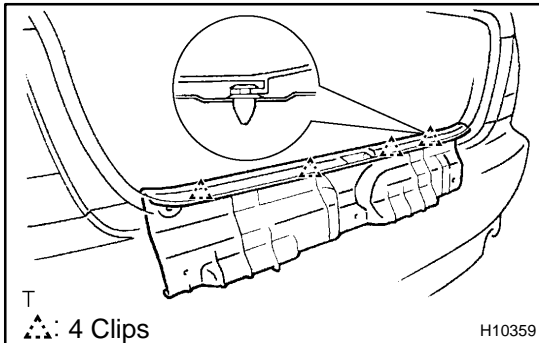


2. REMOVE LUGGAGE COMPARTMENT TRIM REAR COVER

- Using a clip remover, remove the 5 clips.
- Using a screw driver, remove the luggage compartment trim rear cover.

HINT:


Tape the screwdriver tip before use.

3. REMOVE LUGGAGE COMPARTMENT FLOOR HOOKS

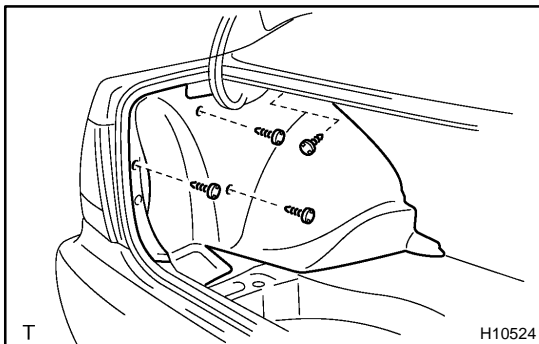


4. REMOVE LUGGAGE COMPARTMENT TRIM SIDE COVER LH

Remove the 4 clips and luggage compartment trim side cover LH.

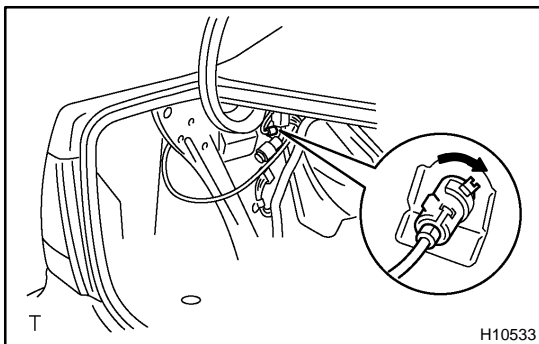


5. REMOVE FUEL LID LOCK CONTROL

- Rotate the fuel lid lock right to disengage the lock, then pull it out.

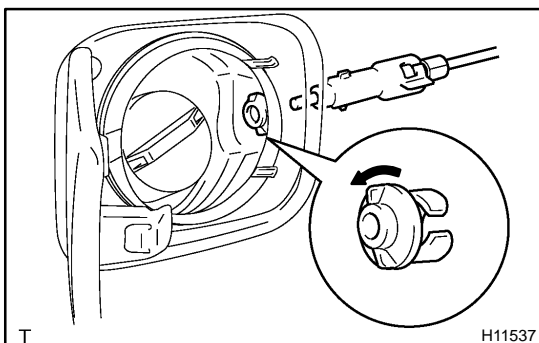

- Rotate the retainer left to disengage the lock, then pull it out.

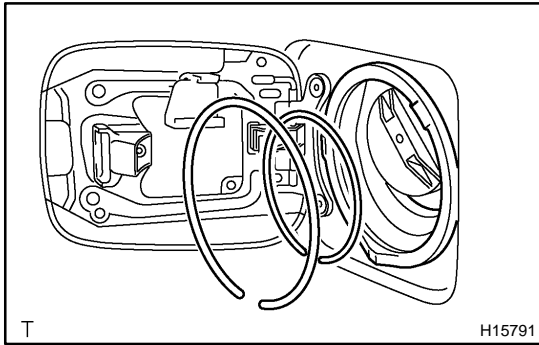


6. REMOVE FUEL FILLER SHIELD

- Remove the 2 rings from the fuel filler shield.
- Remove the fuel tank cap and shield.

CAUTION:

Always keep the tank cap closed when it is not required to be open. Keep open fire away during the operation.

- Install the fuel tank cap quickly.

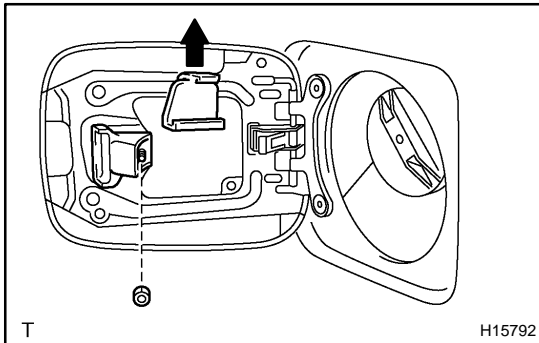


7. REMOVE FUEL TANK CAP HANGER

Pull up the fuel tank cap hanger to remove it.

8. REMOVE FUEL FILLER OPENING LID LOCK RETAINER

Remove the nut and fuel filler opening lid lock retainer.

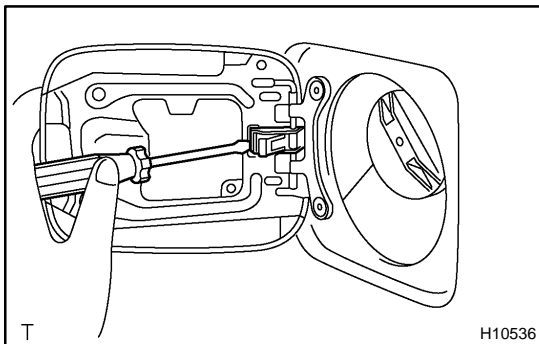


9. REMOVE FUEL LID OPENING SPRING

Insert a screwdriver between the spring and fuel filler opening lid to remove the spring as shown in the illustration.

HINT:

Tape the screwdriver tip before use.

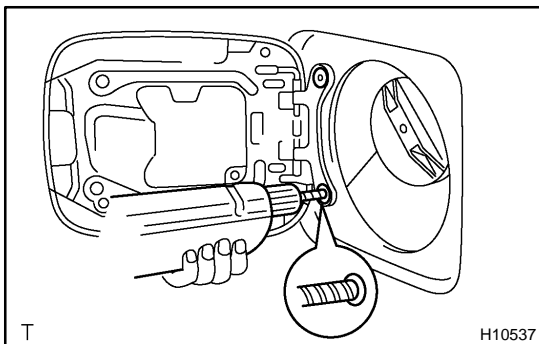

10. REMOVE FUEL FILLER OPENING LID

- Using a drill, drill out the rivet heads.
- Remove the fuel filler opening lid.