


## INSTALLATION


### 1. INSTALL FUEL FILLER OPENING LID

Using a riveter, install the fuel filler opening lid with the 2 rivets to the body.

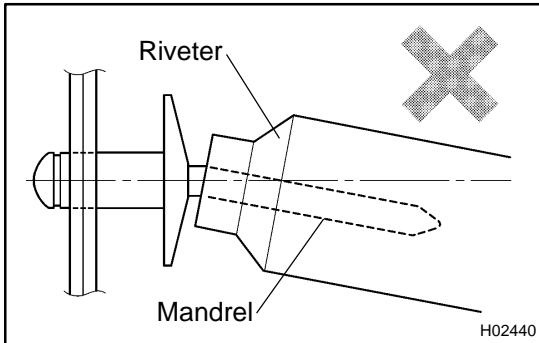


#### NOTICE:


- Do not prize a riveter. It could damage the riveter and cause loose fitting and mandrel bend.

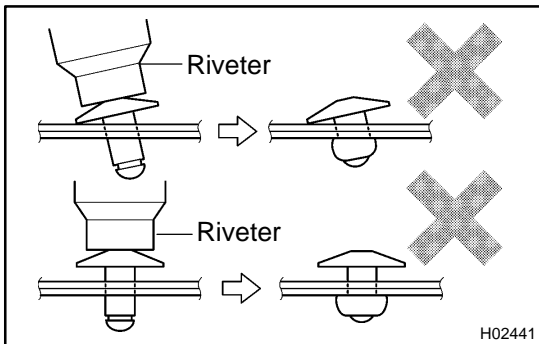

- Do not tilt the riveter when fastening the rivet to the material to avoid loose fitting.
- Do not allow gap spacing between the rivet head and the material.

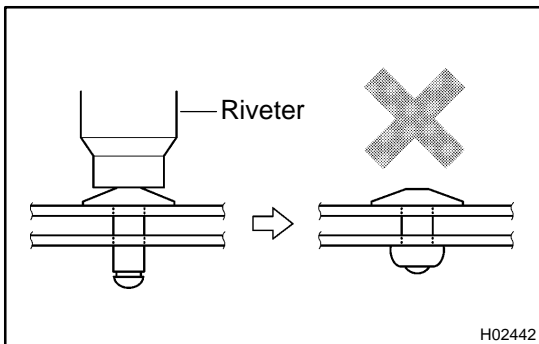


- Do not allow gap spacing between the materials.
- ### 2. INSTALL FUEL FILLER OPENING SPRING

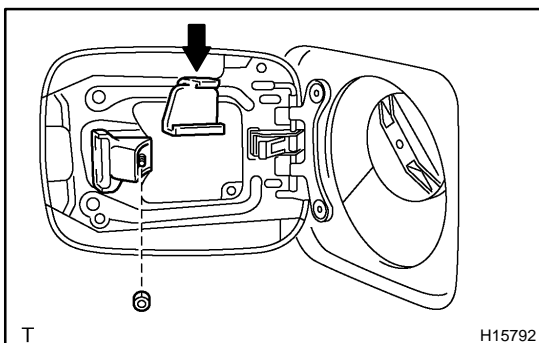

### 3. INSTALL FUEL FILLER OPENING LID LOCK RETAINER

Install the fuel filler opening lid lock retainer with the nut.

### 4. INSTALL FUEL TANK CAP HANGER

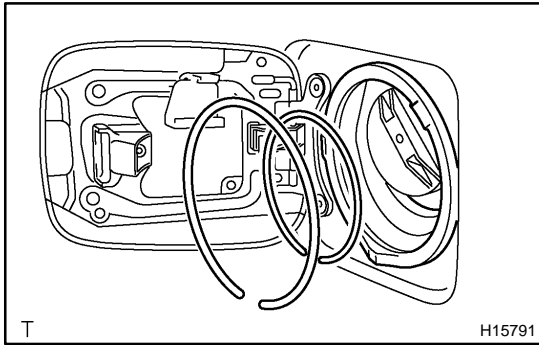


### 5. INSTALL FUEL FILLER SHIELD

- Remove the fuel tank cap.
- Install the fuel filler shield to the body.
- Install the fuel tank cap quickly.

#### CAUTION:


**Always keep the tank cap closed when it is not required to be open. Keep open fire away during the operation.**

- Install the 2 rings to the fuel filler shield as shown in the illustration.

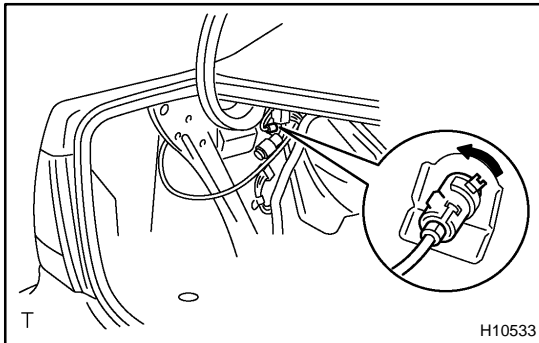


### 6. INSTALL FUEL LID LOCK CONTROL

- Install the retainer to the body from the outside of the vehicle and rotate it to the right to lock.

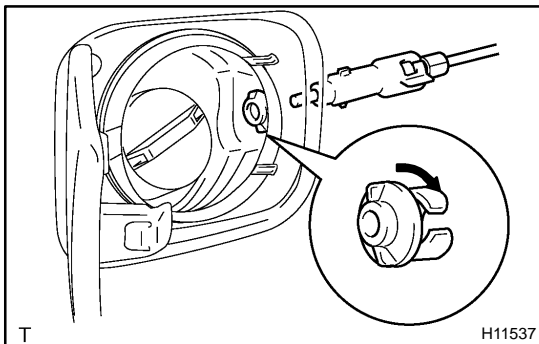


- Insert the fuel lid lock control to the retainer and rotate it to the left to lock.

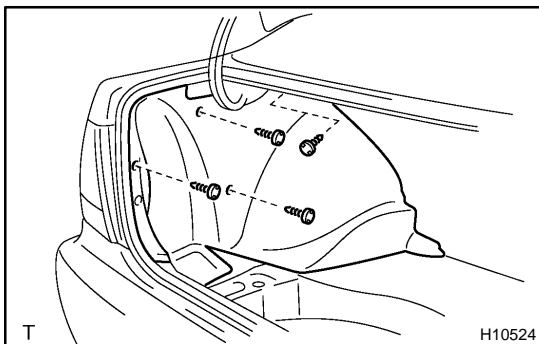

### 7. INSTALL LUGGAGE COMPARTMENT TRIM SIDE COVER LH

Install the luggage compartment trim side cover LH with the 3 clips.

### 8. INSTALL LUGGAGE COMPARTMENT FLOOR HOOKS

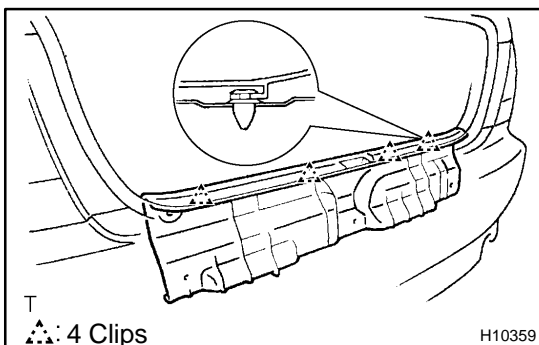

### 9. INSTALL LUGGAGE COMPARTMENT TRIM REAR COVER

Install the luggage compartment trim rear cover with the 5 clips.

### 10. INSTALL LUGGAGE COMPARTMENT TRIM NO.2 COVER