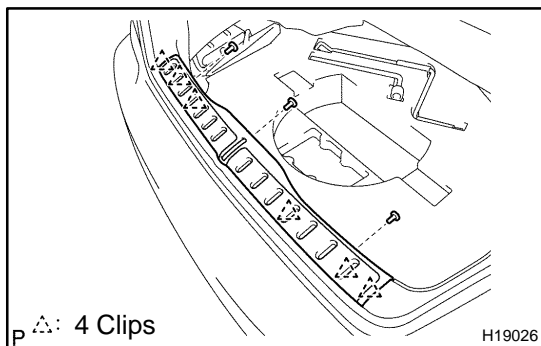


REMOVAL

HINT:

A bolt without a torque specification is shown in the standard bolt chart. (see page [SS-2](#))

1. **REMOVE REAR SEAT CUSHION** (See page [BO-204](#))
2. **REMOVE SIDE SEATBACK ASSEMBLY**
(See page [BO-204](#))
3. **REMOVE REAR SEAT FLOOR BOARD NO. 4**
 - (a) Remove the seat back board carpets.
 - (b) Remove the 2 bolts and rear floor board.
4. **REMOVE DECK FLOOR BOX FRONT**
 - (a) Remove the 2 bolts and the 2 rope hook assemblies.
 - (b) Remove the 2 bolts and 2 tether anchor brackets.
 - (c) Remove the restraint seat tether anchor cover.
 - (d) Remove the deck floor box.
5. **REMOVE DECK BOARD NO. 2**
6. **REMOVE REAR FLOOR BOARD NO. 2**
7. **REMOVE REAR FLOOR BOARD NO. 3**
8. **REMOVE TONNEAU COVER ASSEMBLY**

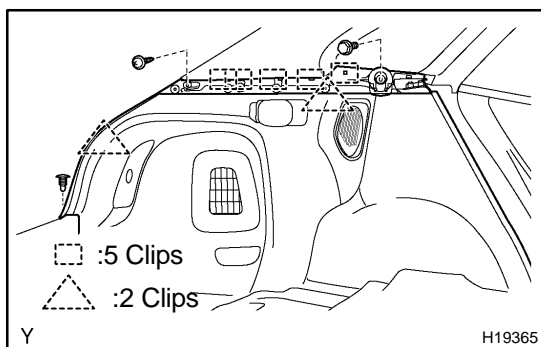


9. REMOVE REAR FLOOR FINISH PLATE

- (a) Remove the 2 bolts and the 2 rope hook assemblies.
- (b) Remove the 3 clips.
- (c) Using a screwdriver, remove the rear floor finish plate.

HINT:

Tape the screwdriver tip before use.

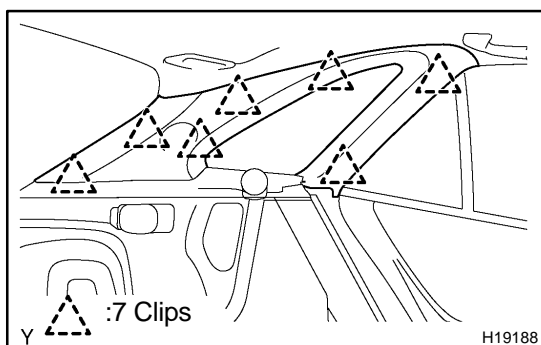


10. REMOVE DECK TRIM SIDE PANEL ASSEMBLY

- (a) Remove the 2 bolts and 2 floor hooks.
- (b) Remove the screw, bolt and clip.
- (c) Using a screwdriver, remove the deck trim side panel assembly, then disconnect the connector.

HINT:

Tape the screwdriver tip before use.

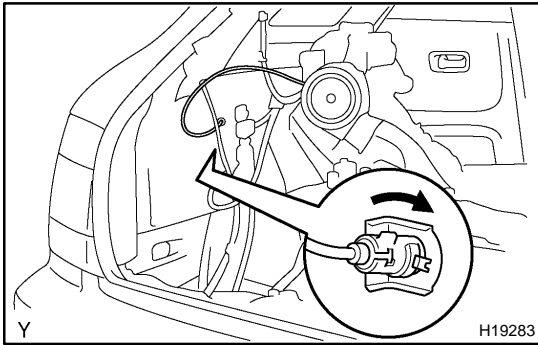


11. REMOVE ROOF SIDE INNER GARNISH

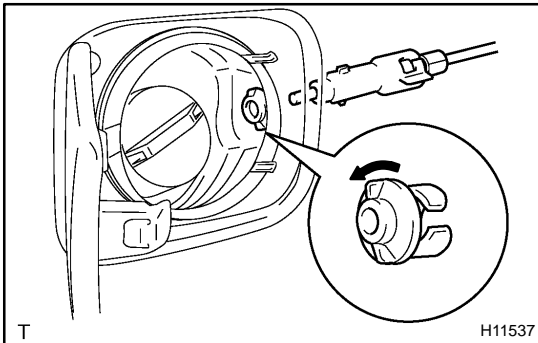
Using a screwdriver, remove the roof side inner garnish.

HINT:

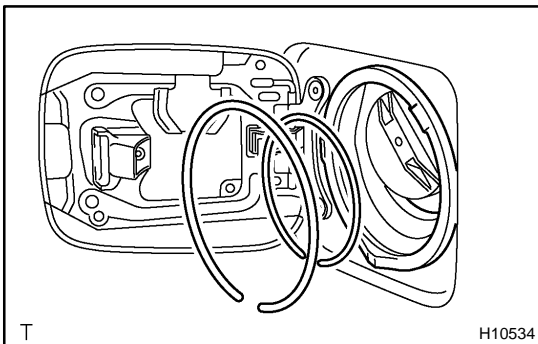
Tape the screwdriver tip before use.

**12. REMOVE FUEL LID LOCK CONTROL**

- (a) Rotate the fuel lid lock to the right to disengage the lock, then pull it out.



- (b) Rotate the retainer to the left to disengage the lock, then pull it out.

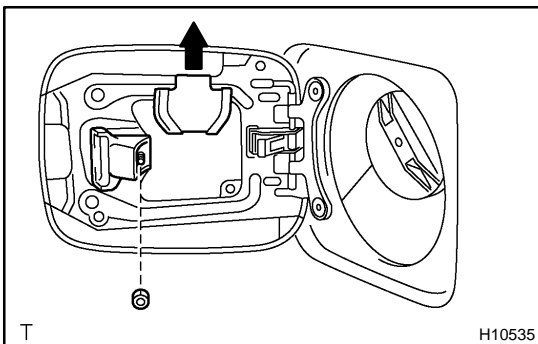
**13. REMOVE FUEL FILLER SHIELD**

- (a) Remove the 2 rings from the fuel filler shield.
(b) Remove the fuel tank cap and shield.

CAUTION:

Always keep the tank cap closed when it is not required to be open. Keep open fire away during the operation.

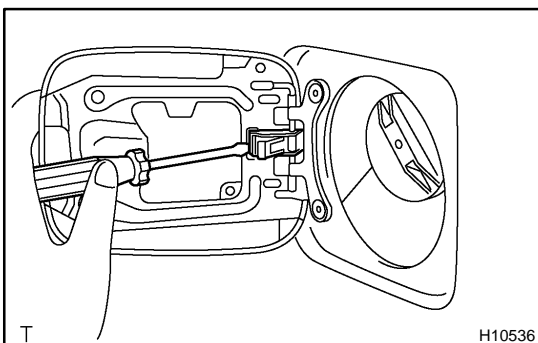
- (c) Install the fuel tank cap quickly.

**14. REMOVE FUEL TANK CAP HANGER**

Pull up the fuel tank cap hanger to remove it.

15. REMOVE FUEL FILLER OPENING LID LOCK RETAINER

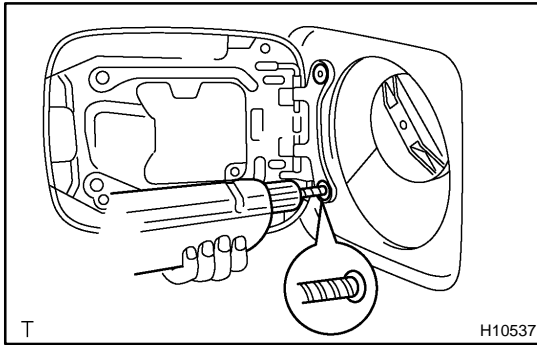
Remove the nut and fuel filler opening lid lock retainer.

**16. REMOVE FUEL LID OPENING SPRING**

Insert a screwdriver between the spring and fuel filler opening lid to remove the spring as shown in the illustration.

HINT:

Tape the screwdriver tip before use.

**17. REMOVE FUEL FILLER OPENING LID**

- (a) Using a drill, drill out the rivet heads.
- (b) Remove the fuel filler opening lid.