2 - 2.5 mm (0.08 - 0.098 in.) 0.6 - 0.65 mm (0.0236 - 0.0256 in.)

## ADJUSTMENT ADJUST WASHER NOZZLE

Using a tool like the one shown in the illustration, change the direction of the nozzle hole to adjust the point where washer fluid hits the windshield.

BO0V0-07