


REMOVAL

1. TAKE OUT FLUID WITH SYRINGE

NOTICE:

Do not let brake fluid remain on a painted surface. Wash it off immediately.

2. DISCONNECT BRAKE FLUID LEVEL SWITCH CONNECTOR

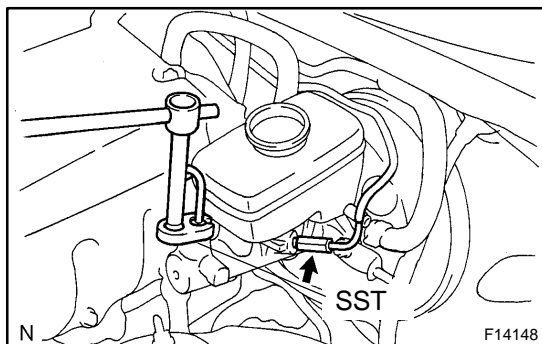


3. DISCONNECT BRAKE LINES

Using SST, disconnect the 2 brake lines.

SST 09023-00100

Torque: 15 N·m (155 kgf-cm, 11 ft-lbf)

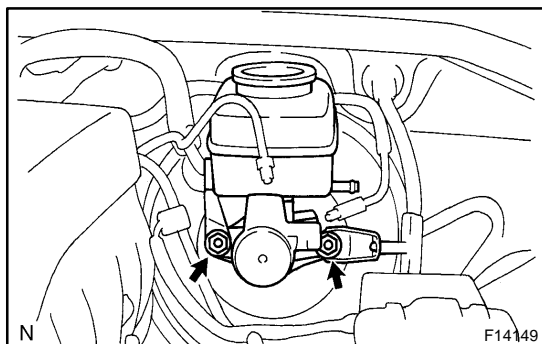

4. REMOVE MASTER CYLINDER

- (a) Disconnect the 2 brake hoses.
- (b) Remove the 2 nuts, and pull out the check valve bracket, brake hose clamp, master cylinder and gasket.

Torque: 13 N·m (130 kgf-cm, 9 ft-lbf)