



REMOVAL


1. **REMOVE FRONT LH WHEEL**
Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)
2. **REMOVE MASTER CYLINDER** (See page [BR-11](#))
3. **DISCONNECT VACUUM HOSE FROM BRAKE BOOSTER**

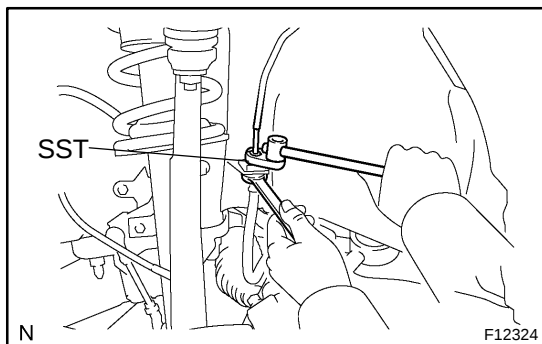


4. **DISCONNECT FRONT LH BRAKE LINE**
 - (a) Using SST and spanner, disconnect the brake line from the flexible hose of front LH brake.
SST 09023-00100
 - (b) Separate the grommet from body through the brake line.

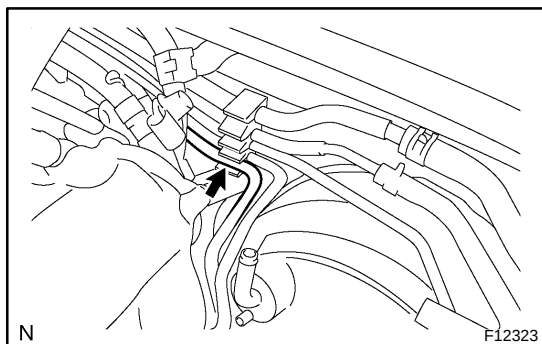


- (c) Disconnect the front LH brake line from the clamp.

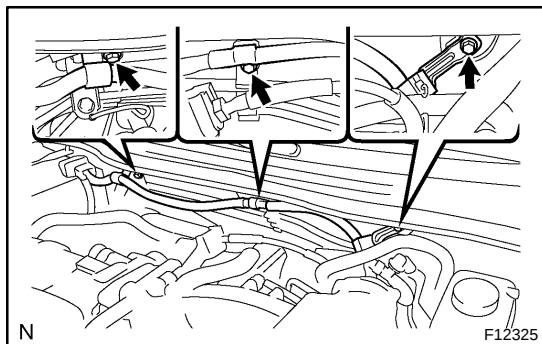

5. **REMOVE BRAKE BOOSTER**
 - (a) Remove the 3 bolts and disconnect the 3 clamps.
 - (b) Remove the lower finish panel (See page [BO-135](#)).
 - (c) Remove the return spring, clip and clevis pin.

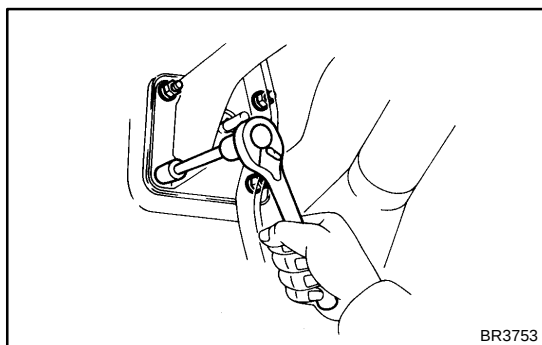

- (d) Remove the clevis and 4 nuts.

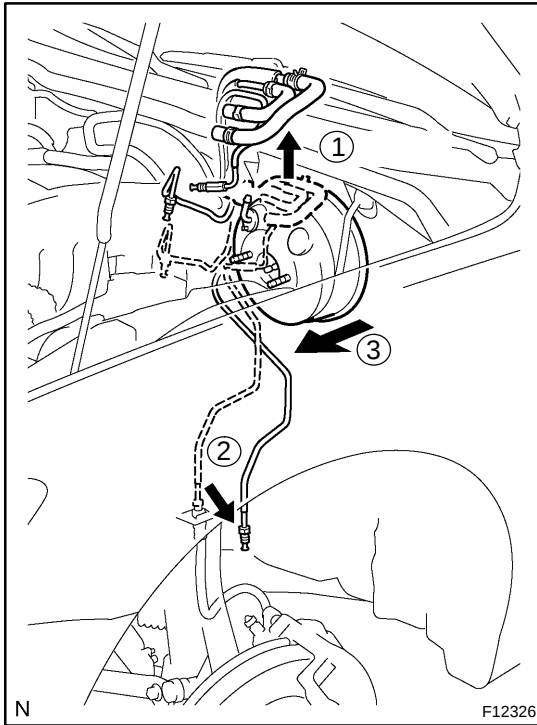

- (e) Move the brake line as illustrated and ensure sufficient space.
- (f) Pull out the booster and gasket.