



INSTALLATION

1. INSTALL BRAKE BOOSTER

- (a) Install a new gasket to the booster.
- (b) Install the booster.
- (c) Install and torque the booster installation nuts.
Torque: 13 N·m (130 kgf·cm, 9 ft·lbf)
- (d) Install the clevis to the operating rod.
- (e) Insert the clevis pin into the clevis and brake pedal, and install the clip to the clevis pin.
- (f) Install the pedal return spring.
- (g) Install the vacuum hose.

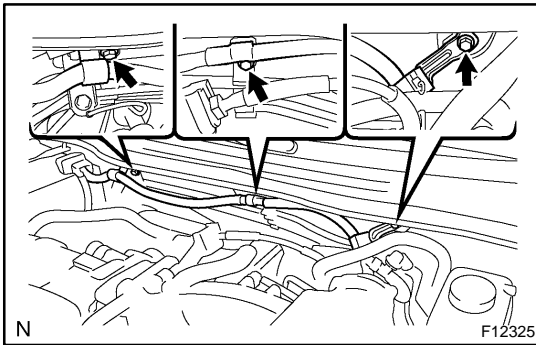


- (h) Install the 3 clamps with 3 bolts.
Torque: 4.9 N·m (50 kgf·cm, 43 in.-lbf)

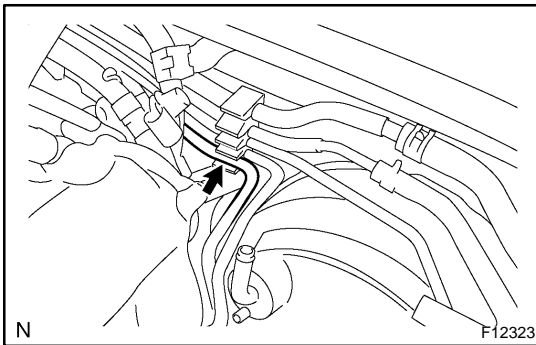


2. CONNECT FRONT LH BRAKE LINE

- (a) Connect the front LH brake line to the clamp.
- (b) Using SST and spanner, connect the brake line to the flexible hose of front LH brake.
SST 09023-00100
Torque: 15 N·m (155 kgf·cm, 11 ft·lbf)
- (c) Attach the grommet to body through the brake line.

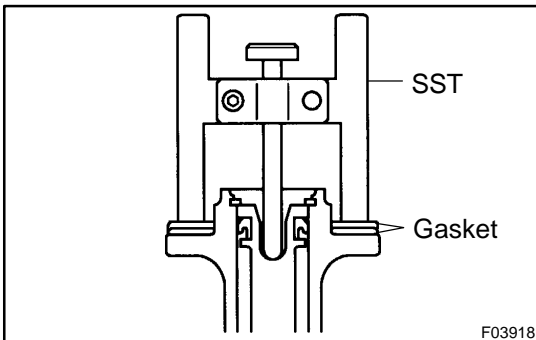

3. ADJUST LENGTH OF BOOSTER PUSH ROD

- (a) Install 2 new gaskets on the master cylinder.
- (b) Set the SST on the gasket, and lower the pin until its tip slightly touches the piston.
SST 09737-0001 1
- (c) Turn the SST upside down, and set it on the booster.
SST 09737-0001 1
- (d) Measure the clearance between the booster push rod and pin head (SST).
Clearance: 0 mm (0 in.)

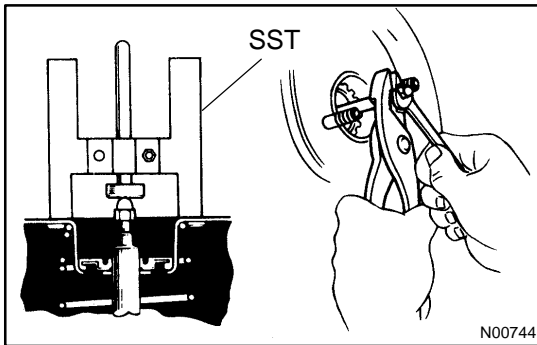

- (e) Adjust the booster push rod length until the push rod slightly touches the pin head.

HINT:

When adjusting the push rod, depress the brake pedal enough so that the push rod sticks out.

4. **INSTALL BRAKE MASTER CYLINDER**
(See page [BR-16](#))
5. **FILL BRAKE RESERVOIR WITH BRAKE FLUID AND BLEED BRAKE SYSTEM** (See page [BR-4](#))
6. **CHECK FOR FLUID LEAKAGE**
7. **CHECK AND ADJUST BRAKE PEDAL**
(See page [BR-6](#))
8. **INSTALL LOWER FINISH PANEL** (See page [BO-135](#))
9. **DO OPERATIONAL CHECK** (See page [BR-17](#))