


F01640

DISASSEMBLY

1. REMOVE SET RINGS AND BOOTS


Using a screwdriver, remove the 2 set rings and 2 boots.

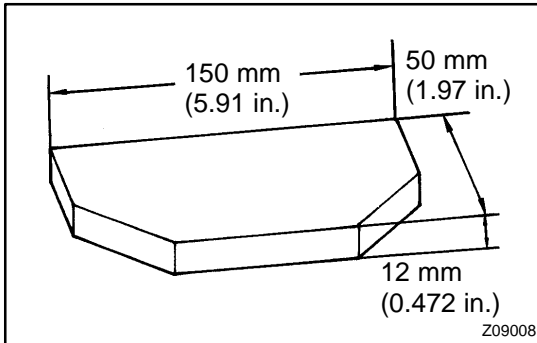

Z09008

2. REMOVE PISTONS FROM CYLINDER

(a) Prepare a wooden plate to hold the pistons.

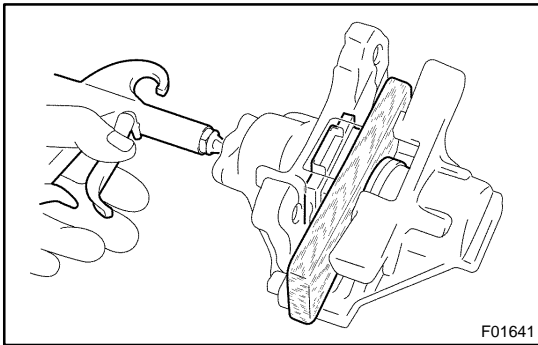


F01641

(b) Place the plate between the pistons and insert a pad on one side.

(c) Use compressed air to remove the pistons alternately from the caliper.

CAUTION:

Do not place your fingers in front of the piston when using compressed air.

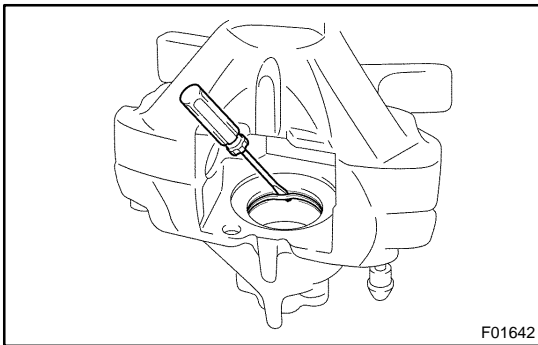

F01642

3. REMOVE PISTON SEALS

Using a screwdriver, remove the 2 piston seals from the caliper.