


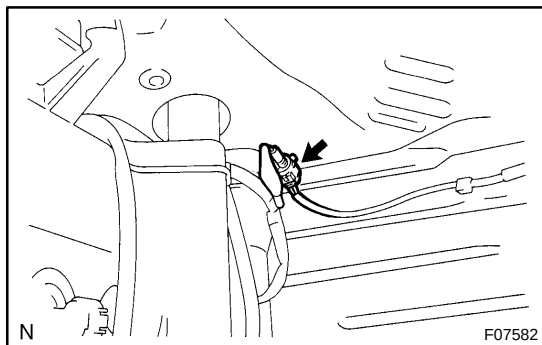


REMOVAL

1. REMOVE FRONT WHEEL

Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)

2. DISCONNECT SPEED SENSOR CONNECTOR

- (a) Remove the engine under cover and fender liner.
- (b) Disconnect the speed sensor connector.

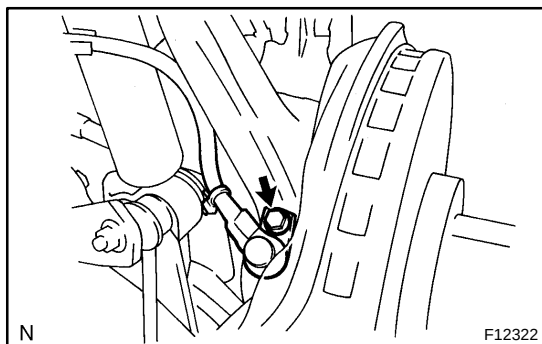

3. REMOVE SPEED SENSOR

- (a) LH side:
Disconnect the harness clamp.
- (b) Remove the resin clip and 2 clamp bolts holding the sensor harness to the body.
Torque: 5.0 N·m (51 kgf·cm, 44 in·lbf)
- (c) Remove the bolt and speed sensor from the steering knuckle.

Torque: 8.0 N·m (82 kgf·cm, 71 in·lbf)