


DISASSEMBLY

1. PULL OUT PUSH ROD WITH BOOT

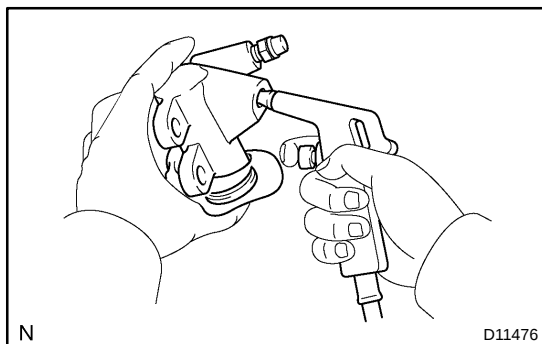

2. REMOVE PISTON WITH SPRING

Using compressed air, remove the piston and spring from the cylinder.

3. REMOVE BLEEDER PLUG AND CAP