


## REMOVAL

### 1. REMOVE TRANSMISSION FROM ENGINE

(See page [MT-5](#) )

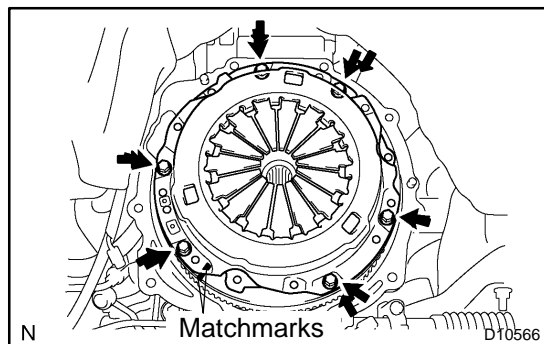


### 2. REMOVE CLUTCH COVER AND DISC

- Place matchmarks on the flywheel and clutch cover.
- Loosen each set bolt one turn at a time until spring tension is released.
- Remove the set bolts, and pull off the clutch cover with the clutch disc.

#### NOTICE:

**Do not drop the clutch disc.**

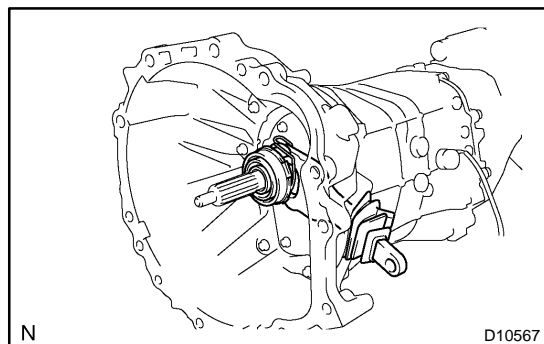

### 3. REMOVE BOOT, RELEASE BEARING AND FORK FROM TRANSMISSION

- Remove the boot from the transmission.
- Remove the release bearing together with the fork and then separate them.
- Remove the clip from the release bearing.